

X2-Engineering manual

Summary

This manual serves as engineering guideline for all Vector Controls products running the X2-operating system.

It explains how to configure and fine tune a controller or sensor. All X2 devices work in the same way. Availability features and number of functions are product dependent. All available features are listed on the datasheet of each product.

Each function is explained in detail. Some application examples give a direct how-to help to technicians working with X2 products.

X2-operating system

The X2-Operating system consists of a standardized method to operate and configure a range of controllers and sensors.

The system is built on pre-programmed control and function blocks which can be configured using a parameterization routine. All X2-type products use the same philosophy and can be configured using the same tools and methods.

All X2-type products can be configured using the standard operation terminals, the PC based tool EasySet™ from Vector Controls or remotely through bus communication where available. Data sets can be copied and stored using a memory plug-in called AEC-PM1 or AEC-PM2.

Differences between X2-devices

Location	Cabinet		Indoor	Indoor	Outdoor	Indoor
Mounting	Surface		Wall	Duct	Surface	Surface
Series	TCX2	TCI2	TRI2	SDC2	SOC2	SCC2
Copy tool	AEC-PM1	AEC-PM2	AEC-PM2	AEC-PM2	AEC-PM2	AEC-PM2
Inputs	NTC/mA/VDC or NTC+VDC	NTC/PT1000 /mA/VDC	NTC+VDC	NTC	NTC	NTC
Outputs	mA/VDC or VDC	mA/VDC	VDC	mA/VDC	mA/VDC	mA/VDC
Real Time Clock module included	TCX2-40863 TCX2-14050C	Complete range	Complete range	Not included, on request	Not included, on request	Not included on request
Processor based time clock	TCX2-23343 TCX2-24273					
# of time schedules	12	12	12	None		

Real time clock and processor-based time clock

Some X2 devices contain a real time clock. This real time clock is accurate to 2 seconds per day and contains a 48 hour rechargeable power backup. Thanks to this power backup, the time does not need to be re-entered if power is removed and returned within 48 hours.

The unit controllers for the TCX2 range contain a processor based time clock. This clock is accurate to about 2 Minutes per day. It thus needs to be synchronized every 24 hours by a time server. It is only recommended to use time functions with this device if time is in fact re-synced once a day.

Only the controller with a time base will have time schedules enabled. A time base can be a real time clock or a processor based time clock.

Understanding X2-product names

All X2 devices try to follow a logic in name. With this logic it is possible to determine type and number of in-, outputs, control loops and sensors involved.

The key for these series: TCI2, TRI2, SDC2, SOC, SCC2:

Series	Probe	Sensors	Configuration	Options	Communication	Connection
		Temperature Humidity CO2 VOC	Control Loop Passive In Analog In Relay Out TRIAC Out Analog Out Universal Clock & schedules	Operation Terminal	MODBUS BACnet MS/TP WI-FI	Cable blend Conduit connector
SDC2	16	T H C Q	2 1 0 . 1 0 2 U C	OP	MOD BAC WIFI	1 2

Following exceptions:

- only SDC2-devices have a probe
- TCI2-devices do not have Sensors

The key valid for TCX2-devices:

Series	Configuration	Options	Communication
	Control Loop Passive In Analog In Digital Out Analog Out Universal	Operation Terminal	MODBUS BACnet MS/TP WI-FI
TCX2	4 0 8 6 3 U	OP	MOD BAC WIFI

Parameter settings

Setting parameters to configure the controller

X2 devices are programmable devices with the flexibility to fit a wide range of applications. Their functionality and operation is defined by parameters. They can be set using the standard operation terminal. There are two levels:

1. **User/display parameters (default password 0009)**
2. **Control parameters (default password 0241)**

Parameters are grouped according to modules:

Not all X2-products contain the same amount and type of function blocks. The product documentation contains a list of the available number and type of functions for the particular product.

Module	Description	Level	PW
UP	User and display parameters	User	009
LP	Control loops	Engineering	241
UI	Input configuration		
AL	Alarm configuration		
FU	Special functions		
AO	Analog output configuration		
FAN	Fan output configuration		
DO	Digital output configuration		
Co	Communication setup (refer to separate communication brochure)		
COPY	copy mode to copy full parameter sets between run, default and external memory with up to 4 saving locations		

Recommended set-up procedure:

1. **Set jumpers on the back of the controller for inputs and outputs**
2. **Connect power supply and inputs**
3. **Make sure Celsius – Fahrenheit settings are correct (UP07)**
4. **Program input parameters**
5. **Program control parameters**
6. **Program output parameters**
7. **Program auxiliary functions and user settings**
8. **Test function of unit**
9. **Switch off power**
10. **Connect outputs**
11. **Reconnect power**
12. **Test control loop**

How to change parameters directly on the device

Parameters may be accessed through on board or remote operating terminals.

Note: Access to parameters may be inhibited by the supplier of the controller. In this case the below mentioned procedure will not work.

1. Press UP/DOWN buttons simultaneously for three seconds. The display will show firmware version and revision number. Press the OPTION button to start the login process.
2. CODE is shown in small display. Select 241 using the UP or DOWN button. This is the default password. In case it does not work the installer may have changed the password or blocked access to the parameters completely. The parameters should only be changed by authorized personnel.
3. Press OPTION after selecting the correct password. The user/display parameters are displayed immediately.
4. Once logged in with the correct password, the available parameter groups are displayed (UI, AL, LP, AO, FAN, DO, CO etc.) – select with UP/DOWN the desired group, press the OPTION button. Then select the ID with UP/DOWN buttons: (e.g. 1U, 2U, 3U etc.), press the OPTION button again to display the parameter available for this ID.
5. Select the parameters with the UP/DOWN buttons. Change a parameter by pressing the OPTION button. Three arrows are displayed to indicate that the parameter may be modified. Use UP/DOWN buttons to adjust the value.
6. After you are done, press OPTION to save the new value and return to the selection level (arrows disappear when selection is saved). Pressing left hand POWER button without pressing OPTION will discard the value and return without saving.
7. Press POWER to leave parameter selection and return to control module selection.
8. Press the POWER to leave the menu. The unit will return to normal operation, if no button is pressed for more than 5 minutes.

How to select active alarms on outputs and special functions or weekdays in time schedules.

1. Select the alarm parameter of an output or a special function as described above. For example 1d06 or 1d07.
2. Press OPTION to start selecting the alarms. AL 1 is now shown in the large digits.
3. Press UP to select the alarm 1, press DOWN to deselect the alarm 1. A selected alarm is visible on OPA2, TCX2, SDC2, SOC2 and TCI2 by a dark triangle on the bottom line of the LCD. For OPT1 and TRI2 the top line will indicate if the alarm is active or not only while AL1, AL2 is displayed on the large digits. The output or function will activate if the corresponding alarm is triggered.
4. Press OPTION to step to alarm 2. Repeatedly press the OPTION button to step through all available alarms and select or deselect them by pressing UP or DOWN.
5. Press POWER to leave the alarm selection routine and return to the parameter selection level.

Copying and restoring the entire parameter set

It is possible to backup and refresh the entire parameter set to a second onboard memory (default memory) or a plug-in memory. This simplifies substantially the programming of multiple controllers with identical parameter sets.

Removable plug-in memory AEC-PM1/AEC-PM2

The plug-in memory is an accessory that can be plugged into an X2 device. Location and type of memory:

Series	Type of memory	Location of plug
TCX2	AEC-PM1	Right side outside of housing
TCI2	AEC-PM2	Behind OP-plug
SDC2/SOC2	AEC-PM2	Lower right, inside of housing, cover must be opened to access
TRI2	AEC-PM2	On front of flush mounted part, LCD display must be removed to access. To initiate copy of data from TRI2 to AEC-PM2 an accessory called AEC-TRI is required.

The location and procedure on how to plug-in the external memory is defined in more detail in the installation manual of the individual product.

The memory can hold up to 4 individual parameter sets. It is easy for a site engineer to update a variety of standard installations or for an OEM to program his standard setup based on application in the modules.

Auto-load

While copying a configuration to eeprom, the user may choose the auto-load feature. With this feature set, the parameters load automatically when powering up the controller. It is thus possible for a non-technical person to perform a parameter update by simply powering up the controller with the memory plugged in.

Feedback LED and boot-button on AEC-PM1/PM2

Features	Power-LED	Data-LED	Boot button
AEC-PM1	Yes	Yes	No
AEC-PM2	No	Yes	Yes

Once connected, the power LED on the AEC-PM1 light up. AEC-PM2 does not have a power LED.

After a successful copy event the data-LED light up for 5 seconds and then switch off again.

The AEC-PM2 has a micro-button. Pressing this button will reboot the X2 device. If the AEC-PM2 is in auto load mode, it will load the configuration at reboot. The AEC-PM1 does not have this button. The TCX2 devices need to be rebooted by cycling power.

Procedure to copy parameter sets

1. Login to engineering parameters as described above.
2. Press UP or DOWN until COPY is selected
3. Press the OPTION key. Select copy source: These are the options:
 0. CLR ⇨ The copy destination will be erased
 1. RUN ⇨ Run time memory
 2. DFLT ⇨ Default: On board backup memory
 3. EEP1 ⇨ Folder 1 on memory plug-in
 4. EEP2 ⇨ Folder 2 on memory plug-in
 5. EEP3 ⇨ Folder 3 on memory plug-in
 6. EEP4 ⇨ Folder 4 on memory plug-in
4. Press OPTION key. Now select copy destination: These are the options:
 1. RUN ⇨ Run time memory
 2. DFLT ⇨ Default: On board backup memory
 3. EEP1 ⇨ Folder 1 on memory plug-in
 4. EEP2 ⇨ Folder 2 on memory plug-in
 5. EEP3 ⇨ Folder 3 on memory plug-in
 6. EEP4 ⇨ Folder 4 on memory plug-in
5. Press the OPTION button. Your selection is shown on the large digits: source ID to target ID. For example run time memory to eep1 is shown as 1to3. After confirming the selection, choose YES or AUTO to start the copy process. Select NO to abort. AUTO is only available if the target is the external plug in. By selecting AUTO: The parameters will load automatically when the controller is powered up or the button is pressed on AEC-PM2 while the memory is plugged in. If one plug-in has several parameter folders with the AUTO flag set the one only the one with the lowest index will be loaded. Usually this would be EEP1.

Automatic address increase: Selecting CO15 = 01 will write back an increased address to the AEC-PM2 after a successful copy. This way it is easier to configure large projects.

6. Press the OPTION key to conclude the selection. PEND is shown while the copy process takes place. There are several possibilities for the result:
 - Good: The copy process was successful. The data-LED on the plug-in will light up for 5 seconds.
 - Fail: Err5, Communication problem. The plug-in module is either damaged or missing
 - Fail: Err6, Checksum mismatch. The checksum of the source data was incorrect. Data corruption. This may happen if the plug-in has not been written to before or data corruption took place.

Reading/writing parameter sets with EasySet™ installed on a computer

Through a USB/RS485 converter it is possible to read and write parameter sets to a computer by the use of our PC based Software called EasySet. The EasySet tool may be downloaded from the vectorcontrols.com website.

To read/write parameters, install the EasySet™ program on your computer/Laptop and plug in the USB/RS485 converter to your computer. Connect the RS485 converter to the OP3 (+) and OP4 (-) terminal of the SDC2/SOC2 using a twisted pair wire. If an OPA2-VC is connected, you must first unplug it. In order to use EasySet, select the port of your USB converter first.

Parameter sets may now be read out from the X2 device to the PC and written back to the X2 device. This makes it possible to keep a parameter library on your computer, to exchange parameter sets through emails or keep a log file of all the projects completed.

User and display settings

Controlling end user access

X2 devices allow various ways to control end user and expert access.

Parameters UP00 to UP04 control access to operating modes, set points, manual control of fan speeds, heat cool changes and time settings.

Defining the operation mode after power up

The parameter UP05 controls in which state the device will be after a return of power.

0 will always start up the device in OFF mode

1 will always start up the device in ON mode

2 will use the last known state of the device before removal or power. This is as well the default setting.

Occupied / unoccupied mode

If parameter UP06 is set to ON occupied/unoccupied mode change is enabled. This has the following effect:

Pressing the power button for less than 2 seconds in normal mode will then toggle between the unoccupied/ occupied mode.

Occupied mode is visualized with the symbol of a person inside a house, unoccupied mode with the symbol of the person outside the house.

Each control loop will change the setpoint based on its setting, allowing for less energy consumption in the unoccupied mode. These options are to use a fixed unoccupied setpoint or shift the occupied setpoint down in heating or up in cooling mode.

Pressing the power button longer than 2 seconds will set the device to OFF mode.

If parameter UP06 is set to OFF, unoccupied mode is not enabled. Pressing the power button once will toggle ON and OFF mode. There is not house symbol on the LCD to indicate operation mode.

In OFF mode, OFF is written on the small digits of the display. The active inputs and the clock if active are displayed on the large digits in a continuous cycle. Each having a display time of 3 seconds.

Idle mode

Controlling what is shown on the display if no button is being pressed for more than 30 seconds.

Choose if setpoints, different in- or outputs or the clock is to be shown. To enable idle mode display set UP08 = ON.

If this parameter is off, the display will just stay in its last used position.

Using parameters UP09 – UP14, the contents of the small and large digits and the side bar may be chosen. With UP15 the controller heat/cool state may be shown during idle mode display.

Showing no current value in control loops

In normal operation while in control loop mode, the large digits show the current value of the controlled input, while the smaller digits show the acting setpoint of the control loop. Should the client wish to now see the current value, just set UP20 to ON. This will replace the current value on the large digits with the setpoint value. The small digits will then be not visible.

Fan-Coil mode

In case only one control loop is enabled, no outputs in manual mode and assigned to that control loop is one fan module, the device will automatically activate fan coil mode. In fan coil mode the right button will act as fan speed selector and the up/down buttons will change the temperature setpoint.

In case there is more than one loop or one output is in manual mode, the right button will work as selector button and fan or setpoints need to be changed using the up or down keys while their selection is active.

Celsius/Fahrenheit, 12h/24 h clock display

UP07 toggles Fahrenheit / Celsius settings. Note: changing this setting will affect all temperature related parameters.

While Fahrenheit is active, the setpoint step width is doubled. If in Celsius mode the step width is 0.5 it is 1.0 for Fahrenheit.

UP17 changes clock display from 12h to 24h mode. In 12 h mode month will be listed before the day while the clock display shows the date. In 24h mode day will be before month.

Daylight saving

The daylight-saving feature is activated by UP21 and uses the following scheme:

At the last Sunday morning 2:00 in March the clocks are advanced one hour to 3:00 for summer time. On the last Sunday morning in October they are put back at 3:00 to 2:00 for normal time.

Summer – Winter mode for setpoint limits

UP24 = on stands for winter mode and off for summer mode. This may be used for setpoint limits in control loops instead of defining those limits based on heating / cooling mode. This can be useful for 4-pipe systems where the limits are controlled by season and outdoor conditions not the current active sequence.

Control of backlight and blinking LED

With UP19 the backlight of a connected operation terminal may be constantly lit. Please observe that the quality of the temperature measurement may suffer with this feature activated for wall mounted operating terminals.

Some devices use a visible LED to indicate operation. This LED may be constantly turned on by setting UP23 to ON. This may be useful for networked controllers in order to identify a device mounted in a remote location.

Connecting one operation terminal to multiple controller

The operation terminal connection to a X2 device is basically a peer to peer connection of uninsulated RS485. It is therefore not really possible to have multi member communication network on this port. However, it is still possible to control multiple controllers with only one operation terminal. To do this one controller must be the master controller and connect all four conductors to the operation terminal. Additionally, it must have the no response parameter UP22 set to OFF.

As the connection is non-insulated, it is important that all controllers use a common ground. All slave controllers connect only the conductor OP3 and OP4 and have their UP22 parameter set to ON. These are now slave devices and they only listen to the operation terminal, without responding to it. They will execute all the commands but will not be able to display their output values or alarms on the screen of the terminal. Only the master device will achieve this.

In case no master device is active, the operation terminal will display a communication error.

In order to temporary communicate with single connected slave device, Press UP&DOWN key together while logged in parameter changing mode. The operation terminal can now again communicate with the slave device. This will cause unspecified results if multiple slave devices are connected.

UP Parameter reference PW 009

Parameter	Description	Range	Option
UP 00	Enable access to operation modes. This setting controls the power button	ON/OFF	ON
UP 01	Enable access to set points. This setting controls the UP / DOWN buttons	ON/OFF	ON
UP 02	Enable manual control in cascade and for fan speeds	ON/OFF	ON
UP 03	Enable change of heating/cooling mode. Controls if user is allowed to manually activate heating, cooling or fan only modes.	ON/OFF	ON
UP 04	Enable access to set clock or change time schedules:	ON/OFF	ON
UP 05	State after power failure: 0= off; 1= on; 2= state before power failure	0, 1, 2	2
UP 06	Enable unoccupied Mode	ON/OFF	OFF
UP 07	Celsius or Fahrenheit: ON= Fahrenheit, OFF= Celsius	ON/OFF	OFF (Celsius)
UP 08	Show idle display while no key is pressed for 30 seconds.	ON/OFF	ON
UP 09	Definition of idle display large digit: Select type of content (00= OFF):	0-6	1
	01 = Input 02 = Control loop setpoint 03 = Analog output 04 = Fan 05 = Digital output 06 = Clock		
UP 10	Definition of idle display large digit: Select content for large digits (0= OFF): This setting depends on UP09. Check your product data sheet for available options	0-10	1
	Input: 01 = UI01 02 = UI02 03 = UI03 04 = UI04 05 = UI05 06 = UI06 07 = UI07 08 = UI08 09 = UI09 10 = UI10 11 = UI11 12 = UI12 Set point: 1 = LP1 2 = LP2 3 = LP3 4 = LP4 Analog output: 1 = AO1 2 = AO2 3 = AO3 Fan: 1 = Fan 1 2 = Fan 2 Digital output: 1 = DO1 2 = DO2 3 = DO3 4 = DO4 5 = DO5 6 = DO6 7 = DO7		
UP 11	Definition of idle display small digits: Select type of content (same options as UP09)	0-6	2
UP 12	Definition of idle display small digits: Select content (same options as UP10)	0-10	1
UP 13	Definition of idle display vertical bar: Select type of content (same options as UP09)	0-6	3
UP 14	Definition of idle display vertical bar: Select content (same options as UP10)	0-10	1
UP 15	Show heating or cooling state while in idle display. OFF = Do not show, ON = Show	ON/OFF	ON
UP 16	OFF = Alarms display only while active, ON = Alarms display until confirmed,	ON/OFF	ON
UP 17	Clock display type (12/24): OFF= 24-hr ON= 12-hr (AM/PM)	ON/OFF	OFF(24hr)
UP 18	Reset timer for manual override in time schedule mode. 0 = Reset of override mode is not active. Time schedules overridden manually will be switched back to scheduled mode at next switching event. 1...255 = Delay for the controller to go back to the scheduled OFF or unoccupied operation mode if the operation mode is changed manually to occupied.	0-255 Min	60(Min)
UP 19	Constantly lit backlight for display: OFF = The backlight is only on when a key has been pressed ON = The backlight is constantly on	ON/OFF	OFF
UP 20	Do not show input value in loop display OFF = Input value is shown. Setpoint value is shown in the small digits. ON = Only setpoint is shown. Input value is not visible in the loop display.	ON/OFF	OFF
UP 21	Enable daylight savings mode. If enabled, internal real time clock will be advanced by one hour in summer and delayed one hour in winter. Daylight savings scheme is based on last Sunday of March for summertime and last Sunday of October for Winter time.	ON/OFF	OFF
UP 22	Slave mode: SDC2/SOC2 is in no-reply-mode for OPA2-VC communication OFF = SDC2/SOC2 is in normal mode for communication with OPA2-VC ON = SDC2/SOC2 is in no-reply-mode for communication with OPA2-VC	ON/OFF	OFF
UP 23	Wink function: the LED on top lights up constantly if ON OFF = LED has normal function ON = LED is constantly active	ON/OFF	OFF
UP 24	Summer / winter mode. Used for control loops, to select the corresponding setpoint limits. Set in xL28 OFF = Summer mode (cooling), ON = Winter mode (heating)	ON/OFF	OFF

Inputs

Input types

There are the following different input types for X2 devices:

- Sensor inputs: sensors that measure for example temperature, relative Humidity, CO2, Air quality.
- Universal1 inputs: Selectable with jumper for NTC, VDC, mA signals
- Universal2 inputs: Selectable with jumper for NTC, PT1000, VDC, mA signals
- Voltage inputs: VDC
- Passive inputs: NTC
- Virtual inputs

There are no digital inputs in the X2 system. Physical inputs are available as analog or passive inputs.

The X2 operating system uses the term universal inputs UI for its parameters. In order to distinguish the different input types a fixed order is implemented:

The first group of inputs are always the sensors, followed by the analog inputs. The virtual inputs are always at the end.

Available inputs for different X2 products

The number of inputs available for a device is defined in its product datasheet. Here is an overview:

	TCX2-40863	TCX2-23343	TCX2-24273	TCX2-14050	TCI2	SXC2-200	SXC2-210	TRI2
UI1	Universal1	NTC	NTC	NTC	Universal2	Sensor	Sensor	Sensor
UI2	Universal1	NTC	NTC	NTC	Universal2	Sensor	Sensor	Sensor
UI3	Universal1	NTC	NTC	NTC	Universal2	Sensor	Sensor	Sensor
UI4	Universal1	VDC	NTC	NTC	Universal2	Sensor	Sensor	NTC
UI5	Universal1	VDC	VDC	Virtual 1	Virtual 1	Sensor	Sensor	NTC
UI6	Universal1	VDC	VDC	Virtual 2	Virtual 2	Virtual 1	NTC	VDC
UI7	Universal1	Virtual 1	Virtual 1	Virtual 3	Virtual 3	Virtual 2	Virtual 1	Virtual 1
UI8	Universal1	Virtual 2	Virtual 2	Virtual 4	Virtual 4	Virtual 3	Virtual 2	Virtual 2
UI9	Virtual 1	Virtual 3	Virtual 3			Virtual 4	Virtual 3	Virtual 3
UI10	Virtual 2	Virtual 4	Virtual 4				Virtual 4	Virtual 4
UI11	Virtual 3							
UI12	Virtual 4							

Display range and display resolution

For each input the minimum and maximum display may be defined. For sensor inputs the range needs to be adjusted to the available range of that input. For a physical input it needs to match the sensors output range.

The selected range has an influence in the resolution of setting values of connected control loops:

Limiting the display range increases set point resolution. A range <25 provides set point steps of 0.1°C (0.2°F). A range <125 provides set point steps of 0.5°C (1°F). Larger ranges increase by 1.0 step. Square root input range (0xu3) has no influence.

Note: Fahrenheit and differential step widths are doubled

Averaging of measured values (low pass filter)

Filtering prevents unwanted fluctuation of sensor signals. The controller measures signal inputs every second and calculates the input signal based on a number of measured values and a digital low pass filter. Take into account that signal reaction delays as the number of samples taken for the filter increases.

Note: changing this value will as well change 06u8

Mathematical functions

The following is true for the mathematical function of each physical input or inputs from operation terminals and plug-ins. The special input functions of the virtual inputs use a different logic.

Calculate mathematical functions over multiple inputs for loop control or display with xxU7. In order to calculate average, minimum or maximum between several inputs, make sure all the inputs are of identical type and range and then activate the same function on xxU7 on all the selected inputs. The largest input of the group selected will carry the calculated value. For example: When average is activated on 02U7 and 01U7 = 1, the average is carried on universal input 2.

UI2 may now be used as input for control loops and it will show the average value of UI1 and UI2 combined.

It is possible to use different functions on different inputs. For example: minimum of UI1 and UI3 and maximum of UI2 and UI4.

- ➔ The differential function may only be calculated on subsequent inputs. Such as UI2-UI1. The function must only be activated on the minuend (a number from which another number is subtracted) – UI2 in this example. The displayed value of the minuend will change into the difference: UI2 in – UI1 = UI2 out. It is possible to have multiple differentials on one controller. It is not possible to reverse the subtraction: UI1-UI2.

Sensor inputs

These inputs are from sensors within the X2-device. These sensors measure temperature, relative humidity, CO₂, air quality or differential pressure. The sensor inputs directly measure a value and generate a signal in that value.

Assign a sensor to an input

A X2-device may contain a number of internal sensors. These sensors can be assigned to different inputs.

The available inputs for sensor signals may be found in the product data sheet and in this document in chapter: Available inputs for different X2 series.

To assign a sensor to an input just set the parameter under 0xu0 to the corresponding number of the sensor.

Now this input will carry the signal of that sensor. This is the sensor selection:

- 0 = not active
- 1 = Temperature
- 2 = Relative Humidity
- 3 = Temperature from RH sensor
- 4 = VOC TVOC (ppb)
- 5 = VOC CO₂ equivalent (ppm)
- 6 = CO₂ sensor (ppm)
- 7 = Differential pressure / air flow
- 8 = Temperature from differential pressure / air flow sensor

Reading intervals

Each sensor type has a different reading interval. The intervals are different in order to reduce internal communication. This has an influence on the low pass filter. The reaction time is thus increased proportionally to the interval time.

1 second reading interval: temperature and pressure

4 second interval: relative Humidity and temperature from RH sensor

8 second interval: VOC and CO₂ sensors

Multipliers and display ranges for sensors

The display range of a sensor may be reduced in order to increase resolution for setpoints and to match other inputs in case mathematical functions are used. See earlier chapters about this topic for further details.

Extending the range over the measuring range will not provide the correct results.

Note: Using multipliers for FW version 1.4 and earlier for non VOC or CO₂ sensors will provide incorrect results.

Special functions for CO₂ sensors

Self-correcting ABC algorithm (Automatic Baseline Correction) for CO₂ sensors

This algorithm constantly keeps track of the sensor's lowest reading over one week and slowly corrects for any long-term drift detected as compared to the expected fresh air value of 400ppm (or 0.04%vol) CO₂. The maximal correction amount is 30 ppm per week. An initial error will thus offset itself after a couple of weeks of constant run time.

ABC algorithm should only be enabled if the CO₂ level returns to 400 ppm or fresh air level at least once per week. For certain applications where this is not the case such as office rooms with 24/7 shift operation or animal farms, ABC must be disabled and the sensor should be manually calibrated every 2 years.

Manual calibration of CO₂ sensor (1u 00 = 6 only)

Rough handling and transportation might result in a reduction of sensor reading accuracy. With time, the ABC function will tune the readings back to the correct numbers. Manual calibration may be applied in the event that one cannot wait for the ABC algorithm to cure any calibration offset or if ABC is disabled.

There are two calibration options

01 u9 = 2 which requires that the sensor is exposed to fresh air (400 ppm CO₂)

01 u9 = 1 which requires the sensor measuring cell to be completely evacuated from CO₂ e.g. by exposing it to Nitrogen or Soda Lime CO₂ scrubbed air.

Calibration procedure:

1. Before changing 01 u9, expose the sensor element to either fresh air or nitrogen and make sure that the sensor environment is steady and calm.
2. Set 01 u9 = 1 or 2 for 0 ppm or 400 ppm calibration.
3. Press right and up buttons to change to 01 u8 to store the calibration setting.
4. Set 01 u9 = 3 to start the calibration stored.
5. Return to 01 u8 and wait for 5 seconds.

Check calibration status: If calibration was successful it is 01 u9 = 0. If calibration failed it is 01 u9 = 7.

Parameter reference for sensor inputs

Parameter	Description	Range	Option
01 u0	<p>For internal sensor inputs:</p> <p>0 = not active</p> <p>1 = Temperature interval: 1s</p> <p>2 = Relative Humidity interval: 4s</p> <p>3 = Temperature from RH sensor interval: 4s</p> <p>4 = VOC TVOC (ppb) interval: 8s</p> <p>5 = VOC CO2 equivalent (ppm) interval: 8s</p> <p>6 = CO2 sensor (ppm) interval: 8s</p> <p>7 = Differential pressure / air flow interval: 1s</p> <p>8 = Temperature from differential pressure / air flow sensor</p> <p>Note: all the signals only operate if the respective sensing element is installed.</p>	0-8	1
01 u1	Display minimum value.	-50-205	0
01 u2	Display maximum value.	-50-205	100
01 u3	<p>Range of universal inputs (For analog inputs only: 1u0 = 1,2):</p> <p>0 = x1 3 = Square root x1 only for pressure</p> <p>1 = x10 only for VOC/CO2 4 = not applicable</p> <p>2 = not applicable 5 = not applicable</p>	0 - 5	0
01 u4	Analog input unit: 0= no unit, 1= %, 2= °C /°F, 3= Pa	0-3	1
01 u5	Select number of samples taken for low pass filter	0-100	3
01 u6	Sensor calibration	Per input range	0.0
01 u7	<p>Calculate mathematical function over multiple inputs:</p> <p>0= off</p> <p>1= average,</p> <p>2= minimum,</p> <p>3= maximum,</p> <p>4= differential UI(n) – UI(n-1)</p>	0-4	0
01 u8	<p>For CO2 sensor (01 u0 = 6): ABC calibration:</p> <p>0 = ABC calibration active (default)</p> <p>1 = ABC calibration not active. Set to 1 if room is 24/7 occupied. ABC calibration requires that the CO2 concentration return to fresh air level at least once per week.</p>	0 - 1	0
01 u9	<p>For CO2 sensor (01 u0 = 6) Calibration routine</p> <p>0 = off</p> <p>1 = 0 ppm</p> <p>2 = 400 ppm (fresh air)</p> <p>3 = Calibration start</p> <p>7 = Read only. Shows after calibration if calibration fails (calibration error)</p>	0..7	0

Universal Inputs

These are the passive or analog inputs that can be connected to an X2 device. There is a hardware and software component to the sensor signals. The hardware part measures the signals. For universal inputs, the correct signal must be selected using jumpers. Analog or passive inputs may only deal with one type of input signal. To convert the measured value correctly the matching sensor input must be selected under the parameter Signal-Type.

Signal types

NTC:	NTC is always for resistive temperature sensors that have a negative temperature coefficient (NTC). The type used is 10kΩ@25°C (77°F) or (10kΩ Type II). This sensor is most accurate between 0...50°C (32...122°F). Specified accuracy can only be guaranteed using Vector Controls Sxx-Tn10 sensors. Range values described above also apply to temperature inputs. Note: NTC inputs may as well be used to detect open contacts or potentiometer inputs. (See below)
PT1000:	a resistive sensor with a positive temperature coefficient. PT1000 is standardized to measure 1000Ω @ 0°C (32°F). It has quite a linear curve and is thus more useful for large temperature ranges.
VDC:	Voltage signal 0...10 or 2...10 VDC selectable with the input type parameter.
mA:	The mA signal input accepts a current signal of 0...20mA. The input is not powered. An additional power supply is required to use 2 wire current sensor. Please check the wiring guide for the correct setup.
Universal1:	Selectable with jumper between NTC, VDC or mA signals.
Universal2:	Selectable with jumper between NTC, PT1000, VDC or mA signals

Square root calculations on input values

The input signal maybe subjected to the square root function prior to calculating the display values. The square root is calculated from the input signal and the result is again conditioned to 10bit resolution. The square root function is useful when airflow needs to be calculated from differential pressure, as in VAV systems for example.

Open contact as input type

For an open contact input set the jumper to RT/DI and parameter 06u0 to open contact (4 or 5). If set to 4 (open contact direct), an open contact reads as a high value (100%), a closed contact as a low value (0%). If set to 5 (open contact reversed), an open contact reads as low value (0%) and a closed contact as high value (100%). Note: sensor calibration does not work for digital inputs.

Potentiometer input

A potentiometer may be connected to a passive input to control the setpoint of a control loop. With the input display minimum and maximum values the range of the potentiometer can be defined in 100 ohms steps. For example setting the 06u1 to 50 and 06u2 to 120 represents a potentiometer from 5k to 12k Ohm. The resistance is measured and calculated into a 0-100% value. Based on the potentiometer input, the setpoint will now be moved between the upper and lower setpoint limits of the control loop. There are other uses for the potentiometer input. For example, the controller can be enabled and disabled remotely with a potentiometer using an input in potentiometer mode assigned to the Auxiliary Function Enable/Disable (1FU). Or use Alarm/Interlocks assigned to the potentiometer input to activate or deactivate outputs. With the potentiometer fully on, for example, another interlock could activate a boost mode. The potentiometer could then read OFF (65°F) to Full (85°F). Add one more wire connected to a 10k-2 resistor and measure the room temperature as well. Thus with 3 wires in total (potentiometer, common, room temperature) a well-functioning low cost operation terminal may be realized.

Light control mode: toggle and dimmer switch

Manage lighting with SDC2/SOC2 and special functions such as alarms, time schedules and automatic occupied/unoccupied mode switch can be used for occupant convenience and to reduce lighting costs. With this feature building light is controlled by using push-button switches in the room connected to passive inputs on SDC2/SOC2. A passive input is assigned directly to an output connected to a relay for the light. This is achieved by setting d01 to 9 and choosing the corresponding input with d09. Additional to this the on and off limits may be defined with d14/d15. Set d14 to 10% and d15 to 8%. This will activate the output once the input signal is larger than 10% and deactivates it if is less than 8%.

An analog output is assigned directly to an input by assigning xA00 to 7. Use digital outputs for on/off lights or add an analog output for dimming. Once the input has an analog output and a digital output associated with it, the function will behave this way: Pressing the push-button switch for less than 2 seconds will toggle the digital output. For dimming, pressing the push-button switch for longer than 2 seconds will change the input value by 10% per second from 0% to 100% and again back to 0%.

Pulse counting mode

- ➔ With this feature it is possible to count pulses from a water or energy meter and summarize a constant value or the result of an input.
- ➔ For frequent pulses the summary option of 06u5 is recommended. This will save only every 10th 100th or 1000th pulse to the eeprom and keep the values until then in RAM. This bears the risk that those values will not be remembered after a power failure.
- ➔ With 06u7 the value of two inputs may be used in conjunction with the Pulse Counting Input to calculate energy consumption. For example, apply the Mathematical Function-Differential to supply and return water temperature for a heating system. The calculated value of a series of inputs is shown on the input with the higher number. When UI1 supply water temperature and UI2 return water temperature both have Mathematical Function-Differential parameter selected the difference between supply and return temperature will be shown on UI2. When the Pulse Counting input parameter 06u7 is set to 2, the difference between supply and return temperature is added to the total at each pulse of the flow meter. This total then represents energy consumption.

Parameter	Description	Range	Option
06 u2	Value to be added with each pulse. For single pulse counting set to 1. This value will only be used if 06u7 = 0.	-50-205	1
06 u5	Save value to eeprom, only after every n sample will the data be saved to eeprom. The eeprom allows for 100'000 guaranteed saves. In order to guarantee reliable operation this multiplier should be set to prevent premature aging of the controller. 0 = 1 every sample is saved. 1 = 10 after 10 samples data is saved to the eeprom 2 = 100 after 100 samples data is saved to eeprom 3 = 1000 after 1000 samples data is saved to eeprom	0..3	0
06 u6	Reset counter: any value other than 0 will reset the counter. Once this value is set to 1 and saved, the counter will be reset to 0 immediately.	0...255	0
06 u7	Select Input whose value is used to be added with each pulse.	0-12	0

Parameter reference for universal inputs

Parameter	Description	Range	Option
06 u0	For universal inputs: 6U (only present on SDC-210.102): Signal type (0= not active): 1= 0-10V (not used) 2= 2-10V (not used) 3= NTC 4 = open contact direct (contact open = 100%, closed = 0%) 5 = open contact reversed (contact open = 0%, closed = 100%) 6 = potentiometer input, assign to setpoint selection of control loop 7 = light control mode: toggle and dimmer switch 8 = pulse counting input. 9 = PT1000 input (only if available: e.g. TC12)	0-9	1
06 u1	Display minimum value. See note below about display resolution. For potentiometer input: lower range limit of potentiometer in 100 Ohm steps only if 06u0 = 6: if minimum value is higher than maximum value, the input signal is reversed. 0% input = 100% signal, 100% input = 0% signal	-50-205	0
06 u2	Display maximum value. See note below about display resolution. For potentiometer input: Upper range limit of potentiometer in 100 Ohm steps only if 06u0 = 6: if minimum value is higher than maximum value, the input signal is reversed. 0% input = 100% signal, 100% input = 0% signal	-50-205	100
06 u3	Range of universal inputs (For analog inputs only: 06u0 = 1,2) 0 = x1 3 = square root 1 = x10 4 = square root x 10 2 = x100 5 = square root x 100	0 - 5	0
06 u4	Analog input unit: 0= no unit, 1= %, 2= °C /°F, 3= Pa	0-3	1
06 u5	When 06u0 = 1-5: Select number of samples taken for low pass filter:	0-100	3
06 u6	Sensor calibration	Per input range	0.0
06 u7	Calculate mathematical function over multiple inputs (0=not active): 1= average, 2= minimum, 3= maximum, 4= differential UI(n) - UI(n-1)	0-4	0
06 u8	When 06u0 = 7 (light switch), select auto switch off time. Set to 0, if output should not automatically switch off. Note: Shared value: changing this value will as well change 06u5	00:00s...15:10h MM:SS...HH:MM	00:15 MM:SS

Virtual inputs

These inputs are not located on the controller. They are inputs from a connected operation terminal, a bus-plug-in or a special function input.

Timeouts for remote inputs

The remote input has a selectable timeout. If the value is not updated within this timeout, the input will be disabled and the configuration error Err4 is shown. Rewriting the input value will re-enable the input but will not clear Err4. Err4 can only be cleared by acknowledgement through the right key. Setting the timeout to 0 disables its function. For control functions, the timeout should not be disabled.

While no additional setup is required on the OPA2, the bus master needs to write its value to the correct address for the input within the timeout period. Details are described in the documentation of the communication module.

Virtual inputs from operating terminals

Available inputs are temperature, relative humidity and 2 analog inputs. Which inputs are available for the operation terminal used, needs to be verified with its product datasheet.

To use these inputs with X2, it is only required to activate the operating terminal signal type on those respective virtual inputs.

The inputs are fixed assigned in the following way:

1. virtual input: temperature sensor
2. virtual input: RH (relative humidity) sensor
3. virtual input: analog input 1
4. virtual input: analog input 2

Virtual inputs from communication-plug-ins

AEX-BAC, AEX-MOD and other plug-ins may be used by a gateway or server to write to the virtual inputs.

This way an outdoor sensor may be shared between different X2 devices. The X2 device may not directly write the sensor signal to another X2 device. It is only possible by an upper level controller which is programmed to read a sensor value and on defined intervals write the value to the virtual inputs of the devices that require that signal.

Virtual inputs in special function mode

Those inputs calculate a signal from up to two other sources. The sources may be another input, an output, a sequence or an interlock. It is possible to calculate results using mathematics or a signal such as dew point or enthalpy.

Parameter reference virtual remote inputs

Parameter	Description	Range	Option
07 u0	For virtual inputs: 7U to 10U: Select signal source 1 = Operation terminal OPA2-VC, OPU2-2TH-VC, etc. 2 = Bus module: AEX-MOD (Modbus), AEX-BAC (BACnet) 3 = Special input functions (configuration, see next page)	0-3	0
07 u1	Display minimum value	-50-205	0
07 u2	Display maximum value	-50-205	100
07 u3	Range of universal inputs (For analog inputs only) 0 = x1 1 = x10 2 = x100	0 - 2	0
07 u4	Analog input unit of measure: 0= no unit, 1= %, 2= °C /°F, 3 = Pa	0-3	2
07 u5	Not used for virtual inputs. Do not change	0-100	12
07 u6	Sensor calibration	Per input range	0.0
07 u7	Calculate mathematical function over multiple inputs (0=not active): 1= average, 2= minimum, 3= maximum, 4= differential $UI(n) - UI(n-1)$	0-4	0
07 u8	Select timeout: If the value is not updated within the specified time period, the input will be disabled. If the input is assigned to an active control loop or a function configuration error Err4 is shown.	00:00s...15:10h MM:SS...HH:MM	01:00 MM:SS

Special function input configuration

A virtual input configured as special input function calculates its signal based on selected inputs and functions. This functions may be additions, subtractions, minimum, maximum, dew point and enthalpy.

Calculations with different input and output types

An input to a special input function can be a physical input, a virtual input, a control sequences or an output. It is possible to compare sequences with physical inputs or outputs.

All sequences and outputs are calculated as 0...100%. Fan outputs are based on active step: 0%/33%/66%/100%

The inputs do not have to use same display range as in the mathematical functions of each input. The function calculates absolute values. The only exception to this rule is multipliers. All inputs must use the same multipliers; those multipliers should match as well the setting of the special input function xxu3.

Enthalpy and dew point functions

For enthalpy and dew point function the temperature input needs to be on input 1 and humidity on input 2.

Permissible input signal range is temperature from 0.1 to 80°C (32.5 to 176 °F) and from 0 to 100% relative humidity. If signal is outside of this range, the minimum or maximum values will be used instead.

Reference for special function input

Parameter	Description	Range	Option
07 u0	For virtual inputs: 7U to 10U: Select signal source 1 = Operation terminal OPA2-VC, OPU2-2TH-VC, etc. 2 = Bus module: AEX-MOD (Modbus), AEX-BAC (BACnet) 3 = Special input function	0-3	3
07 u1	Display minimum value	-50-205	0
07 u2	Display maximum value	-50-205	100
07 u3	Range of universal inputs (For analog inputs only) 0 = x1 1 = x10 2 = x100	0 - 2	0
07 u4	Analog input unit of measure: 0= no unit, 1= %, 2= °C /°F, 3 = Pa	0-3	2
07 u5	Calculate mathematical or physical functions over multiple inputs: 0 = off 1 = average (input 1 + input 2)/2 2 = minimum 3 = maximum 4 = difference (input 1 - input 2) 5 = addition (input 1 + input 2) 6 = dew point (input 1: temperature, input 2: relative humidity) 7 = enthalpy of humid air (input 1: temperature, input 2: relative humidity)	0-7	0
07 u6	Select type of function input 1 0 = universal and virtual inputs 1 = heating sequence of control loops 2 = cooling sequence of control loops 3 = heating & cooling sequence of control loops 4 = analog outputs 5 = digital outputs (0%, 100%) 6 = fan outputs (0%, 33%, 66%, 100%)	0...6	0
07 u7	Select ID of function input 1	0....10	0
07 u8	Select type of function input 2	0...5	0
07 u9	Select ID of function input 2	0....10	0

Alarms and Interlocks

Alarms in X2 can be used to activate or deactivate functions, control loops and outputs. Each output may be configured to be fully on, fully off or for analog alarms output a specific value for each of the available alarms.

It is as well possible to disable the controller using alarms with the FU1 function. Free heating/cooling may be disabled using alarms in FU5.

There are different ways to activate an alarm: They are described in greater detail in the following pages:

- High or low limit alarm configuration
- Alarm based on maximum set point deviation of control loop
- Maintenance alarm based on run time counters
- Feedback or output alarms
- Alarms based on control loop sequence
- Timeout or cycle mode for outputs

Number and priority of available alarms.

8 alarms are available. The highest priority alarm is alarm 1, the lowest one is alarm 8.

Alarm conditions

An alarm may have the following conditions:

- Normal
- Alarm active
ALA1 – ALA8 is shown on the display. The system LED is blinking in 1 second interval.
- Alarm to be reset
ALA1 – ALA8 is shown on the display and blinking in one second interval. Such an alarm may be reset by pressing the RIGHT or OPTION key of the operation unit.

Alarm automatic reset or acknowledge only (AL4).

Certain alarms should automatically reset once the condition is removed, but still keep the end user informed that the alarm condition occurred: A typical example is a frost alarm. If the temperature drops too low, the heat should come on and it should stop again once the frost protection reset temperature is reached.

If an alarm indicates a failure of system equipment that would endanger the operation of a device, the alarm should not automatically reset. For example, when a fan fails to come on or a pump does not operate. In this case the alarm situation needs to be resolved before restarting the outputs.

By setting AL3 to ON the engineer determines that the alarm must be reset manually before normal operation can continue.

Alarm as Interlock (AL3)

An alarm may be defined as an interlock with AL3. As an interlock the alarm is silent, it will not be shown on a display device. It can not be acknowledged or reset. An interlock may thus be used to set outputs and loops to defined states depending on input or system conditions.

→ Operating the interlock in off mode:

To activate an interlock in OFF mode, set its AL4 value to ON. Make sure AL4 is set to OFF if the interlock should not activate an output while the controller is in OFF mode.

Alarm Settings on outputs

The position of an output in the event of an alarm may be defined for each output and each alarm individually. The output can be switched on (100%) or off (0%). Additionally, analog outputs may now as well be set to a predefined value. To achieve this, the same alarm needs to be selected in the ON and OFF register. An additional parameter is provided to choose the desired alarm level.

Priority for output control

1. Alarm level low
2. Alarm level high
3. Operation mode OFF

→ The alarm takes precedence over operating state and control signal. For interlocks, its operation during OFF mode is defined through parameter AL4.

→ Two parameters define the behavior of the output based on an alarm: One parameter defines which alarm deactivates the output (0%); the other parameter defines which alarm activates the output to 100%. Each alarm can be individually selected. Multiple alarms can be assigned to one output. Should an alarm be active simultaneously in the parameter to activate and another one to deactivate the output, the one to de-activate has precedence.

High or low limit alarm

The limit alarm activates if an input crosses a high or low limit.

For this type of alarms an input must be selected with AL2 and if this is a high or a low limit with AL6. The limit itself is defined with AL7. Once the input value crosses the limit defined the alarm delay starts counting.

If the delay expires and the condition is still true, the alarm becomes active.

If the limit is set to high (AL6 = ON), the input value must be higher than the limit in order to trigger the alarm.

If the limit is set to low (AL6 = OFF, the input value must be below the limit to activate the alarm.

Alarm reset

The reset determines when the alarm condition will return to normal.

The alarm reset is defined as hysteresis. The hysteresis defines the difference to the limit required to reset the alarm. For example, on a high limit alarm, the input value required to reset the alarm is the limit AL7 – hysteresis AL8.

For a low limit alarm, it is the limit AL7 + hysteresis AL8.

In frost protection for example. The frost protection alarm is activated once the temperature drops below 5°C (41°F), the alarm reset is set to 5K. The room is now heated until the temperature reaches 5°C (41°F) + 5K = 10°C (50°F). Once this temperature is reached the alarm will switch off, it will remain blinking until acknowledged.

Parameter reference for high or low limit alarm

Parameter	Description	Range	Option
1AL 0	Select alarm type: 0 = Alarm is not active 1 = Input high or low limit (select input in AL 2) 2 = Max. set point deviation of control loop (select loop in AL 1) 3 = Maintenance alarm from run time counters (select counter in AL 1) 4 = Feedback or output alarm for fan, supervise fan state (Select fan in AL 1) 5 = Feedback or output alarm for digital output (select output in AL 1) 6 = Feedback or output alarm for analog output (select output in AL 1) 7 = Level alarm or interlock for PI-sequence of control loop (select output in AL 1) 8 = Timeout or cycle mode for outputs. (select type in AL 2 and ID in AL 1)	0...8	0
1AL 1	Not used	0...8	0
1AL 2	Select supervised input if 1AL0 = 1 0 = not active, input according hardware, 1 = UI1, 2 = UI2, etc.	0...12	0
1AL 3	Alarm or interlock mode OFF = Alarm mode active: Icon and the words ALA# on the small digits indicating active alarm will appear on display, reset option in 1AL4 applies. ON = Interlock mode: Outputs revert to normal operation when alarm condition is no longer present, Icon and text indicating active alarm will not appear.	OFF, ON	OFF (Alarm)
1AL 4	Automatic reset or acknowledge to reset (only if AL3 = OFF) OFF = Alarm condition resets automatically. After alarm condition is no longer present, outputs will revert to normal operation, but alarm Icon will continue to blink on display until acknowledged with Option key. ON = Alarm condition must be reset manually. After alarm condition is no longer present, outputs will remain in alarm setting, and Icon will continue to show on display, until acknowledged with Option key. Note: All alarms operate as well if the controller is in OFF mode.	OFF, ON	OFF (Automatic reset)
	Select if interlock is active in OFF mode (only if AL3 = ON) OFF = Interlock is not active while controller is in off mode or disabled ON = Interlock is active independent of controller state		
1AL 5	Delay until alarm is active	00:00s...15:10h MM:SS...HH:MM	00:00 MM:SS
1AL 6	Type of alarm (applies only if AL0 = 1, 7) OFF = Low limit alarm ON = High limit alarm	OFF, ON	OFF
1AL 7	Alarm limit for input based alarms (applies only if AL0 = 1, 4 to 6 in feedback mode) Note: shared value. Changing this input will as well change 1AL9	Per input range	10%
1AL 8	Hysteresis for alarm setback for input based alarms (applies only if AL0 = 1) Note: shared value. Changing this input will as well change 1ALA	Per input range	5%
1AL 9	Not used	0...100%	8%
1AL A	Not used	0...100%	4%

Alarm based on maximum set point deviation of control loop

This alarm is used to determine a general failure of the control system. It may be assigned to one specific control loop or all control loop. The maximum allowed deviation parameter is defined in each control loop with xL26.

If the input does not reach the setpoint within the set point deviation parameter within the delay time defined with AL5 an alarm is generated.

Alarm based on run time counter (Maintenance alarm)

This alarm is used to schedule a maintenance action. It may be assigned to particular digital output with AL1 or if AL1 = 0 to all outputs. The limit for the maintenance alarm is defined in each digital output with D10. In order for the run time counter to work D09 must be set to ON and the output must be set as digital output.

How to reset a run time counter

Setting D09 to OFF and back to ON will set the counter to 0.

Parameter reference for maximum setpoint deviation and maintenance alarm

Parameter	Description	Range	Option
1AL 0	Select alarm type: 0 = Alarm is not active 1 = Input high or low limit (Select input in AL 2) 2 = Max. set point deviation of control loop (select loop in AL 1) 3 = Maintenance alarm from run time counters (select counter in AL 1) 4 = Feedback or output alarm for fan, supervise fan state (Select fan in AL 1) 5 = Feedback or output alarm for digital output (select output in AL 1) 6 = Feedback or output alarm for analog output (select output in AL 1) 7 = Level alarm or interlock for PI-sequence of control loop (select output in AL 1) 8 = Timeout or cycle mode for outputs. (select type in AL 2 and ID in AL 1)	0...8	2
1AL 1	For AL0 = 2: Select control loop Note: max deviation limit is defined in control loop parameter (L26) 0 = all active control loops (not valid if 1AL0 = 7) 1 = loop 1 to 2 = loop 2 For AL0 = 3: Select digital output for run time counter Note: run time maintenance alarm limit is defined in digital output parameter d10. 0 = all digital outputs 1 = Digital output 1 to 7 = Digital output 7	0...8	1
1AL 2	Not used	0...10	0
1AL 3	Alarm or interlock mode OFF = Alarm mode active: Icon and the words ALA# on the small digits indicating active alarm will appear on display, reset option in 1AL4 applies. ON = Interlock mode: Outputs revert to normal operation when alarm condition is no longer present, Icon and text indicating active alarm will not appear.	OFF, ON	OFF (Alarm)
1AL 4	Automatic reset or acknowledge to reset (only if AL3 = OFF) OFF = Alarm condition resets automatically. After alarm condition is no longer present, outputs will revert to normal operation, but alarm Icon will continue to blink on display until acknowledged with Option key. ON = Alarm condition must be reset manually. After alarm condition is no longer present, outputs will remain in alarm setting, and Icon will continue to blink on display, until acknowledged with Option key. Note: All alarms operate as well if the controller is in OFF mode. Select if interlock is active in OFF mode (only if AL3 = ON) OFF = Interlock is not active while controller is in off mode or disabled ON = Interlock is active independent of controller state	OFF, ON	OFF (Automatic reset)
1AL 5	Delay until alarm is active	00:00s...15:10h MM:SS...HH:MM	00:00 MM:SS

Feedback and output alarms

Feedback alarms are deployed to make sure a device is operating correctly. For example, to supervise a fan, feedback from a pressure sensor may be used. While the fan is in operation, the pressure measure through the sensor should be high, if the fan is off, the pressure should be low. If any of these conditions is amiss an alarm needs to be generated. Feedback-alarms normally should not reset themselves automatically, therefore the recommended setting for AL4 is ON.

To configure a feedback-alarm the output needs to be identified. This is done by selecting the type (AL0 = 4 for fan, AL0 = 5 for digital and AL0 = 6 for analog outputs. The actual output ID is specified with AL1.

Measuring the feedback response (direct or reverse)

Select the input to trigger the response with AL2. Now the response might be direct or reverse. If the response is direct, if the output is active, the input should be above the limit. If the output is inactive the input should measure below the limit.

If on the contrary the response is reverse, when the output is ON, the input goes low and if output is off, it goes high.

This is set with AL6. AL6 = OFF: direct feedback. AL6 = ON: reverse feedback.

The actual limit is set with AL7 with the hysteresis at AL8. This plays out the following way for a direct feedback relationship. The output goes active, the input must now go over the limit defined with AL7 within the time defined in AL5. Once the output goes inactive, the input must go below the limit defined with AL7 minus the hysteresis defined in AL8 within the time defined in AL5.

For a reverse relationship it works opposite. The output goes to active, the input must drop below the limit within the time limit. Once the output goes inactive the input must rise above the limit + hysteresis within the time, to prevent an alarm.

Output interlocks

Output alarms or interlocks can be used to activate an interlock based on the activation of, or exceeding the limit of, an output. A feedback alarm with no input assigned (AL2 = 0) will work as an output alarm or interlock.

To measure if the output is on or exceeds a certain level, AL9 and AL10 are used. Using AL6 determine if the alarm should be active while the output is on or off. (active while ON: AL6 = ON, active while OFF: AL6 = OFF)

For fan output alarms, each fan speed has a value of 10%. So speed 1 = 10%, speed 2 = 20% and speed 3 = 30%. To trigger an interlock or alarm based on fan speeds, the appropriate limits will have to be set using AL9 and AL10.

For digital outputs, the level is 100% when on and 0% when the output is off.

Analog outputs are according to their actual output level in % of the full span.

Parameter reference for feedback and output alarms

Parameter	Description	Range	Option
1AL 0	Select alarm type: 0 = Alarm is not active 1 = Input high or low limit (Select input in AL 2) 2 = Max. set point deviation of control loop (select loop in AL 1) 3 = Maintenance alarm from run time counters (select counter in AL 1) 4 = Feedback or output alarm for fan, supervise fan state (Select fan in AL 1) 5 = Feedback or output alarm for digital output (select output in AL 1) 6 = Feedback or output alarm for analog output (select output in AL 1) 7 = Level alarm or interlock for PI-sequence of control loop (select output in AL 1) 8 = Timeout or cycle mode for outputs. (select type in AL 2 and ID in AL 1)	0...8	4 - 6
1AL 1	Select fan, digital or analog output if 1AL 0 = 4, 5, 6, 8 0 = Interlock or alarm not active 1..x = selected output	0...8	1
1AL 2	Select supervised input or activate output alarm if 1AL0 = 4, 5, 6: 0 = Output alarm, input according hardware, 1 = UI1, 2 = UI2, etc.	0...10	0
1AL 3	Alarm or interlock mode OFF = Alarm mode active: Icon and the words ALA# on the small digits indicating active alarm will appear on display, reset option in 1AL4 applies. ON = Interlock mode: Outputs revert to normal operation when alarm condition is no longer present, Icon and text indicating active alarm will not appear.	OFF, ON	OFF (Alarm)
1AL 4	Automatic reset or acknowledge to reset (only if AL3 = OFF) OFF = Alarm condition resets automatically. ON = Alarm condition must be reset manually. Select if interlock is active in OFF mode (only if AL3 = ON) OFF = Interlock is not active while controller is in off mode or disabled ON = Interlock is active independent of controller state	OFF, ON	OFF (Automatic reset)
1AL 5	Delay until alarm is active	00:00s...15:10h MM:SS...HH:MM	00:00 MM:SS
1AL 6	For feedback alarms: AL2 ≠ 0: Type of feedback (applies only if AL0 = 4, 5, 6, 8) OFF = Direct: Output on, feedback high, ON = Reverse: Output on, feedback low For output alarms: AL2 = 0. OFF = Low limit: Output OFF, Alarm ON, ON = High limit: Output ON, Alarm ON.	OFF, ON	OFF
1AL 7	Alarm limit for input based alarms (applies only if AL0 = 1, 4 to 6 in feedback mode)	Per input range	10%
1AL 8	Hysteresis for alarm setback for input based alarms (applies only if AL0 = 1)	Per input range	5%
1AL 9	Alarm limit for sequence based alarms (applies only if AL0 = 4 to 6 in output mode, 7)	0...100%	8%
1AL A	Hysteresis for alarm setback for sequence based alarms (applies only if AL0 = 4 to 6 in output mode or 7)	0...100%	4%

Alarms based on control loop sequence

This feature may be used to activate an alarm or an interlock if a PI-sequence of a control loop exceeds a certain level. This may be used to control an output through several control conditions in parallel when applied as interlock, or to indicate a malfunctioning control setup when used as alarm.

Limits for PI-loop sequence alarm

Use limits AL9 and ALA (AL10) to define limit and hysteresis for alarms or interlocks for PI sequences.

AL6 determines if the alarm should be set when the PI sequence is higher than the limit (AL6 = ON) or lower than the limit (AL6 = OFF).

Parameter reference for alarms based on control loop sequence

Parameter	Description	Range	Option
1AL 0	Select alarm type: 0 = Alarm is not active 1 = Input high or low limit (Select input in AL 2) 2 = Max. set point deviation of control loop (select loop in AL 1) 3 = Maintenance alarm from run time counters (select counter in AL 1) 4 = Feedback or output alarm for fan, supervise fan state (Select fan in AL 1) 5 = Feedback or output alarm for digital output (select output in AL 1) 6 = Feedback or output alarm for analog output (select output in AL 1) 7 = Level alarm or interlock for PI-sequence of control loop 8 = Timeout or cycle mode for outputs. (select type in AL 2 and ID in AL 1)	0...8	0
1AL 1	Select control loop if 1AL 0 = 2,7, Note: max deviation limit is defined in control loop parameters 0 = all active control loops (not valid if 1AL0 = 7) 1 = loop 1 to 2 = loop 2	0...8	0
1AL 2	Select sequence if 1AL0 = 7 0 = heating or reverse 1 = cooling or direct 2 = heating and cooling or reverse and direct	0...10	0
1AL 3	Alarm or interlock mode OFF = Alarm mode active: Icon and the words ALA# on the small digits indicating active alarm will appear on display, reset option in 1AL4 applies. ON = Interlock mode: Outputs revert to normal operation when alarm condition is no longer present, Icon and text indicating active alarm will not appear.	OFF, ON	OFF
1AL 4	Automatic reset or acknowledge to reset (only if AL3 = OFF) OFF = Alarm condition resets automatically. After alarm condition is no longer present, outputs will revert to normal operation, but alarm Icon will continue to blink on display until acknowledged with Option key. ON = Alarm condition must be reset manually. After alarm condition is no longer present, outputs will remain in alarm setting, and Icon will continue to blink on display, until acknowledged with Option key. Note: All alarms operate as well if the controller is in OFF mode. Select if interlock is active in OFF mode (only if AL3 = ON) OFF = Interlock is not active while controller is in off mode or disabled ON = Interlock is active independent of controller state	OFF, ON	OFF
1AL 5	Delay until alarm is active	00:00s...15:10h MM:SS...HH:MM	00:00 MM:SS
1AL 6	Type of alarm (applies only if AL0 = 1, 7) OFF = Low limit alarm ON = High limit alarm	OFF, ON	OFF
1AL 7	Not used	Per input range	10%
1AL 8	Not used	Per input range	5%
1AL 9	Alarm limit for sequence based alarms (applies only if AL0 = 4 to 6 in output mode, 7) Note: shared value. Changing this input will as well change 1AL7	0...100%	8%
1AL A	Hysteresis for alarm setback for sequence based alarms (applies only if AL0 = 4 to 6 in output mode or 7) Note: shared value. Changing this input will as well change 1AL8	0...100%	4%

Output cycle mode

This may be used as a valve cycle to activate an output that has been inactive for an extended period of time. On the other hand it may as well be used to deactivate an output that was active for a certain time.

General function

In cycle mode, the output will activate after a defined timeout period (AL5) for a set period of time (run time, AL7). After the run time has expired, the output will stay off for the timeout period and will activate again after it has expired and so forth.

Normally an output is activated which is inactive during the timeout time. This can be inverted by AL 6. An output is then deactivated, which is active for a long time.

Activate cycle mode while output is OFF or ON

The behavior may be reversed using AL6. If set to ON, timeout will start when the output is on and the output will deactivate during the run time defined in AL7.

The timeout period will restart, should the output activate in direct mode or deactivate in reverse mode during the defined the timeout period.

This function can be set with AL8 to be only active during certain operation modes. It can therefore be used either as valve cycle or as humidity or mould control feature. Important is to keep AL4 = ON if the function should be active in OFF or disabled mode.

Truth table for cycle activation in interlock mode (AL3 = ON)

	AL4 = OFF	AL4 = ON
AL8 = 0	Only active in on mode	Always active
AL8 = 1	Only active in on mode	Only active in on mode
AL8 = 2	Not active	Only active in off mode
AL8 = 3	Not active	Only active in disabled mode
AL8 = 4	Not active	Only active in off or disabled mode

Parameter reference for output cycle mode

Parameter	Description	Range	Option
1AL 0	Select alarm type: 0 = Alarm is not active 1 = Input high or low limit (Select input in AL 2) 2 = Max. set point deviation of control loop (select loop in AL 1) 3 = Maintenance alarm from run time counters (select counter in AL 1) 4 = Feedback or output alarm for fan, supervise fan state (Select fan in AL 1) 5 = Feedback or output alarm for digital output (select output in AL 1) 6 = Feedback or output alarm for analog output (select output in AL 1) 7 = Level alarm or interlock for PI-sequence of control loop (select output in AL 1) 8 = Timeout or cycle mode for outputs.	0...8	0
1AL 1	Select fan, digital or analog output if 1AL 0 = 4, 5, 6, 8 0 = Interlock or alarm not active 1..x = selected output	0...8	0
1AL 2	Select type of device for timeout detection if 1AL 0 = 8 0 = Operation mode, Active if operation mode is OFF. (revert using AL6) 1 = fan, Active if fan is off 2 = digital output 3 = analog output	0...10	0
1AL 3	Alarm or interlock mode OFF = Alarm mode active: Icon and the words ALA# on the small digits indicating active alarm will appear on display, reset option in 1AL4 applies. ON = Interlock mode: Outputs revert to normal operation when alarm condition is no longer present, Icon and text indicating active alarm will not appear.	OFF, ON	OFF
1AL 4	Automatic reset or acknowledge to reset (only if AL3 = OFF) OFF = Alarm condition resets automatically. ON = Alarm condition must be reset manually. Select if interlock is active in OFF mode (only if AL3 = ON) OFF = Interlock is not active while controller is in off mode or disabled ON = Interlock is active independent of controller state	OFF, ON	OFF
1AL 5	Timeout period: time while the output is off. This time will be reset if the output activates.	00:00s...15:10h MM:SS...HH:MM	00:00 MM:SS
1AL 6	Direct or reversed action(apply only if AL0 = 4, 5, 6, 8) OFF = Direct: Output off, cycle detection active ON = Reverse: Output on, cycle detection active	OFF, ON	OFF
1AL 7	Run time in cycle mode. (applies only if AL0 = 8) Interlock or alarm will be activated for the run time specified here.	00:00s...15:10h MM:SS...HH:MM	00:00
1AL 8	Activation in cycle mode. (Applies only if AL0 = 8) 0 = function is active independent of operation mode 1 = function is active only in ON mode 2 = function is active only in OFF mode 3 = function is active only in disabled mode 4 = function is active only in OFF and disabled mode.	0...4	0

Control loop configuration

Manipulation of the setpoint

Unoccupied mode setpoints

Unoccupied mode may be enabled using UP06. In unoccupied mode alternative setpoints may be used. Unoccupied mode may be activated with FU02 or manually on a key pad or through communication.

There are two possibilities to change the setpoint in unoccupied mode: Shift it by L07 or switch to the minimum setpoint limit in heating mode and maximum setpoint limit in cooling by setting 1L27 to ON.

Unoccupied mode may be disabled by setting UP06 to OFF.

Setpoint compensation

The setpoint compensation is typically used to compensate the set point due to a change in outside temperature. Enable summer or winter set point compensation for this control loop with L05. Both setpoint shift or setpoint setback are possible. They are described in more detail under auxiliary function 4FU.

Display of setpoint value:

Depending on the configuration of the controller there are various set points that might be active. If the control loop is in heating only or cooling only setup, this means if only one sequence is enabled, the acting setpoint is shown. If both sequences are enabled, the controller is in 4-pipe mode. In this case the set point shown is the setpoint which lies between the acting heating and cooling setpoints. The distance between the displayed setpoint and the acting setpoint is called dead zone (1L08).

In unoccupied mode, the acting setpoint is shown in all cases.

Set point limits heat/cool or summer/winter

There are different setpoint limits available. One set when the control loop is in heating mode and one when it is in cooling mode.

For 4-pipe systems it is useful to control the setpoint limits by a summer – winter flag instead of heating – cooling mode.

To have set point limits follow summer winter instead of heating/cooling, enable xL28. Set point limits now follow the setting of UP24 (summer / winter mode).

Controlling the setpoint through another loop (cascade control)

A primary loop calculates an output based on its settings and a measured input signal. This output is then used to determine the setpoint of the secondary loop. The output value of the primary loop is a value between 0 and 100%. The secondary loop will then take this value and span it proportionally between its lower and higher setpoint limits to determine its setpoint.

Cascade control is activated on the secondary loop through setting xL06 to 2-4. The primary loop is always the loop with the lower index. For example, if loop 2 is the secondary loop and sets 2L06 = 4, the loop 1 will be the primary loop.

The sequence of the primary loop to be cascaded may be selected by choosing xL06 = 2 for reverse only, xL06 = 3 for direct only and xL06 = 4 for both options.

Manual override of cascade

The set point of cascaded secondary control loops may be manually overridden if not disabled with UP02. Such an override will not reset automatically. To reset back to auto mode, change the set point again while in manual mode and it will return to auto.

Controlling the setpoint through a potentiometer or input

Select the input to be used with xL06. The selected input must be set to 0-100% or be in potentiometer mode. The value of the input will then be spanned between the upper and lower setpoint limits of the active mode (heating, cooling or summer, winter). A value of 0% of the input will then result in the set point to match the lower limit and a value of 100% results in the setpoint being identical to the upper limit. The values in between are adjusted proportionally.

Heating / cooling – reverse / direct sequence.

Each control loop has its own direct / reverse status. On top of this, the controller has its own status that is independent of each loop. The controller status may be influenced by the function FU3, manually or through communication.

It may be confusing to see a different heat/cool symbol in idle mode compare to the one shown on loop 1 or loop 2. This would then be the case if the heat/cool status of the controller is not connected to a loop or FU3. In this case it should be connected to loop 1. This may be achieved in FU3.

Activation of reverse / direct sequence for each loop

The active sequence for each loop may be determined either by demand or it may be tied to the heat / cool mode of the controller.

Note: Only when a control loop has both its sequences assigned to an output can it switch between heating and cooling mode on demand.

Switch over delay in on demand mode

If heat / cool sequence is determined on demand, the mode will change once there is demand for the time defined with L25. A delay makes sense to prevent frequent switching between cooling and heating in case there is an involuntary overshoot. For certain applications it may make sense to set the delay to 0.

Fault detection of a control loop

It is possible to determine if a control loop does not reach its setpoint. To do this a maximum setpoint deviation may be defined with L26. Using the alarm feature with AL0 = 2, the control loop may be supervised. If the setpoint can not be reached within the limit defined in L26 and the time defined in the alarm definition, an alarm may be generated.

PI control sequence

Activating control loops

Control loops and sequences are activated by assigning outputs to them in the output configuration section.

Proportional control (P-band)

The proportional control function calculates the output based on the difference between setpoint and input. The proportional band (P-band) defines the difference between setpoint and input required to produce a 100% output. For example: a heating control sequence and a 2.0°C (4.0°F) P-band value will produce a 10V output (100%) when the input temperature is 2.0°C (4.0°F) below setpoint. This is the working range of the proportional control sequence. With 1°C (2°F) below setpoint, the output will be 5V (50%).

Setting the proportional band to 0 disables proportional control. This is required for very fast control systems such as fan control through air pressure transmitters.

Integral control

Proportional control is in most cases a very stable control mode. The flaw of proportional control alone, however, is that the setpoint is normally not reached. As the measured value gets closer to the setpoint, the output reduces until it reaches a point, a fraction above or below the setpoint, where the output equals the load. To reach the setpoint and achieve a higher level in comfort, the integral function should be activated.


Integral Gain (KI) and Measuring Interval TI.

The difference between measured value and setpoint is multiplied with the integral gain factor KI and added to the output. This calculation is done every measuring Interval. The measuring interval is defined by TI.

The challenge is to prevent hunting, where the output increases too fast and the temperature overshoots the setpoint. Hunting may result if the integral gain is too high or measuring interval too short. Each system is different. To prevent instability the P-band should be extended when integral gain is active (L14 or L15 set above 0).

Setting the integral gain to 0 disables integral and differential control.

Recommended Values						
	heating (air)	heating (radiant)	humidifying	cooling	dehumidifying	pressure
P-band	2°C(4°F)	1.5°C(3°F)	10%	1.5°C(3°F)	10%	0
Measuring interval (TI)	2	5	15	1	15	1
Integral gain (KI)	0.2	0.1	0.1	0.2	0.1	0.3

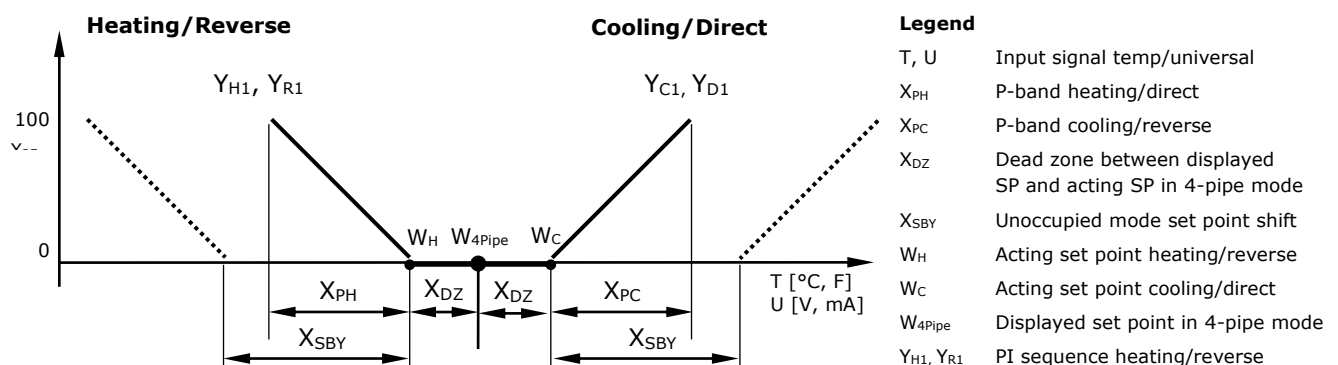

Switching digital outputs based on PI sequence:

Digital outputs and fans can now directly correspond to PI levels. In order to achieve this, select the required loop, sequence and switching level with the output parameter of the corresponding digital output or fan.

Digital control sequence

Selecting stage action

Cumulative stage action (L16=0) is typically used in electric heat applications, and single stage action (L16=1) in fan speed applications. Digital stage action (L16=2) is especially useful in electric heat applications to generate three steps with just two outputs. For example: Step 1=100W, step 2=200W, step 3=300W.


	Cumulative	Single	Digital
Stage 1	Q_1	Q_1	Q_1
Stage 2	Q_1+Q_2	Q_2	Q_2
Stage 3			Q_1+Q_2

Hysteresis

Switching hysteresis (L21) is the difference between switching on and switching off. A small hysteresis will increase the number of switching cycles and thus the wear on associated equipment.

Time delays

With minimum running time delay (L22) cumulative stages will not switch on simultaneously. With a sudden demand or initial startup, power stage 2 will not start earlier than 10 seconds (default value) after stage 1 has been initiated. Likewise, after a stage is switched off, it will remain switched off until L23 is expired. This is to avoid rapid switching.

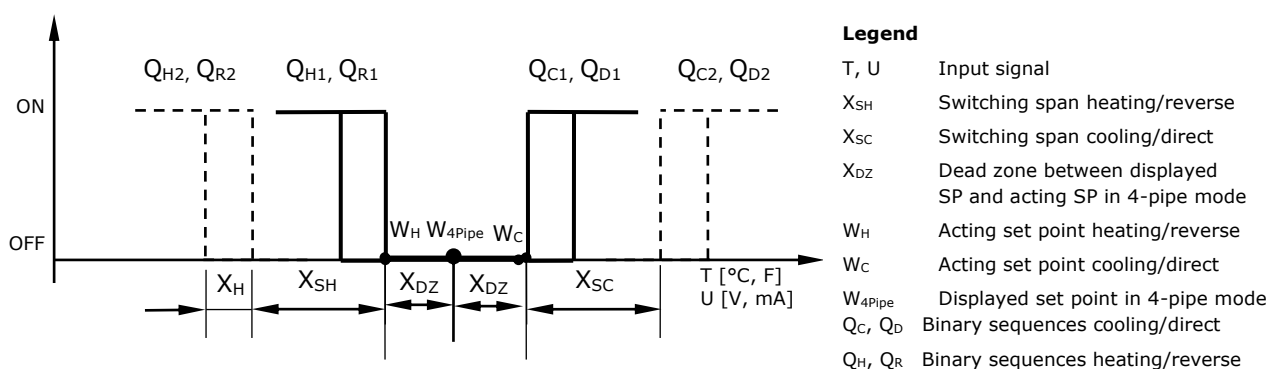

Parameter reference for control loops

Parameter	Description	Range	Option
1L 00	Select loop control input (0= loop disabled): input according hardware, 1 = UI1, 2 = UI2, etc.	0-12	1
1L 01	Minimum set point limit heating or winter mode	per input range	0%
1L 02	Maximum set point limit heating or winter mode	per input range	100%
1L 03	Minimum set point limit cooling or summer mode	per input range	0%
1L 04	Maximum set point limit cooling or summer mode	per input range	100%
1L 05	Enable set point compensation. Setpoint compensation is further described in auxiliary function 4FU. 0= disabled 1= winter compensation 2= summer compensation 3= winter and summer	0-3	0
1L 06	Select loop setpoint (0= normal): 1 = combine setpoint with previous control loop 2 = cascade with reverse sequence of primary loop 3 = cascade with direct sequence primary loop 4 = cascade with both reverse and direct sequence of primary loop 5 = UI1 (percentage of input value is spanned between set point limits) 6 = UI2 (percentage of input value is spanned between set point limits) 7 = UI3 (percentage of input value is spanned between set point limits) 8 = UI4 (percentage of input value is spanned between set point limits) 9 = UI5 (percentage of input value is spanned between set point limits) 10 = UI6 (percentage of input value is spanned between set point limits) Note: for input based setpoints: input must be set to 0-100% or in potentiometer mode.	0-10	0
1L 07	X _{SBY} : Unoccupied mode setpoint shift If 1L27 = OFF, the occupied setpoint is shifted by the value set with this parameter. The heating set point is reduced and the cooling set point is increased.	Per input range	5%
1L 08	X _{DZ} : Dead zone between displayed set point in 4-pipe mode and acting setpoint In 4-pipe mode, if both heating and cooling sequences of a loop are enabled, the center setpoint is shown on the display.	Per input range	2%

Parameter	Description	Range	Option
1L 09	Choose alarm or interlock to set disable control loop. If any of the selected alarms is active, the control loop will be disabled. All connected outputs will be off or 0%. ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽
1L 10	X _{OP} : Offset for PI sequence	per input range	0%
1L 11	X _{PH} : P-band heating	per input range	2%
1L 12	X _{PC} : P-band cooling	per input range	2%
1L 13	Integral gain heating (0.1 steps): low= slow reaction, high= fast reaction	0–25.5	0.0
1L 14	Integral gain cooling (0.1 steps)	0–25.5	0.0
1L 15	Measuring interval integral (seconds): low= fast reaction, high value= slow reaction	0–255	1 sec.
1L 16	Action of stages: 0= cumulative: stage 1 stays on when 2 comes on 1= single: stage 1 turns off when 2 comes on 2= digital: stage 1 only, stage 2 only, then stage 1 plus 2	0–2	0
1L 17	XOBH: Offset for heating/reverse binary sequences. Offset shifts the acting set point away from the displayed or saved set point	per input	0%
1L 18	XOBC: Offset for cooling/direct binary sequences. Offset shifts the acting set point away from the displayed or saved set point	per input	0%
1L 19	XSH: Switching span heating. Switching span is the difference between set point and measured value required for the next binary stage to activate.	per input	2%
1L 20	XSC: Switching span cooling. Switching span is the difference between set point and measured value required for the next binary stage to activate.	per input	2%
1L 21	XH: Switching hysteresis	per input	0.5%
1L 22	Switching delay min running time for binary stage	00:00s...15:10h MM:SS...HH:MM	00:10 MM:SS
1L 23	Switching delay min stopping time for binary stage	00:00s...15:10h MM:SS...HH:MM	00:10 MM:SS
1L 24	Activation of reverse/direct (heat/cool) sequence OFF= activates based on demand ON = follows heat/cool state of controller: Set manually or by auxiliary function (3FU)	ON/OFF	OFF
1L 25	Delay for heat/cool changeover in case above parameter is OFF. This delay prevents frequent switching of sequences.	00:00s...15:10h MM:SS...HH:MM	05:00 MM:SS
1L 26	Max allowed set point deviation (will generate an alarm if enabled in alarm parameters), Disabled if set to 0.	per input	0.0
1L 27	Fixed set point in unoccupied mode OFF = In unoccupied mode, set point is shifted according to 1L07 ON = In unoccupied mode use minimum set point limit as set point in heating mode or maximum set point limit in cooling mode	ON/OFF	OFF
1L 28	Set point limits selection based on summer winter OFF = Set point limits follow heat – cool setting of control loop ON = Set point limits follow summer – winter flag (UP 24)	ON/OFF	OFF

Analog outputs

Analog output signal types

Depending on the type of device used, the outputs may be fixed to 0–10 VDC-type signal or for the universal types they can be selected with jumpers to 0/4–20mA or 0/2–10VDC.

Available outputs for different X2 products

The number of outputs available for a device is defined in its product datasheet. Here is an overview over the X2 product range:


	TCX2-40863	TCX2-23343	TCX2-24273	TCX2-14050	TCI2	SxC2	TRI2
AO1	Universal	VDC	VDC		Universal	Universal	VDC
AO2	Universal	VDC	VDC		Universal	Universal	VDC
AO3	Universal	VDC	VDC				

Signal range

The standard signal range can be selected with parameter A02. Custom ranges can be created by setting minimum and maximum signal limits.

The signal range can be chosen depending on heating / cooling sequence of an assigned control loop. This may come in handy for VAV systems, where in heating mode a low volume of air is supplied while in cooling mode the air is used for cooling.

→ For **VAV Function** individual minimum and maximum limits may be assigned for cooling and heating. In VAV applications maximum cooling output matches the maximum air volume the VAV box is set to deliver. As demand for airflow in cooling mode decreases, airflow dwindles until it reaches minimum cooling output (A05). This minimum will be based on the airflow needed at design cooling and is typically 10% to 15% of maximum cooling airflow. When this minimum is reached the system is in dead-band – neither heating nor cooling. Minimum airflow in heating mode is set with A03. As the system moves into heating mode, heating airflow increases until it reaches the maximum heating output (A04), typically 30 to 50% of maximum cooling airflow.

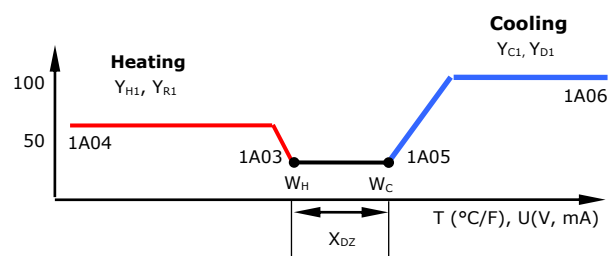

Note: A control loop, special function, digital control or PI-control sequence is not active until it is assigned to an output.

Alarm or interlock selection

Every output may be activated or deactivated based on a series of alarms or interlocks. Alarms specify fault conditions of the control application; interlocks may be used to offer additional control options. Alarms operate as well when the controller is in off mode. Interlocks can be selected to be active in off mode or not.

To activate the output while an alarm is pending, select the alarm in A07. To deactivate the output with the alarm pending, select it in A08. The output will be switched off, if alarms are active in both A07 and A08.

In case the same alarm is selected in 1A07 and 1A08, the output will be set to the level set in A15 in case the alarm activates.

Specific output level for alarms or interlocks

Selecting the same alarm for both 0% and 100% output will activate a special level that can be specified in A15.

Manual positioning

With manual positioning (1A00=6), the output may be controlled by time schedule or directly through a setpoint in 0.5% steps. Setting 1A01 to 0 will disable access to manual positioning through the operation terminal. The output will then only be controlled by time schedule or through communication.

Assigning an output to a control loop

With parameter A00 choose the control loop the output should respond to. Only those control loops are available that are in the X2 product specs on the functional scope table. A maximum of 4 control loops is available. Assigning an output to a control loop, activates this loop.

Selecting the sequence

How the output should react to the loop is selected with A01. These are the options:

- 0= Respond to heating/reverse PI-sequence only
- 1= Respond to cooling/direct PI sequence only
- 2= Respond to both heating/reverse and cooling/direct sequences (4 pipe)
- 3= 100% on if loop in heating mode: Reversing valve mode
- 4= 100% on if loop in cooling mode: Reversing valve mode
- 5= Transmit set point: (Specify signal range with A09, A10, A11)

Adjusting the range of the PI-sequence

The part of a PI-sequence an output covers may be adjusted using parameters A12 and A14. This is useful to span one PI sequence over multiple outputs. For example, by assigning 0...50% of the PI sequence to AO1 and 50...100% to AO2. This could be used for multiple valves that are connected to these outputs with valve 1 controlling half the load and valve 2 the second half, with both valves being assigned to the same control loop.

Note: For normal operation with one analog output per PI sequence A12 must be 0% and A14 to 100%. Else not the entire PI range may be applied to this output.

Transmitting the setpoint of a control loop

The setpoint of a control loop may be converted to an analog signal by setting A01 to 5. First the input assigned to the control loop needs to be selected with A09. The signal range must be configured using A10 and A11, with A10 carrying the minimum and A11 the maximum range limits. For example, for a temperature range of 15°C to 35°C with a 10VDC output signal each degree would be indicated with a 0.5V step increase on the signal, with 0V corresponding to 15°C and 10V to 35 °C.

This signal could then be sent to a secondary system that monitors the status of that control loop. By configuring interlocks or alarms and adjusting signal ranges, different modes may be transmitted to the secondary system.

For example the signal range could be limited to 2..8 VDC. 0V would then mean that the system is OFF, 10V would mean that an alarm condition is pending, 2..8 VDC would mean that the system is in normal operation.

Maximum of loop 1 and loop 2

An analog output may be set to react on the maximum output value of two control loops by setting A00 = 8. A combination of indirect and reverse sequences may be chosen. Applications for this function are CO2 and moisture control for ventilation and dehumidification. The sequences of loop 1 and loop2 may be chosen with A01

0 = Loop 1: Heating, Reverse	Loop 2: Heating, Reverse
1 = Loop 1: Cooling, Direct	Loop 2: Heating, Reverse
2 = Loop 1: Heating and Cooling	Loop 2: Heating, Reverse
3 = Loop 1: Heating, Reverse	Loop 2: Cooling, Direct
4 = Loop 1: Cooling, Direct	Loop 2: Cooling, Direct
5 = Loop 1: Heating and Cooling	Loop 2: Cooling, Direct


Special functions of the analog output

Dehumidification

To activate the dehumidification function for 4-pipe systems, the following setup is required:

1. Loop 1 has to be the temperature loop, assign the temperature input to loop 1.
2. Loop 2 has to control relative humidity
3. On the cooling output, activate special functions (A00 = 5) and Dehumidification (A01 = 00).

The analog cooling output will now activate cooling either if temperature or humidity is too high. In case humidity is too high the room will get cooler, which will trigger the heating mode. Cool air contains less humidity per m3 than warm air. Therefore, when the air gets heated up again, the humidity will be reduced. It is important for this system to work that the cooling coil is mounted in front of the heating coil.

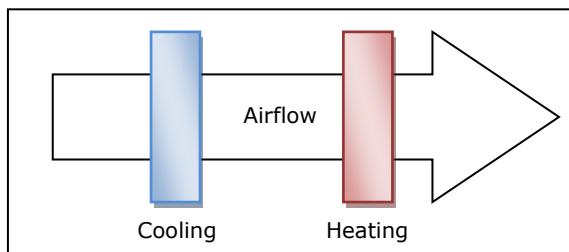

Free heating/free cooling settings

The free heating/cooling principle is handled under special functions FU5. Here just a quick summary:

With FU5 the outdoor and indoor climatic condition is compared and if possible, the outdoor and return air damper are both modulated in order to use outside air to reduce heating or cooling costs.

If A01 is set the 1, the output will function as an outdoor damper. Which means for fresh air the output will modulate to 100%. If A01 is set to 2, it will work as a return air damper and it thus works inverse to the outdoor damper. For fresh air, it will go to 0%.

Use as transmitter or signal converter for inputs

The analog output may be configured as signal converter and transmitter:

Measured and calculated input values (A00=7) may be transmitted on the analog output.

Select the input whose value is to be transmitted with A09. Then set the lower and upper limits of the analog signal with A10 and A11. It is important to first configure and choose the input before setting the limits. As the limits depend on the type and signal range of the assigned input.

Analog outputs for fan modules:

An analog output may be assigned to a fan module by selecting 1F09 = ON.

In this case the fan module has a higher priority than the analog output settings. The signal type and min/max values as well as the alarm functions still apply. Parameters A12-A14 are used to define the output value of the three fan speeds with A12 for the low speed, A13 medium and A14 the high speed.

Parameter reference for analog outputs

Parameter	Description	Range	Option
1A 00	Select control loop or special function: 0 = OFF 1 = Loop 1 2 = Loop 2 3 = Loop 3 4 = Loop 4 5 = Special functions (Dehumidification, Free heating/cooling, etc.) 6 = Manual positioning/time schedules (0-100%) 7 = Transmit value of an input (Specify signal with 1A09-1A11) 8 = Max of loop 1 and loop 2	0-8	1
1A 01	When 1A00=1 – 4 configure output: 0= Heating/reverse 1= Cooling/direct 2= Heating and cooling (4 pipe) 3= 100% on if loop in heating mode: Reversing valve mode 4= 100% on if loop in cooling mode: Reversing valve mode 5= Transmit set point: (Specify signal with 1A09, 1A10 and 1A11)	0-5	0
	When 1A00=5, select function: 0 = Dehumidification: Max of loop 1 cooling and loop 2 dehumidifying 1 = Economizer: Outdoor damper actuator. See 5FU for more details. 2 = Economizer: Return air damper actuator. See 5FU for more details.		
	When 1A00 = 6 Manual positioning/time schedules 0 = Allow time schedule only 1 = Allow manual positioning and time schedules		
	When 1A00 = 8 Maximum of output of loop 1 and loop 2 0 = Loop 1: Heating, Reverse Loop 2: Heating, Reverse 1 = Loop 1: Cooling, Direct Loop 2: Heating, Reverse 2 = Loop 1: Heating and Cooling Loop 2: Heating, Reverse 3 = Loop 1: Heating, Reverse Loop 2: Cooling, Direct 4 = Loop 1: Cooling, Direct Loop 2: Cooling, Direct 5 = Loop 1: Heating and Cooling Loop 2: Cooling, Direct		
1A 02	Type of output signal: OFF= 0-10V, 0-20mA, ON= 2-10V, 4-20mA	ON/OFF	OFF
1A 03	Minimum limitation of output signal default and in loop heating mode	0-100%	0%
1A 04	Maximum limitation of output signal default and in loop heating mode	0-100%	100%
1A 05	Minimum limitation of output signal in loop cooling mode	0-100%	0%
1A 06	Maximum limitation of output signal in loop cooling mode	0-100%	100%
1A 07	Choose alarm to set output to 100% (output 0% on conflicting alarms) ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽
1A 08	Choose alarm to set output to 0%. (output 0% on conflicting alarms) ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8 Note: setting the same alarm on 1A07 and 1A08 will set output to the level defined in 1A15 if this alarm activates.	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽
1A 09	If 1A01 = 5, feedback of setpoint, specify Input used in control loop here: input according hardware, 1 = UI1, 2 = UI2, etc.	0...15	0
1A 10	Minimum transmit value of inputs or set points	per input range	0%
1A 11	Maximum transmit value of inputs or set points	per input range	100%
1A 12	In loop sequence mode: Span PI sequence: lower limit of PI sequence. Loop sequence mode is entered when the analog output is assigned to a loop in A00 and a sequence with A01. With this setting, the sequence may now be spanned over different outputs. For example AO1 0-50% and AO2 50-100%.	0-100%	0%
1A 14	In loop sequence mode: Span PI sequence: upper limit of PI sequence. See 1A12 for explanation.	0-100%	100%
1A 15	In case the same alarm is selected in 1A07 and 1A08, the output will be set to the here defined level, in case the alarm activates.	0-100%	50%

Parameter reference analog output in fan mode

Parameter	Description	Range	Option
1A 12	If analog output is activated in fan module: select output level if fan speed 1 is active	0-100%	0%
1A 13	If analog output is activated in fan module: select output level if fan speed 2 is active	0-100%	50%
1A 14	If analog output is activated in fan module: select output level if fan speed 3 is active	0-100%	100%

Digital outputs

The digital outputs may be used to control fans, floating point actuators, single stages, or PWM outputs. In case an output is defined for more than one function the following priority applies in assigning physical outputs:

Priority	Physical outputs	DO1	DO2	DO3	DO4	DO5	DO6
1	2 fan outputs up to 3 speeds each:	FAN 1			FAN2		
		speed 1	speed 2	speed 3	speed 1	speed 2	speed 3
		1FA 0 ≥ 1	1FA 0 ≥ 2	1FA 0 = 3	2FA 0 ≥ 1	2FA 0 ≥ 2	2FA 0 = 3
2	3 floating point outputs:	FO1		FO2		FO3	
		open	close	open	close	open	close
3	6 digital or PWM outputs:	DO1	DO2	DO3	DO4	DO5	DO6

Note: FAN1 or FAN2 modules may as well be assigned to analog outputs. FAN1 controls AO1 and FAN2 controls AO2. In this case DO1 – DO3 for FAN1 and DO4 – DO6 for FAN2 will be free for other uses.

Available digital outputs for different X2 products

The number of outputs available for a device is defined in its product datasheet. Here is an overview over the X2 range:

		TCX2-40863	TCX2-23343	TCX2-24273	TCX2-14050	TCI2	SxC2	TRI2
FAN		FAN1 FAN2	FAN1	FAN1	FAN1	FAN1	FAN1	FAN1
DO1	FO1	Relays NO	Relays NO	Relays NO	Relays NO	Relays NO	Relays SPDT	Relays NO
DO2		Relays NO	Relays NO	Relays NO	Relays NO	Relays NO		Relays NO
DO3	FO2	Relays NO	Relays NO	Relays NO	Relays NO			
DO4		Relays NO	Relays NO	Relays NO	Relays NO			
DO5	FO3	Relays NO		TRIAC 5VA	Relays NO			
DO6		Relays NO		TRIAC 5VA				
DO7				Relays NO				

Digital output types

Relays NO: A relays contact normally open. It means without power this contact is open (not connected). If the relays is energized, the contact will close (connect).

Relays SPDT: A relays with a Single Pole Double Through contact. It means it has a normally open and a normally closed contact, with a common contact between them.

TRIAC A TRIAC is a semiconductor that controls the energy flow. It has no moving parts and is therefore useful for large switching cycles such as on pulsing outputs. The downside is that it can only switch AC voltage and tends to heat up when switching larger loads.

On all current switching devices, load must be observed. Do not exceed maximum limits under any circumstance.

Fan configuration

Most X2 products contain one fan module. The TCX2-40863 is the only one with 2 modules.

A fan module may be used to control fans with binary stages or analog steps, it may be controlled by PI- or digital sequences. It may as well be put into lead-lag mode.

Selecting the number of fan speeds

The fan module is enabled by defining the number of fan speeds used with F00. The range is between 0 and 3. With 0, the fan module is disabled.

If the fan module is assigned to binary stages, the digital outputs are controlled by the fan module. FAN1 controls DO1 up to DO3 and FAN2 DO4 up to DO6.

Fan module for analog outputs:

The fan module may as well be assigned to an analog output. In this case FAN1 controls AO1 and FAN2 AO2. This can be useful for EC (electronically commutated) type fans or if external switching modules are used instead of digital outputs.

To use an analog output instead of digital outputs, set F09 to ON and then specify output switching levels. The output switching levels define the analog output according each fan speed. The levels are set in the corresponding analog output settings (1A12 to 1A14, AO1) for Fan1 and (2A12 to 2A14, AO2) for Fan2.

Alarm or interlock selection

Every fan module may be activated or deactivated based on a series of alarms or interlocks. Alarms specify fault conditions of the control application; interlocks may be used to offer additional control options. Alarms operate as well when the controller is in off mode. Interlocks can be selected to be active in off mode or not.

To activate the fan module while an alarm is pending, the alarm may be specified in A07. The fan will always run in its highest speed if activated with an alarm or interlock.

To deactivate the output with a pending alarm, it may be set in A08. The fan will be switched off, if alarms are active in both A07 and A08.

Manual positioning

With manual positioning (F01=6), the fan may be controlled by time schedule or manually. Setting F02 to 0 will disable manual access through the operation terminal. The fan speed will then only be controlled by time schedule or through communication.

Startup and switch off delay.

During the startup or the switch off delay of a fan module all other control outputs assigned to control loop 1 for fan module 1 or control loop 2 for fan module 2, will be deactivated.

The idea is to give the fan extra time to run to prevent overheated electrical heating batteries for example or develop pressure before launching humidifiers.

Assigning the fan module to a control loop

The fan module is assigned to a control loop by setting F01 to 01 for loop 1, 02 for loop 2 and so forth. Only those control loops are available that are in the X2 product specs on the functional scope table. A maximum of 4 control loops is available. Assigning an output to a control loop, activates this loop. Assigning it to a control loop that is not existent will render the output unresponsive.

Once the output is assigned to a control loop, the sequence it responds to must be defined. This is done with F02. The fan may activate only during heating (F02 = 0) or cooling mode (F02 = 1) or both of them (F02 = 2). Additionally, there is the option to active only the low fan speed, if there is demand by only the heating (F02 = 3), cooling sequence (F02 = 4) or by both of them (F02 = 5). With demand-based loop control, the controller will check if a PI output assigned to its particular control loop and sequence is active. If so, the fan will run in low speed.

Binary or PI-sequence

Per default the fan speeds are selected by a binary sequence as defined under the control loop. If a fan speed is switched it depends on setpoint, switching span and hysteresis (see control loop for details).

By setting F10 = ON, the fan speeds are instead controlled by the PI sequence. With F11 the switching limit to activate fan speed 1 is set, with F12 fan speed 2 and with fan speed 3. Once the PI sequence has reached the herein defines threshold the fan will increase its speed. To reduce the speed the PI sequence needs to fall below the fan speed limit minus the fan speed hysteresis defined in F14.

	Fan off	Fan speed 1	Fan speed 2	Fan speed 3
PI increasing		PI > F11	PI > F12	PI > F13
PI decreasing	PI < (F11 - F14)	PI < (F12 - F14)	PI < (F13-F14)	

Behavior when setpoint is satisfied

Should the fan keep running when there is no more demand or should it switch off? This may be defined with parameter F03. These are its options:

- 0 = Fan off when no demand
- 1 = Lowest fan speed on when occupied. Fan switches off when not occupied.
- 2 = Lowest fan speed on in cooling mode. Fan switches off in heating mode.
- 3 = Lowest fan speed on when operation mode on, occupied and unoccupied (mold protection)

Maximum of loop 1 and loop 2

A fan module may be set to react on the maximum output value of two control loops. A combination of indirect and reverse sequences may be chosen. Applications for this function are CO2 and moisture control for ventilation and dehumidification. The sequences of loop 1 and loop2 may be chosen with F02

- | | |
|---------------------------------|--------------------------|
| 0 = Loop 1: Heating, Reverse | Loop 2: Heating, Reverse |
| 1 = Loop 1: Cooling, Direct | Loop 2: Heating, Reverse |
| 2 = Loop 1: Heating and Cooling | Loop 2: Heating, Reverse |
| 3 = Loop 1: Heating, Reverse | Loop 2: Cooling, Direct |
| 4 = Loop 1: Cooling, Direct | Loop 2: Cooling, Direct |
| 5 = Loop 1: Heating and Cooling | Loop 2: Cooling, Direct |

Manual override of fan speeds.

Automatic fan speeds can be overridden by keypad if manual mode is enabled (UP02 = ON). If fan can be manually disabled F08 need to be set to ON.

Activating the fan on state of controller

The fan may be run in its highest speed when the controller is in ON mode occupied or unoccupied (F01 = 5) or when it is in ON and Occupied mode (F01 = 7). As with assigning the fan to a loop, as well in this mode it can be defined if the fan should respond only in heating (F02 = 0) or only in cooling mode (F02 = 1) or independent of these modes (F02 = 2).

Should the fan only activate if there is demand on any control loop and any output of the controller there is the option to choose F02 = 3 for controller in heating mode, F02 = 4 when controller in cooling mode and F02 = 5 if any demand on the controller independent of mode.

Parameter reference for fan mode

Parameter	Description	Range	Default
1F 00	Select the number of fan speeds	0 – 3	0
1F 01	Selection of control loop for fan 0 = Fan output disabled, 1 = Loop 1 2 = Loop 2 3 = Loop 3 4 = Loop 4 5 = Operation mode (on, when operation mode is on, occupied and unoccupied) 6 = Manual positioning/time schedule controlled 7 = Occupied mode (on if occupied, off if unoccupied) 8 = Max of loop 1 and loop 2 9 = Lead-Lag for digital outputs: DO1 → DO2 → DO3	0 – 9	1
1F 02	Fan outputs select active sequence of control loop if F01=1-4 or select active state of controller if F01=5,7: 0 = if 1F01 = 1-4: Heating, Reverse 1 = if 1F01 = 1-4: Cooling, Direct 2 = if 1F01 = 1-4: Heating and Cooling (4 pipe system) 3 = if 1F01 = 1-4: Demand based on Heating, Reverse 4 = if 1F01 = 1-4: Demand based on Cooling, Direct 5 = if 1F01 = 1-4: Demand based on Heating and Cooling When F01 = 6: Manual positioning/time schedules 0 = Allow time schedule only 1 = Allow manual positioning and time schedules When F01 = 8: Maximum of output of loop 1 and loop 2 0 = Loop 1: Heating, Reverse Loop 2: Heating, Reverse 1 = Loop 1: Cooling, Direct Loop 2: Heating, Reverse 2 = Loop 1: Heating and Cooling Loop 2: Heating, Reverse 3 = Loop 1: Heating, Reverse Loop 2: Cooling, Direct 4 = Loop 1: Cooling, Direct Loop 2: Cooling, Direct 5 = Loop 1: Heating and Cooling Loop 2: Cooling, Direct	0 – 5	2
1F 03	Fan behavior when setpoint is satisfied if F01 = 1-8: 0 = Fan off when no demand 1 = Lowest fan speed on when occupied. Fan switches off when not occupied. 2 = Lowest fan speed on in cooling mode. Fan switches off in heating mode. 3 = Lowest fan speed on when operation mode on, occupied and unoccupied (mold protection)	0...3	0
1F 04	Startup delay: Delay before starting fan. Other control outputs connected to the same control loop are disabled during startup delay.	00:00s...15:10h MM:SS...HH:MM	00:00s MM:SS
1F 05	Switch off delay: If the fan should extend its run time after the control valves are closed. Set the time to extend fan run time after control outputs switch off.	00:00s...15:10h MM:SS...HH:MM	00:00s MM:SS
1F 06	Choose alarms to set fan to 100%. In case of conflicting alarms, the fan will be switched off. See section alarms for further details. ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽
1F 07	Choose alarms to switch off fan. See section alarms for further details. ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽
1F 08	Manual fan switch off mode When F01 = 1-4 or 6: Manual switch off of fan OFF = Fan may not be switched off manually while assigned to control loop ON = Fan can be set to off manually while assigned to control loop	ON/OFF	OFF
1F 09	Choose output DO or AO: OFF = DO, ON = AO FAN1: OFF = DO1–DO3, ON = AO1 FAN2: OFF = DO4–DO6, ON = AO2 Note: In case F09 = ON, analog output signal must be defined with analog output parameters 1A02 to 1A06 for fan1 or 2A02 to 2A06 for fan2.	ON/OFF	OFF
1F10	Use PI sequence as input for fan (not binary sequence)	ON/OFF	OFF
1F11	Limit for fan speed 1 if F10 = ON Note: Shared parameter: Changing this value, will as well change F15.	0...100%	20%
1F12	Limit for fan speed 2 if F10 = ON Note: Shared parameter: Changing this value, will as well change F16.	0...100%	50%
1F13	Limit for fan speed 3 if F10 = ON Note: Shared parameter: Changing this value, will as well change F17.	0...100%	80%
1F14	Hysteresis for fan speeds if F10 = ON	0...100%	15%

Lead-lag configuration

The fan module may be used to rotate a group of digital outputs based on their run time. This is commonly used with pumps or where multiple devices control one function.

The function of lead – lag module

The lead lag module allows up to 3 stages to run one or two at the time. By using the A07 of the lead-lag module, additional stages may be activated for example if demand is not met. With A08, the module may be deactivated.

The lead-lag module may be activated by setting F01 = 9. The number of lead – lag stages is defined in F00.

The number of simultaneous active outputs is set with F02 (1 or 2).

Following options are possible:

	F00	F02
Lead – Lag	2	1
Lead – Lag – Lag	3	1
Lead – Lead – Lag	3	2

Assigning digital outputs

Only digital outputs may be assigned to the lead lag module. The digital outputs must be assigned to the lead – lag module by setting their parameter d01 to 10. In d02 the lead – lag module and its function may be selected. Option 4...7 only apply if 2 fan modules are present. These are the options for d02:

- 0 = module 1 not demand based
- 1 = module 1, if demand on loop 1, heating only
- 2 = module 1, if demand on loop 1, cooling only
- 3 = module 1, if demand on loop 1 heating & cooling
- 4 = module 2 not demand based
- 5 = module 2, if demand on loop 2, heating only
- 6 = module 2, if demand on loop 2, cooling only
- 7 = module 2, if demand on loop 2 heating & cooling

Setting the running time for each stage

In F15 the running time of each stage must be set. The time format is defined with F03 for minutes, hours or days. After a stage was active for the time defined in F15, the stage will be deactivated and the next stage will be activated.

Allowing manual control

Manual control is allowed with F08. This gives the user the option to select the current active stage manually through the operating terminal. While manual control is active, automatic rotation is suspended. Automatic rotation may only be resumed by interaction with the operation terminal.

Status verification

The current active output may now be seen in F16, the current running time since the last switch is visible with F17. These settings and times may be changed through access to parameters.

Demand based operation

The digital outputs assigned to the lead lag module can now have lag and disable interlocks assigned to them.

To do this a maximum delay alarm may be assigned to an interlock, this interlock may then be enabled under F07. For each active interlock an additional stage will get activated.

Supervision of each output

A disable alarm may be assigned to a digital output configured as a lead – lag stage. If this alarm disables the output, the lead – lag module will instead activate the standby output or if non defined, the next available stage.


Stages may be chosen in the digital output section with d03: These are the options:

- 0 = standby
- 1 = stage 1
- 2 = stage 2
- 3 = stage 3


Switching between stages

After the run time defined in F15 has expired or an assigned output was disabled by alarm, the next available stage will be activated. Note individual delays may be assigned to each output. For the lead lag stages it is done in the following process:

For one active stage:

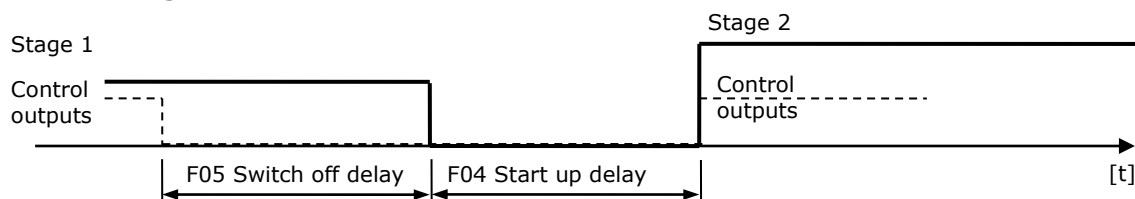

For two active stages:

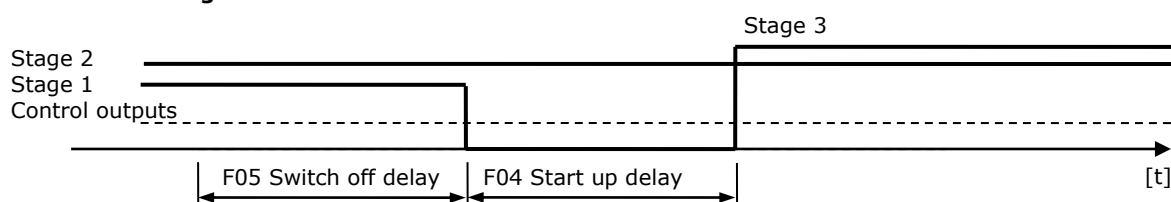

Parameter reference for lead-lag mode

Parameter	Description	Range	Default
1F 00	Total number of lead/lag stages	0 – 3	0
1F 01	Selection of control loop for fan 9 = Lead-lag configuration: OUT1 → OUT2 → OUT3	0 – 9	1
1F 02	In lead-lag mode: Define number of simultaneous active outputs. If set to 0 or 1, then only one output will be active at the same time, if set to 2 than 2 outputs will be active at each time. For this to work at least 3 outputs must be activated.	0 – 5	2
1F 03	In lead-lag mode (F01 = 9): Step length of F15 0 = Steps defined in F15 are counted in minutes 1 = Steps defined in F15 are counted in hours 2 = Steps defined in F15 are counted in days (24h) PS: set to 0 for testing purpose.	0...3	0
1F 04	Startup delay: Delay before starting new stage. For single lead only: Other outputs assigned to same control loop are disabled during delay.	00:00s...15:10h MM:SS...HH:MM	00:00s MM:SS
1F 05	Switch off delay: Delay while switching off old stage. For single lead only: Other outputs assigned to same control loop are disabled during delay.	00:00s...15:10h MM:SS...HH:MM	00:00s MM:SS
1F 06	Choose interlocks to activate an additional stage to the lead lag module. For each active interlock one more stage will be added (up to 3 additional). ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽
1F 07	Choose alarms to switch off fan. See section alarms for further details. ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽
1F 08	Manual control of output rotation When F01 = 9: lead-lag mode OFF = Lead-lag stages may not be controlled manually ON = Lead-lag stages can be controlled manually Note: setting an output to manual while in lead lag mode, will interrupt output rotation indefinite until set back to auto mode.	ON/OFF	OFF
1F15	In lead lag mode (F01 = 9): Running time in minute, hours or days. (Set with F03). While in auto mode, the controller will switch to the next output after this time has expired.	0...255	50
1F16	If F01 = 9: Current active output (1-3)	0-3	-
1F17	If F01 = 9: Run time in minute, hours or days (set with F03) for current of output since last switch.	0....255	-

Note: other Fxx parameters not listed may be ignored and do not apply to the module in lead lag mode.

Floating output (d00 = ON)

3 point floating actuators functional description

With 3-point floating we understand an actuator that has an opening and a closing contact. While the opening contact is activated the actuator opens and when the closing contact is active it closes. If no contact is active it keeps the current position. Both contacts must not be active at the same time. The actuator should have a more or less constant running time between fully open and fully closed. A 3-point floating output therefore always combines 2 digital outputs.

Activating 3-point mode

To activate 3-point floating mode, d00 of an odd numbered digital output needs to be set to ON. This output and the following even numbered one will now be combined in a floating output. The odd one is the closing and the even one the opening output.

As the output may frequently open and close TRIAC outputs are preferred for 3-point control.

Running time and position synchronization

The running time specifies the time required for the actuator to run from fully closed to fully open or vice versa. The controller counts the seconds the actuator was running in open or close direction and from this calculates the position. Ideally the actuator has a constant running time. In most cases after a while the actual position might be somewhat different to the actual position. Therefore, whenever the actuator reaches a fully open or fully closed position, the run time will be extended by 100% in that direction (opening if fully opened and closing if fully closed). This way a clear position is then guaranteed. After a power failure the actuator will first move into a fully closed position and then open again.

Thus, the actuator must be able to be energized when in its end position for the duration of a full cycle.

Switching difference required for floating output to move

In order to reduce the number of switching cycles for the actuator and to extend the lifetime of the controller and actuator it is possible to define after what kind of change the actuator should move. This change is calculated in the number of seconds the actuator will be running for the next position compare to the current position it is in. This way the actuator won't run for just a one or 2 second step.

Output based on controller state

The floating output may as well be controlled by the state of the controller. To do this d01 must be set to 7. The behavior can then be set in d02. These are the options:

- 0= ON if controller operation state is ON
- 1= ON while demand on any output
- 2= ON while controller in heating mode
- 3= ON while controller in cooling mode
- 4= ON if controller state is occupied, OFF if unoccupied

D03 controls the influence of the OFF, disabled and occupied state on the output. The controller is in disabled mode if it was deactivated by the auxiliary function FU1.

- 0 = output is off, when operation mode is off
- 1 = output is off, when operation mode is disabled
- 2 = operation mode has no effect on output

Alarm or interlock selection

Every output may be activated or deactivated based on a series of alarms or interlocks. Alarms specify fault conditions of the control application; interlocks may be used to offer additional control options. Alarms operate as well when the controller is in off mode. Interlocks can be selected to be active in off mode or not.

To activate the output while an alarm is pending, select the alarm in d07. To deactivate the output with the alarm pending, select it in d08. The output will be switched off, if alarms are active in both d07 and d08.

Manual positioning

With manual positioning (d01=6), the output may be controlled by time schedule or directly through a setpoint in 0.5% steps. Setting d02 to 0 will disable access to manual positioning through the operation terminal. The output will then only be controlled by time schedule or through communication.

Assigning an output to a control loop

With parameter d01 choose the control loop the output should respond to. Only those control loops are available that are in the X2 product specs on the functional scope table. A maximum of 4 control loops is available. Assigning an output to a control loop, activates this loop.

Selecting the sequence

How the output should react to the loop is selected with A01. These are the options:

- 0= Respond to heating/reverse PI-sequence only
- 1= Respond to cooling/direct PI sequence only
- 2= Respond to both heating/reverse and cooling/direct sequences (4 pipe)
- 3= 100% on if loop in heating mode: Reversing valve mode
- 4= 100% on if loop in cooling mode: Reversing valve mode

Maximum of loop 1 and loop 2

A floating output may be set to react on the maximum output value of two control loops by setting d01 = 8.

A combination of indirect and reverse sequences may be chosen. Applications for this function are CO2 and moisture control for ventilation and dehumidification. The sequences of loop 1 and loop2 may be chosen with d02

0 = Loop 1: Heating, Reverse	Loop 2: Heating, Reverse
1 = Loop 1: Cooling, Direct	Loop 2: Heating, Reverse
2 = Loop 1: Heating and Cooling	Loop 2: Heating, Reverse
3 = Loop 1: Heating, Reverse	Loop 2: Cooling, Direct
4 = Loop 1: Cooling, Direct	Loop 2: Cooling, Direct
5 = Loop 1: Heating and Cooling	Loop 2: Cooling, Direct


Special functions of the floating output

Dehumidification

To activated the dehumidification function for 4-pipe systems, the following setup is required:

4. Loop 1 has to be the temperature loop, assign the temperature input to loop 1.
5. Loop 2 has to control relative humidity
6. On the cooling output, activate special functions (A00 = 5) and Dehumidification (A01 = 00).

The floating cooling output will now activate cooling either if temperature or humidity is too high. In case humidity is too high the room will get cooler, which will trigger the heating mode. Cool air contains less humidity per m3 than warm air. Therefore, when the air gets heated up again, the humidity will be reduced. It is important for this system to work that the cooling coil is mounted in front of the heating coil.

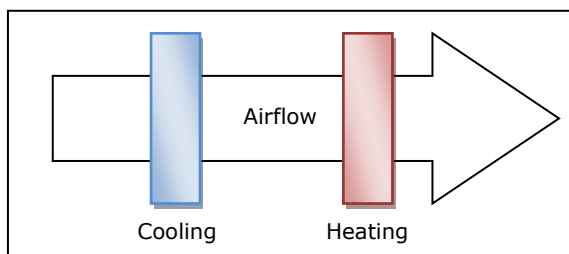

Free heating/free cooling settings


The free heating/cooling principle is handled under special functions FU5. Here just a quick summary:

With FU5 the outdoor and indoor climatic condition is compared and if possible, the outdoor and return air damper are both modulated in order to use outside air to reduce heating or cooling costs.

If A01 is set the 1, the output will function as an outdoor damper. Which means for fresh air the output will modulate to 100%. If A01 is set to 2, it will work as a return air damper and it thus works inverse to the outdoor damper. For fresh air, it will go to 0%.

Use as proportional function for inputs

The position of a floating output may be based on an input value. The input is selected with d02. Two limits define the proportional range: A minimum (d14) and a maximum limit (d15). Depending on these limits the output may be controlled through a sinking or a rising input signal.

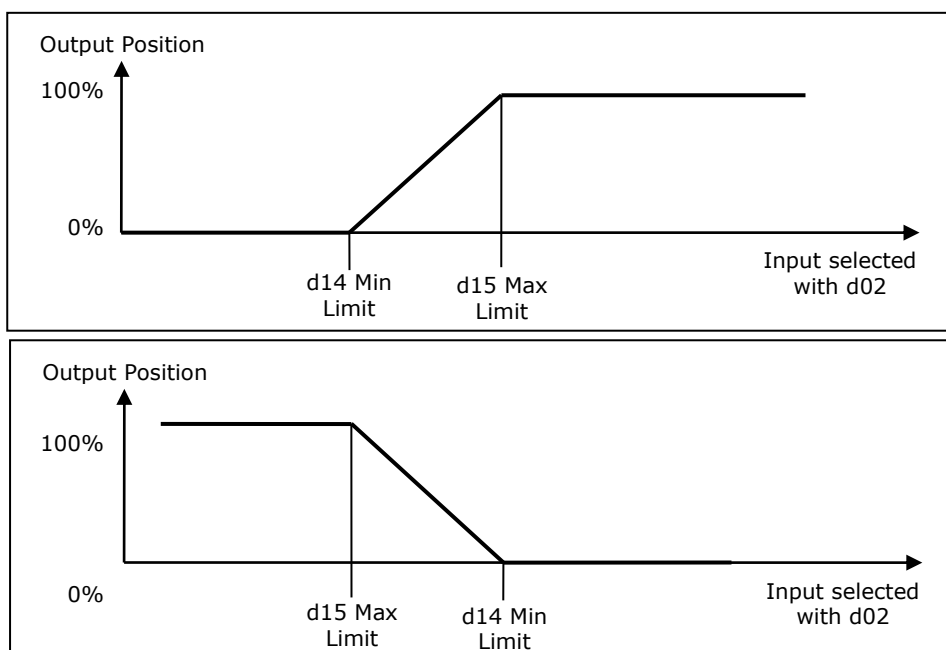

Parameter reference for floating output configuration

Parameter	Description	Range	Default
1d 00	Enable digital or floating point output 1d00 = OFF: DO1, DO2 are two digital/PWM outputs 1d00 = ON : DO1, DO2 is one floating point output (DO1 open, DO2 close)	ON/OFF	OFF
1d 01	Select control loop or special function (0= OFF) 1 = Loop 1 2 = Loop 2 3 = Loop 3 4 = Loop 4 5= Special functions (Dehumidification, Economizer, etc.) 6= Manual positioning/time schedule controlled 7= Controller state functions 8 = Max of loop 1 and loop 2 9 = Proportional function: Output assigned to an input	0-9	0
1d 02	When 1d01=1-4 configure output: 0= Heating/reverse 1= Cooling/direct 2= Heating and cooling (2 pipe) 3= 100% on if loop in heating mode: Reversing valve mode 4= 100% on if loop in cooling mode: Reversing valve mode	0-15	0
	When 1d01=5, select function: 0 = Dehumidification: Max of loop 1 cooling and loop 2 dehumidifying sequence. 1 = Economizer: Outdoor air damper actuator. See 5FU for more details. 2 = Economizer: Return air damper actuator. See 5FU for more details.		
	When 1d01 = 6 Manual positioning/time schedules 0 = Allow time schedule only 1 = Allow manual positioning and time schedules		
	When 1d01=7 select state functions: 0= ON if controller operation state is ON 1= ON while demand on any output 2= ON while controller in heating mode 3= ON while controller in cooling mode 4= ON if controller state is occupied, OFF if unoccupied		
	When 1d01 = 8 Maximum of output of loop 1 and loop 2 0 = Loop 1: Heating, Reverse Loop 2: Heating, Reverse 1 = Loop 1: Cooling, Direct Loop 2: Heating, Reverse 2 = Loop 1: Heating and Cooling Loop 2: Heating, Reverse 3 = Loop 1: Heating, Reverse Loop 2: Cooling, Direct 4 = Loop 1: Cooling, Direct Loop 2: Cooling, Direct 5 = Loop 1: Heating and Cooling Loop 2: Cooling, Direct		
	When 1d01 = 9: Select input for proportional function. Minimum and maximum limits are defined with 1d14 and 1d15: Input according hardware: 0 = disabled, 1 = UI1, 2 = UI2, etc.		
1d 03	When 1d01=6, 7 and 9: Select reaction on on/off/disable operation mode 0 = output is off, when operation mode is off 1 = output is off, when operation mode is disabled 2 = operation mode has no effect on output	0-6	0
1d 04	Running time (Time for actuator to run from fully open to fully close)	00:00s...15:10h MM:SS...HH:MM	00:00s MM:SS
1d 05	Switching difference for floating point signal: to reduce the switching frequency of the actuator. The actuator will only move if the running time to move the actuator from its current position to the target position is larger than this parameter.	00:00s...15:10h MM:SS...HH:MM	00:05s MM:SS
1d 07	Choose alarm to set output to 100% (output 0% on conflicting alarms) ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽ ▽
1d 08	Choose alarm to set output to 0% (output 0% on conflicting alarms) ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽ ▽
1d 14	Proportional function based on input (1d01 = 9): Minimum limit : If 1d15 > 1d14: when input value is above this limit, output starts to increase. If 1d15 < 1d14: when input value is below this limit, output starts to increase. Note: shared parameter: changing this value, will change as well 1d12	0...100%	0%
1d 15	Proportional function based on input (1d01 = 9): Maximum limit : If 1d15 > 1d14: when input value is above this limit, output is at 100%. If 1d15 < 1d14: when input value is below this limit, output is at 100%. Note: shared parameter: changing this value, will change as well 1d13	0...100%	0%

Digital output (d00=OFF)

Activating digital mode

To activate digital mode, d00 needs to be set to OFF AND the output may not be part already assigned to a floating or fan output (See chapter configuration of digital outputs). In digital mode, the output may be configured to switch on and off a single device such as a valve with a spring return actuator or a heating element. By defining a PWM cycle time, the output may as well be pulsed using Pulse Width Modulation (PWM). See the next chapter for related settings. For digital mode to be active the cycle time set in d06 MUST be 0. Anything but 0 will put the output in PWM mode.

Switching delays

The switch off delay d04 defines the time the output signal needs to be off, before output switches off.

The switch on delay d05 defines the time the output signal needs to be on, before output switches on.

Note: with state functions, all control outputs are disabled during switch ON delay

Alarm or interlock selection

Every output may be activated or deactivated based on a series of alarms or interlocks. Alarms specify fault conditions of the control application; interlocks may be used to offer additional control options. Alarms operate as well when the controller is in off mode. Interlocks can be selected to be active in off mode or not.

To activate the output while an alarm is pending, select the alarm in d07. To deactivate the output with the alarm pending, select it in d08. The output will be switched off, if alarms are active in both d07 and d08.

Manual positioning

With manual positioning (d01=6), the output may be controlled by time schedule or directly through a setpoint in ON/OFF for digital mode or 0.5% steps for PWM mode. Setting d02 to 0 will disable access to manual positioning through the operation terminal. The output will then only be controlled by time schedule or through communication.

Switching based on controller state

The digital output may as well be controlled by the state of the controller. To do this d01 must be set to 7. The behaviour can then be set in d03. These are the options:

- 0= ON if controller operation state is ON
- 1= ON while demand on any output
- 2= ON while controller in heating mode
- 3= ON while controller in cooling mode
- 4= ON if controller state is occupied, OFF if unoccupied

Parameter d03 controls the influence of the OFF, disabled and occupied state on the output. The controller is in disabled mode if it was deactivated by the auxiliary function FU1. One application for this function is the light switching option. An input may be assigned to an output and control it. The output may be part of a zone controller that controls the climate of a zone. The climate control may be deactivated, but the light should still work while the zone is occupied. Once the zone is unoccupied, the light should switch off. The occupancy may be used to disable the controller. Therefore, the setup would work to use d03 = 1.

- 0 = output is off, when operation mode is off
- 1 = output is off, when operation mode is disabled
- 2 = operation mode has no effect on output

Assigning an output to a control loop

With parameter d01 choose the control loop the output should respond to. Only those control loops are available that are in the X2 product specs on the functional scope table. A maximum of 4 control loops is available. Assigning an output to a control loop, activates this loop.

Selecting the sequence

How the output should react to the loop is selected with A01. These are the options:

- 0 = Respond to heating/reverse PI-sequence only
- 1 = Respond to cooling/direct PI sequence only
- 2 = Respond to both heating/reverse and cooling/direct sequences (4 pipe)
- 3 = On if loop in heating mode: Reversing valve mode
- 4 = On if loop in cooling mode: Reversing valve mode
- 5 = On while demand in heating or cooling mode

Switch digital output based on PI-sequence

This Feature allows a direct response to PI output value. The output may be switched based on PI sequence rather than binary sequence of control loop. To do this set d11 = ON and define switching limits with d12 and d13. D12 is the activating limit and d13 is the deactivating limit. If d12 > d13, the output will activate if the PI value is > d13 and it will deactivate if PI is below d13. If d13 > d12, the output will activate if PI value is < d12 and deactivate if > d13.

Maximum of loop 1 and loop 2

A floating output may be set to react on the maximum output value of two control loops by setting d01 = 8.

A combination of indirect and reverse sequences may be chosen. Applications for this function are CO2 and moisture control for ventilation and dehumidification. The sequences of loop 1 and loop2 may be chosen with d02

- | | |
|---------------------------------|--------------------------|
| 0 = Loop 1: Heating, Reverse | Loop 2: Heating, Reverse |
| 1 = Loop 1: Cooling, Direct | Loop 2: Heating, Reverse |
| 2 = Loop 1: Heating and Cooling | Loop 2: Heating, Reverse |
| 3 = Loop 1: Heating, Reverse | Loop 2: Cooling, Direct |
| 4 = Loop 1: Cooling, Direct | Loop 2: Cooling, Direct |
| 5 = Loop 1: Heating and Cooling | Loop 2: Cooling, Direct |


Special functions of the binary output

Dehumidification

To activate the dehumidification function for 4-pipe systems, the following setup is required:

1. Loop 1 has to be the temperature loop, assign the temperature input to loop 1.
2. Loop 2 has to control relative humidity
3. On the cooling output, activate special functions (A00 = 5) and Dehumidification (A01 = 00).

The floating cooling output will now activate cooling either if temperature or humidity is too high. In case humidity is too high the room will get cooler, which will trigger the heating mode. Cool air contains less humidity per m³ than warm air. Therefore, when the air gets heated up again, the humidity will be reduced. It is important for this system to work that the cooling coil is mounted in front of the heating coil.

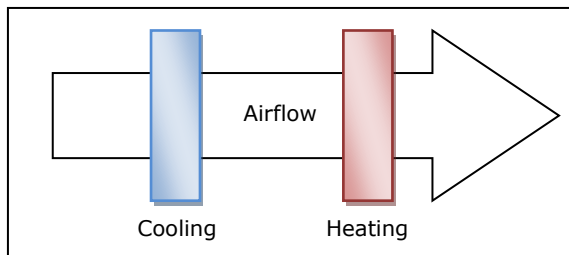

Free heating/free cooling settings

The free heating/cooling principle is handled under special functions FU5. Here just a quick summary:

With FU5 the outdoor and indoor climatic condition is compared and if possible, the outdoor and return air damper are both modulated in order to use outside air to reduce heating or cooling costs.

If A01 is set to 1, the output will function as an outdoor damper. Which means for fresh air the output will modulate to 100%. If A01 is set to 2, it will work as a return air damper and it thus works inverse to the outdoor damper. For fresh air, it will go to 0%.

Run time counter (d09)

Run time counters can be used to sum up the accumulated runtime of a device connected to a digital output. The counter runs up to 65536 hours and saves the run time every hour to EEPROM. The run time hours and the status of the digital output will be displayed when stepping through the available display pages with the operation terminal.

Maintenance alarm (d10)

The run time counter may be used to trigger a maintenance alarm once a certain run time is exceeded. Select limit to trigger a maintenance alarm. The limit is selectable in steps of 256 hours. Setting the time to 0 disables the maintenance alarm. Note: An alarm must be assigned to maintenance alarm by setting AL0 = 3 on one alarm.

Switch digital output based on input value

Activate the function with d01 = 9. Select the input with d02 and define the switching limits with d14 and d15. Reversing the switching limits, will reverse the switching function of the output.

Note: The switch based on inputs is as well used for the light switch function.

Lead – Lag function

The lead – lag function is defined in the fan module. A digital output can be assigned to a lead – lag function. Either as stage that will be rotated based on the settings of the function or as standby output. The standby output will be activated when a stage output fails. Only one standby output can be activated per lead – lag function.

Each output assigned to a stage may be disabled using interlocks or alarms. In this case it is disabled, the lead – lag function activates the next stage.

Parameter reference for digital output configuration

Parameter	Description	Range	Default
1d 01	Select control loop or special function (0= OFF) 1 = Loop 1 2 = Loop 2 3 = Loop 3 4 = Loop 4 5= Special functions (Dehumidification, Economizer, etc.) 6= Manual positioning/time schedule controlled 7= Controller state functions 8 = Max of loop 1 and loop 2 9 = Digital output assigned to an input 10 = Digital output assigned to lead/lag module	0-10	0
1d 02	When 1d01=1-4 configure output in loop mode: 0= Heating/reverse 1= Cooling/direct 2= Heating and cooling (2 pipe) 3= On if loop in heating mode: Reversing valve mode 4= On if loop in cooling mode: Reversing valve mode 5= On while demand in heating or cooling mode	0-15	0
	When 1d01=5, select function: 0 = Dehumidification: Max of loop 1 cooling and loop 2 dehumidifying sequence. 1 = Economizer: Outdoor air damper actuator. See 5FU for more details. 2 = Economizer: Return air damper actuator. See 5FU for more details.		
	When 1d01 = 6 Manual positioning/time schedules 0 = Allow time schedule only 1 = Allow manual positioning and time schedules		
	When 1d01=7 select state functions: 0= ON if controller operation state is ON 1= ON while demand on any output 2= ON while controller in heating mode 3= ON while controller in cooling mode 4= ON if controller state is occupied, OFF if unoccupied NEW!		
	When 1d01 = 8 Maximum of output of loop 1 and loop 2 0 = Loop 1: Heating, Reverse Loop 2: Heating, Reverse 1 = Loop 1: Cooling, Direct Loop 2: Heating, Reverse 2 = Loop 1: Heating and Cooling Loop 2: Heating, Reverse 3 = Loop 1: Heating, Reverse Loop 2: Cooling, Direct 4 = Loop 1: Cooling, Direct Loop 2: Cooling, Direct 5 = Loop 1: Heating and Cooling Loop 2: Cooling, Direct		
	When 1d01 = 9: Select input. Switching limits are defined with 1d14 and 1d15: Input according hardware: 0 = disabled, 1 = UI1, 2 = UI2, etc.		
	When 1d01 = 10: Select module for lead/lag module. 0 = module 1 not demand based 1 = module 1, if demand on loop 1, heating only 2 = module 1, if demand on loop 1, cooling only 3 = module 1, if demand on loop 1 heating & cooling 4 = module 2 not demand based 5 = module 2, if demand on loop 2, heating only 6 = module 2, if demand on loop 2, cooling only 7 = module 2, if demand on loop 2 heating & cooling		
1d 03	When 1d01=1-4: Select sequence 0 = Operation mode, Output is active when mode is active 1 = binary mode: Stage 1 to 6 = binary mode: Stage 6	0-6	0
	When 1d01=6, 7 and 9: Select reaction on on/off/disable operation mode 0 = output is off, when operation mode is off 1 = output is off, when operation mode is disabled 2 = operation mode has no effect on output		
	When 1d01=10 Select stages for lead – lag module 0 = standby (only for lead – lag module) 1 = output 1 2 = output 2 3 = output 3		
1d 04	Switch off delay: Time the output signal needs to be off, before output switches off Special function in PWM mode, see next chapter	00:00s...15:10h MM:SS...HH:MM	01:30
1d 05	Switch on delay: Time the output signal needs to be on, before output switches on. With state functions, all control outputs are disabled during switch ON delay. Special function in PWM mode, see next chapter	00:00s...15:10h MM:SS...HH:MM	00:05
1d 06	Activate PWM, set cycle time, seconds (>0 activates, 0 deactivates PWM and enables digital mode)	00:00s...15:10h MM:SS...HH:MM	00:00

Digital output configuration continued

Parameter	Description	Range	Default
1d 07	Choose alarm to set output to ON (output OFF on conflicting alarms) ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽
1d 08	Choose alarm to set output to OFF (output OFF on conflicting alarms) ▽▽▽▽▽▽▽▽ Alarm: 1 2 3 4 5 6 7 8	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽
1d 09	d09 and d10 only function if output is in digital mode: OFF: Do not count run time and reset counter to 0 ON: Count run time in hours while a digital output is switched on	ON/OFF	OFF
1d 10	Trigger function alarm when run time is reached (may be used as maintenance alarm), 0 = alarm disabled	0...12750h	0
1d 11	Uses PI sequence instead of binary sequence of PI loop Note: changing this value, will automatically as well change 1d13.	ON/OFF	OFF
1d 12	Activation limit if based on PI (1d01 = 1-4 AND 1d11 = ON), if value above this limit, output switches on. Note: shared parameter: changing this value, will change as well 1d14	0...100%	50%
1d 13	Deactivation limit if based on PI (1d01 = 1-4 AND 1d11 = ON), if value below this limit, output switches off. Note: shared parameter: changing this value, will change as well 1d15	0...100%	40%
1d 14	Activation limit if based on UI (1d01 = 9: if value is above this limit, output switches on. Note: shared parameter: changing this value, will change as well 1d12	0...100%	50%
1d 15	Deactivation limit if based on UI (1d01 = 9: if value is below limit, output switches off. Note: shared parameter: changing this value, will change as well 1d13	0...100%	10%


Digital output in PWM configuration (d00=OFF)(d06 ≠ 0)

Activating Pulse Width Modulation (PWM)

Pulse width modulation (PWM) mode is enabled once a cycle time is defined in d06. In PWM mode the digital output will be switched on/off once per cycle. The on and off times are calculated according to the PI settings of the respective control sequence. It is not recommended to use cycle times below 10 Minutes for relays outputs as the lifetime of the relays will be shortened with frequent switching. The settings are identical to the output in digital configuration. Only difference is for parameter d04 and d05:

Minimum and maximum limits for PWM outputs.

Using d04 and d05 the on time of the PWM signal may now be limited to the value defined with d05. After the limitation has been exceeded the output will cycle with a frequency that is defined with d04. Setting d05 = 00:00 will deactivate the limitation function.

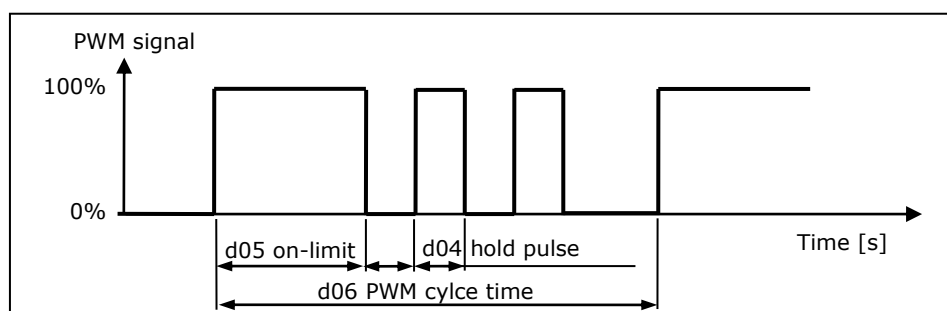

Parameter	Description	Range	Option
1d 04	In PWM mode: Hold pulse if on-limit is reached. This feature is used to reduce energy consumption for example for wax type valves where the wax is heated to open the valve.	00:00s...15:10h MM:SS...HH:MM	01:30
1d 05	In PWM mode: Energy-limiter: Maximum ON time for PWM outputs, Output will be limited to be active during the time indicated here. After the value is exceeded, it will switch on and off based on frequency defined with 1d04. Note: setting this value to 00:00 deactivates the time limitation.	00:00s...15:10h MM:SS...HH:MM	00:05
1d 06	Activate PWM, set cycle time, seconds (>0 activates, 0 deactivates)	00:00s...15:10h MM:SS...HH:MM	00:00

Auxiliary functions

1FU: Enable/disable of controller

Summary

The controller may be switched off/switched on based on an input. It may be disabled based on an alarm condition. The alarm status register may be used as OR-function where the controller is only allowed to function when all monitored conditions are within their correct value.

If it was disabled through an alarm condition it needs to be re-enabled manually, through an input condition on FU1 or through time schedules.

Priority

1. Disable through alarms 1Fu7
2. Enable through input condition selected in 1Fu0
3. Time schedules
4. Manual on/off

Manual override

Once an input is assigned to the 1FU0, it may only be manually controlled if manual override is enabled with 1FU1. During manual override, the hand symbol is shown on the operation terminal.

This function is required, where the controller needs to create the allowed input condition for example by running a fan while differential pressure is used as enable condition.

Delays

The enable delay 1FU2 defines the time required for correct conditions to apply before the controller will activate.


The disable delay 1FU3 allows the controller to run in manual even the condition for enable are not met. If these conditions are still not met after the delay expires, the controller will turn off again.

Signal limits

There are two limits involved for enabling the controller. Depending on parameter 1FU4 they behave differently.

1FU4 = OFF: When limit 2 (e.g. 60) is larger than limit 1 (e.g. 40) the controller will be enabled when the input value is greater than limit 2 (e.g. 60) and disabled when the input value is below limit 1 (e.g. 40). When limit 2 (e.g. 40) is lower than limit 1 (e.g. 60) the controller will be enabled when the input value is lower than limit 1 (e.g. 40) and disabled when the input value is above limit 2 (e.g. 10).

1FU4 = ON: When limit 2 (e.g. 60) is above limit 1 (e.g. 40) the controller will be enabled when the input value is between limit 1 (e.g. 40) and limit 2 (e.g. 60). When limit 2 (e.g. 40) is below limit 1 (e.g. 60) the controller will be enabled when the input value is below limit 2 (e.g. 40) or above limit 1 (e.g. 60).

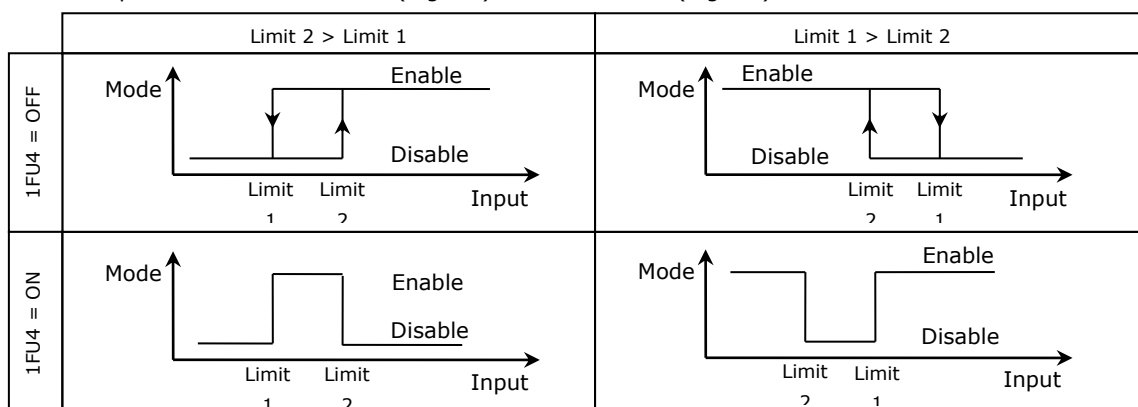

1Fu Parameter reference

Parameter	Description	Range	Option
1Fu 0	Select input for remote enable function: Input according hardware: 0 = disabled, 1 = UI1, 2 = UI2, etc.	0...10	0
1Fu 1	Manual override permitted (without waiting for delay).	ON/OFF	OFF
1Fu 2	Enable delay (seconds) = the time the enable condition must be met before the controller is enabled	00:00s...15:10h MM:SS...HH:MM	05:00 MM:SS
1Fu 3	Disable delay (seconds) = the time the disable condition must be met before the controller is disabled	00:00s...15:10h MM:SS...HH:MM	05:00 MM:SS
1Fu 4	Range of limits (See table below for graphical explanation):	ON/OFF	OFF
1Fu 5	Input limit 1 (See 1Fu 4 for description)	per input range	10
1Fu 6	Input limit 2 (See 1Fu 4 for description)	Per input range	90
1Fu 7	Disable controller in case of selected alarms are active Note: Switch-off delays still apply when an alarm becomes active	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽

2Fu: Control occupied and unoccupied mode

Summary

This function controls the occupied mode with one or two inputs. This operation mode may be controlled straight forward with one input such as a key card or conditional by using one input as an enable input such as a door contact and the other one as a conditional input such as a presence sensor. In order to use occupied/unoccupied mode UP06 must be set to ON.

This function only switches the operation mode. The behavior of each control loop in unoccupied mode must be defined with L07 and L27 in each loop concerned.


Activation

Activate function by selecting the input to control occupied/unoccupied mode.

Input limits

Set the limits (2FU2 and 2FU3) to the input values that indicate when the room is occupied or unoccupied. The input used may be straight forwards such as a key card switch or a motions sensor, or it can be more sophisticated such as a CO2 sensor or door contacts.

Following are the occupied/unoccupied mode switch possibilities:

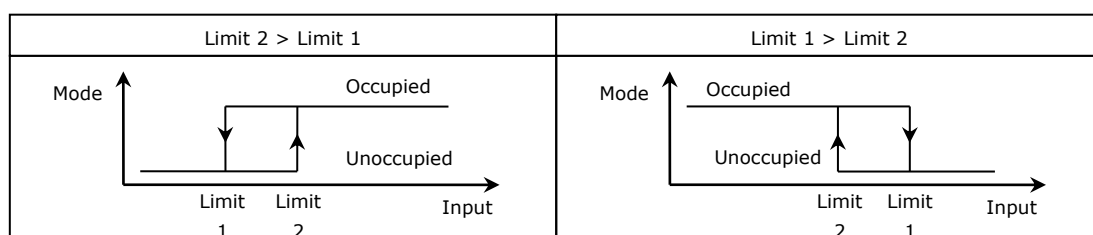

Fool-proof presence detection

For door contact applications: The use of a key switch may be avoided by using a door contact and a motion detector. The motion detectors should be placed in each room in order to detect the presence of an occupant.

The room will automatically go to unoccupied mode once the door is opened and closed again and if there is no movement in the room after the door closes. The delay of the motion detector MUST therefore be less than the unoccupied mode delay defined with 2FU1; else the controller will stay in occupied mode. Ideal is to keep the delay of the motion detector output to below 30 seconds.

The moment there is movement in the room or the door is opened; the room will go to occupied mode again and will not go to unoccupied unless the door is opened and closed again.

Disabling occupied mode with interlocks

With 2FU5 interlocks may be identified that prevent occupied mode. These interlocks can be connected to door or window contacts. This can be used to prevent the cooling to operate while a window is open in the room.

2Fu Parameter reference

2Fu 0	Select input for remote occupied – unoccupied change function: Input according hardware: 0 = disabled, 1 = UI1, 2 = UI2, etc.	0–10	0
2Fu 1	Unoccupied mode delay (seconds) = the time the input needs to be inactive before the controller switches to unoccupied mode.	00:00s...15:10h MM:SS...HH:MM	05:00 MM:SS
2Fu 2	Input limit 1 to signal unoccupied or door opened	per input range	10
2Fu 3	Input limit 2 to signal occupied or door closed	Per input range	90
2Fu 4	Select input for door contact in combination with input defined under 2Fu 0: 0 = not active, 1 = UI 1 to 10 = VI4 If door contact input is defined, the controller will only go to unoccupied mode, if the door is opened and after the door closes, there is no movement registered on the input selected in 2Fu 0	0–10	0
2Fu 5	Select interlocks or alarms for window contact. If any interlock activates, the function will change to unoccupied mode, independent of door state.	Triangle shown = alarm selected	▽▽▽▽▽▽▽▽

3Fu: Control heating and cooling mode

Summary


Each control loop has its own heat and cool mode. The controller has as well a heat / cool mode. This mode is visible in the idle screen and can be manually changed by advanced user access if enabled.

The control loop may now be configured in such a way that it is demand based and switches its heat/cool mode based on demand automatically (L24 = OFF) or that it follows the heat cool mode of the controller (L24 = ON).

The heating or cooling state of the controller may be controlled from a central location by a digital contact or temperature level of outside air or supply media. The mode may also depend on heating or cooling demand of a control loop.

Controlling heat/cool mode with an input

Set limit 1 and limit 2 to switch between heating and cooling with options below:

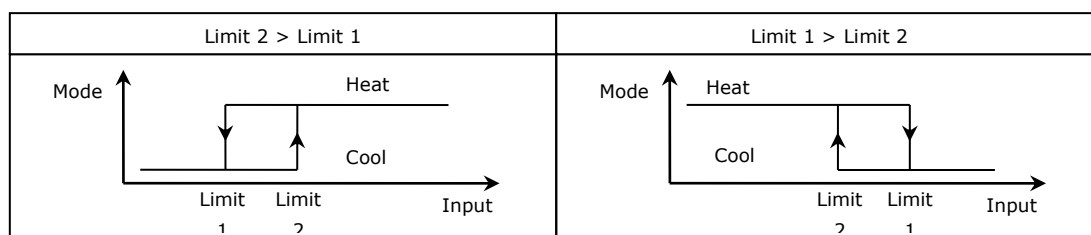

By open contact

When switching heating/cooling state with an external switch set input to RT/DI mode and connect switch to signal ground. Ground levels of all involved controllers must be the same.

By outdoor or supply media temperature

For supply media temperature we recommend switching to cooling at limit1 = 16°C/61°F and to heating at limit2 = 28°C/83°F. For outdoor temperature we recommend switching to cooling at limit1 = 28°C/83°F and to heating at limit2 = 16°C/61°F outdoor temperature.

Above recommendations are given as suggestions. The ideal settings may be different on the actual project depending on climatic and system conditions.

Controlling heat/cool settings with a control loop

By selecting a control loop with 3FU1, the heat/cool setting of the selected control loop is used to determine the heat/cool mode of the controller. This is the preferred way for simple installations that only have one control loop and use the idle display.

Note: the input selection on 3FU0 must be set to 0 and the control loop used in such a way must be set to demand-based heating and cooling with (L24 = OFF).

3FU Parameter reference

Parameter	Description	Range	Option
3Fu 0	Select input for remote heat – cool change function: 0 = not active or based on control loop, Input according hardware: 0 = disabled, 1 = UI1, 2 = UI2, etc.	0...10	0
3Fu 1	If heat – cool mode is based on a control loop, select control loop here. (3Fu 0 must be set to 0) 0 = Based on universal input, 1 = LP1, 2 = LP2, etc.	0...1	0
3Fu 2	Activation delay (Seconds) = delay before heat – cool mode is switched. This delay is to avoid unnecessary switching	00:00s...15:10h MM:SS...HH:MM	05:00 MM:SS
3Fu 3	Input limit 1 (Cool limit) applies only if based on input	Per input range	20%
3Fu 4	Input limit 2 (Heat limit) applies only if based on input	Per input range	40%

4FU: Summer/winter setpoint compensation

Summary

Summer/winter compensation changes the set point due to a change in an input value, typically, but not limited to, an outdoor temperature input. Activate summer/winter compensation with control loop configuration parameter (L05).

There are two ways to shift the setpoint of a control loop based on an input. One is through an offset and the other one is with a setback.

Setpoint offset (4FU1 = OFF)

The offset shifts the setpoint in a linear fashion based on the measured value of an input.

4FU4 defines the value of the input where the shift is 0. This can be 50% for a UP/DOWN shift or 0% / 100% for a one directional shift.

4FU3 defines the change required in input signal for one step change of the setpoint. If set to 5%, each time the input is increased by 5% the setpoint would increase by one step.

4FU2 sets a direct or reverse behavior of the input versus setpoint change. In direct mode the setpoint increases when the input increases, in reverse mode, the setpoint decreases when the input increases.

Setpoint setback (4FU1 = ON)


In setback the setpoint is pulled towards the upper or lower setpoint limits of the control loop depending on an input based on diagram below.

Winter compensation starts when outside temperature drops below the upper limit of winter compensation (4FU4). At maximum winter compensation the actual set point will be equal to the control loop's minimum or maximum heating set point depending on the setting of 4FU2.

Summer compensation starts when outside temperature exceeds the lower limit for summer compensation (4FU5). At maximum summer compensation the actual set point will be equal to the control loop's minimum or maximum cooling set point depending on 4FU5.

Setting 4FU8 = ON indicates the state of compensation on the display by showing a heat – cool symbol.

Set point set back 4FU1 = ON

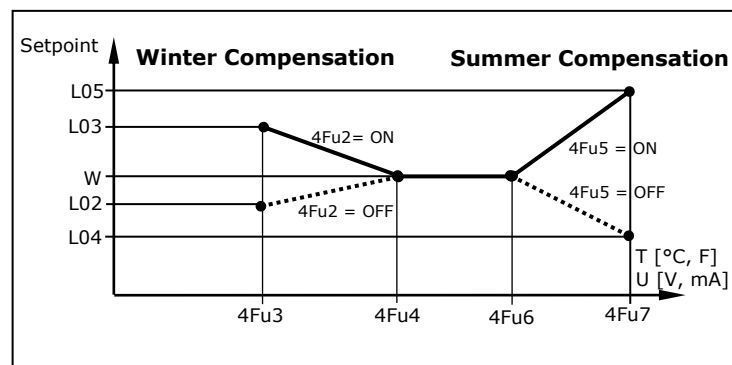

4FU Parameter reference

Parameter	Description	Range	Option
4Fu 0	Selection of Compensation Input Input according hardware: 0 = disabled, 1 = UI1, 2 = UI2, etc.	0...10	0
4Fu 1	Type of compensation OFF = Offset: The setpoint shifts up or down based on an input signal ON = Setback: The setpoint is shifted towards loop setpoint min max based on an input signal.	ON, OFF	OFF
Offset setpoint compensation: 4Fu1 = OFF			
4Fu 2	Shift is direct or reverse acting OFF = Direct: Rising input value increases setpoint ON = Reverse: Rising input value decreases setpoint	ON, OFF	OFF
4Fu 3	Input span required to shift setpoint one step:	Per input range	10
4Fu 4	Input where setpoint shift is = 0, This defines the value of the input signal where the control set point is not compensated	Per input range	50
Setback setpoint compensation: 4Fu1 = ON			
4Fu 2	Winter Compensation: OFF = setpoint is shifted negative to lower setpoint limit ON = setpoint is shifted positive to upper setpoint limit	ON, OFF	OFF
4Fu 3	Winter Compensation (Setpoint shift with low compensation signal) Lower Limit: input signal with maximum setpoint shift	Per input range	10
4Fu 4	Winter Compensation (Setpoint shift with low compensation signal) Upper Limit: Input signal at begin of setpoint shift.	Per input range	50
4Fu 5	Summer Compensation: OFF = setpoint is shifted negative to lower setpoint limit ON = setpoint is shifted positive to upper setpoint limit	ON, OFF	ON
4Fu 6	Summer Compensation (Setpoint shift with high compensation signal) Lower Limit: input signal at begin of setpoint shift	Per input range	60
4Fu 7	Summer Compensation (Setpoint shift with high compensation signal) Upper Limit: Input signal with maximum setpoint shift.	Per input range	80
4Fu 8	Hot / Cool Symbol while compensation is active OFF= Hide symbol ON= Show symbol	ON, OFF	OFF

5Fu: Free heating or cooling (Economizer)**Summary**

The aim of the economizer function is to reduce energy consumption by utilizing situations where cooling or heating requirements may be satisfied or supported by outdoor air.

Basic function

The economize function will first verify if there is demand from the loop. Once there is demand, it will compare the outdoor sensor with the return air sensor. If the situation is such that this would satisfy the demand, the outdoor damper will modulate. (for example if cooling mode, outdoor temperature or enthalpy is lower than the return air one.).

If in temperature sensor mode, it will check if the minimum difference outdoor temp to set point condition is fulfilled. If this is true, the economy cycle is activated for the time duration specified under 5FU5. If during this time the setpoint is reached, the counter will be reset. If not, mechanical cooling or heating will start once the delay is expired.

Hysteresis of 5FU4

5FU4 defines the minimum difference required between outdoor / indoor enthalpy or outdoor / loop setpoint temperature. Once these conditions are met and free heating / cooling is in effect only half of 5FU4 is required to keep them going. Once the difference is smaller than half of 5FU4, mechanical cooling will activate.

Activating free heating/cooling with 5FU0

To operate, the economizer needs to be assigned to a control loop with 5Fu0. There are several possibilities to determine if the condition for free heating or cooling is satisfied. The economizer operates differently depending on the sensors attached to it.

Based on two enthalpy sensors

Once there is heating or cooling demand, the economizer compares the enthalpy of return air with outdoor air. If the minimum difference condition defined with 5FU4 is met, mechanical heating or cooling is deactivated and the outdoor and return air dampers are modulated to achieve the predefined set point of the supply air. Once free heating or cooling is activated, only half of 5FU4 is required to maintain it. Mechanical cooling will resume, if the set point is not reached during the time specified in 5FU5 or difference drops below 5FU4/2.

The outdoor damper will modulate based on demand, as long as the outdoor enthalpy is below the return air enthalpy for free cooling or above it for free heating.

Based on two temperature sensors

Once there is heating or cooling demand, the economizer compares the setpoint with the outdoor air and return air temperature. If the minimum difference condition defined with 5FU4 is met, mechanical heating or cooling is deactivated and the outdoor and return air dampers are modulated to achieve the predefined set point of the supply air. Once free heating or cooling is activated, only half of 5FU4 is required to maintain it. Mechanical cooling will resume, if the setpoint is not reached during the time specified in 5FU5 or difference drops below 5FU4/2.

The outdoor damper will modulate based on demand, as long as the outdoor temperature is below the return air temperature for free cooling or above it for free heating.

With 5FU6 an interlock may be used to disable the economizer if the outdoor air humidity or outdoor air pollution is too high to provide free cooling.

Based on outdoor air temperature only

Once there is heating or cooling demand, the economizer compares the setpoint with the outdoor air temperature. If the minimum difference condition defined with 5FU4 is met, mechanical heating or cooling is deactivated and the outdoor and return air dampers are modulated to achieve the predefined set point of the supply air. Mechanical cooling will resume if the setpoint is not reached during the time specified in 5FU5.

With 5FU6 an interlock may be used to disable the economizer if the outdoor air humidity or outdoor air pollution is too high to provide free cooling.

Minimum required startup delay

All mechanical heating and cooling stages are required to have a minimum start up delay of 5 seconds enabled. This is in order to prevent unnecessary switching. In general it is a good idea to have a 30 second delay on all outputs connected to the economizer module in order to prevent frequent switching due to changing weather conditions.

Important note

All involved sensors must have the identical range settings (xu1 and xu2). This includes the sensor used for the control loop!

5FU Parameter reference

Parameter	Description	Range	Option
5Fu 0	Assign Economizer to a control loop 0 = economizer function is disabled 1 = assigned to control loop 1... 2 = assigned to control loop 2	0...2	0
5Fu 1	Assign free heating or/and free cooling options 0 = economizer is disabled 1 = free heating is enabled 2 = free cooling is enabled 3 = free heating and free cooling is enabled	0..3	0
5Fu 2	Outdoor air sensor input (Temperature or Enthalpy): Input acc. hardware: 0 = disabled, 1 = UI1, 2 = UI2, etc. Note: Data range must be identical to return air sensor selected in 5Fu3 and input sensor of loop selected in 5Fu0.	0..10	0
5Fu 3	Return air sensor input (Temperature or Enthalpy): Input acc. hardware: 0 = disabled, 1 = UI1, 2 = UI2, etc. Note: data range must be identical to outdoor sensor selected in 5Fu2 and input sensor of loop selected in 5Fu0.	0..10	0
5Fu 4	If temperature sensors are used: Choose difference between outside air temperature and loop setpoint required to activate free heating or cooling. If enthalpy sensors are used: Choose difference between outside air enthalpy and return air enthalpy required to activate free heating or cooling Note: in order to prevent frequent activation / deactivation of mechanical heating or cooling, once conditions are met to activate free heating or cooling, only half the value of 5FU4 is required to maintain it.	Per input range	0
5Fu 5	Delay time to activate mechanical heating or cooling in case supply air set point cannot be reached through free heating or cooling.	00:00s...15:10h MM:SS...HH:MM	05:00 MM:SS
5Fu 6	Disable economizer in case one of the selected interlocks/alarms is active. The interlocks may be assigned to outdoor humidity or pollution sensors	Triangle shown = interlock selected	▽▽▽▽▽▽▽▽