

OPU-S

Operation and display for intelligent transmitters

Features


- Display of sensor values
- Display and reset of minimum and maximum values
- Password protected programmable configuration parameters

Applications

- Configuration of intelligent transmitters
- Supervision of critical environments using minimum and maximum memory feature of transmitter

General description

The OPU-S is a remote display and operation terminal for intelligent transmitters and peripherals of the SxC-, SxA- and AER-series.

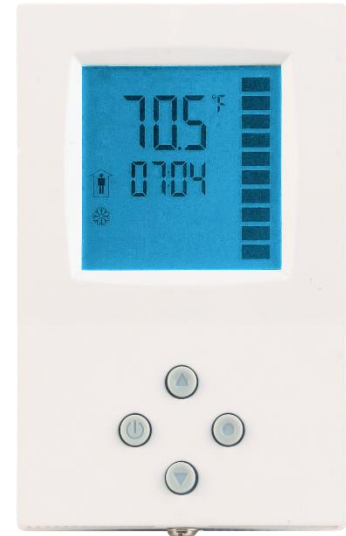

Ordering

The OPU-S may be used together with the following transmitters

Item name	Description/Option
SDC-T1, SDC-H1, SDC-H1T1, SDC-H1T	Humidity / temperature transmitters for air ducts
SDC-C1	CO2 transmitters for air ducts
SOC-T1, SOC-H1, SOC-H1T1, SOC-H1T	Outdoor humidity / temperature transmitters
SRA-T1, SRA-H1, SRA-H1T1, SRA-H1T	Indoor humidity / temperature transmitters
SRC-T1, SRC-H1, SRC-H1T1, SRC-H1T	
SDA-P, SDC-P	Differential pressure transmitter
AER-HL1	Condensation detector
AER-D13	Programmable relay station, converts analog inputs to digital outputs

Installation


1. Install the mounting plate straight to the wall or the flush mounting box. Make sure that the nipple with the front holding screw is facing to the ground. Make sure the screw heads do not stand out more than 5 mm of the surface of the mounting plate.
2. Connect the wires of the terminals to the communication wires according wiring diagram.
3. Slide the two latches located on the top of the front part into the hooks of the mounting plate.
4. Lower the front part until located flat on the wall and the mounting plate is not visible anymore. Make sure the connection cable does not get into the way.
5. Tighten the front holding screw to secure the front part to the mounting plate.

Connection to base unit

- Max. distance: < 20 m
- Normal cables maybe used for wiring in an EMC save environment. In an extremely impaired EMC environment use only shielded cables.
- Connect the cable using the four-pin plug provided.


Technical specification

Power supply	Operating voltage	5 VDC 5%
	Power consumption	Max. 1 VA
	Electrical connection	Pre-wired with plug
Communication	Communication type	Digital
	Cable type	Copper 4 x 0.5...2.5 mm ²
	Max. distance	<20 m
Display (LCD)	Actual values and setpoint	4 digits
	Resolution value < 1000	0.1
	Resolution value > 1000	1
Environment	Digital signals	ON, OFF
	Operation	To IEC 721-3-3
	Climatic conditions	class 3K5
Environment	Temperature	0...50 °C (32...122 °F)
	Humidity	< 95 % RH non-condensing
	Transport and storage	To IEC 721-3-2 and IEC 721-3-1
Standards	Climatic conditions	class 3K3 and class 1K3
	Temperature	-25...70 °C (-13...158 °F)
	Humidity	< 95 % RH non-condensing
Standards	Mechanical conditions	class 2M2
	CE conform according to EMC standard 89/336/EEC	EN 61000-6-1/ EN 61000-6-3
	EME standard 73/23/EEC	
Standards	Product standards	EN 60730-1
	Automatic electrical controls for household and similar use	EN 60730-2-9
	Special requirement on temperature dependent controls	
Standards	Degree of protection	IP30 to EN 60529
	Safety class	III
General	Dimensions (H x W x D)	88 x 88 x 21 mm (3.5 x 3.5 x 0.8 in)
	Housing material	Fire proof ABS plastic (UL94 class V-0)
	Mounting plate	Zinc coated steel
General	Standard color	White RAL 9003
	Weight (incl. package)	130 g (4.6 oz.)

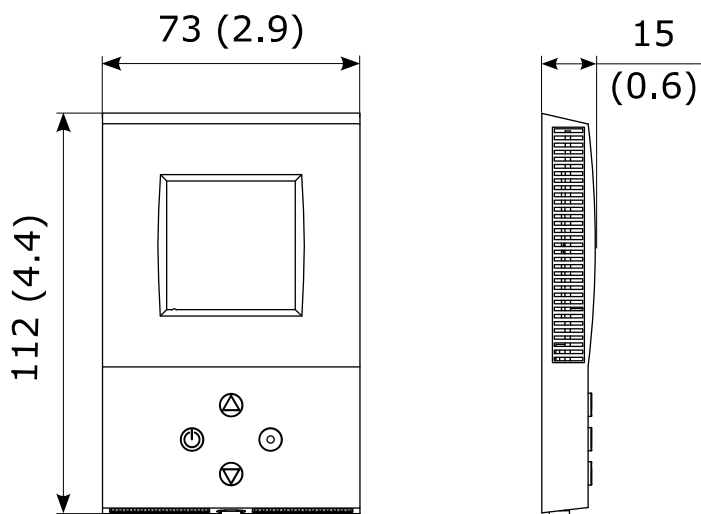Dimensions mm (inch)


Display and operation

The operation terminal uses an LCD display and four operation buttons.

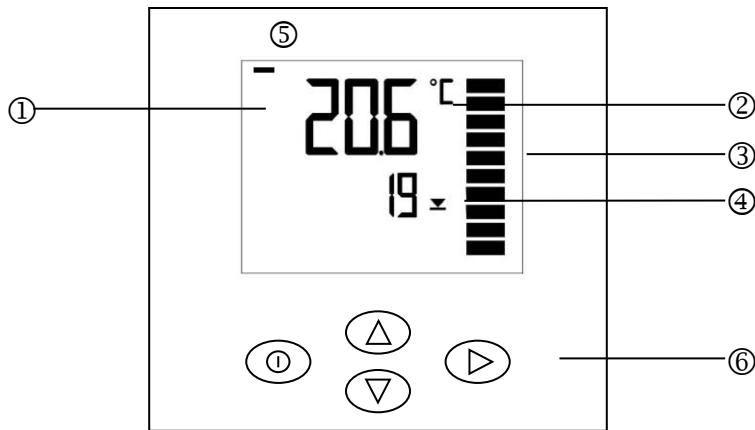

Legend:

1. 4-digit display of current value, minimum, maximum or control parameter
2. Unit of displayed value, °C, °F, % or none
3. Graphical display of output or input signal with a resolution of 10%
4. 4-digit display of current value or control parameter
5. Left bar = display of minimum value
Right bar = display of maximum value

6. Buttons for operating the controller:

- | | |
|------------|---|
| LEFT key: | Operation mode (On, Off) not used |
| UP key: | Display maximum values, pressing for more than 2 seconds resets maximum value |
| DOWN key: | Display minimum values, pressing for more than 2 seconds resets minimum value |
| RIGHT key: | Select transmitter, for transmitters with more than one input |

Idle display

Used for combination transmitters (temperature and humidity, temperature and pressure). This display mode is active if no key has been pressed during the previous 30 seconds. The current temperature is displayed in the large digits and the humidity or pressure is displayed in the small digits.

Display of the measured value

Pressing the RIGHT key will step through available sensor inputs, indicating the current, minimum or maximum value in the large digits and input number in the small digits and the output signal in the vertical bar.

Indication and reset of minimum and maximum values

Activate the desired transmitter for dual transmitter by pressing the RIGHT key. Press UP to display maximum values, press DOWN key to display minimum values.

Reset of minimum and maximum values

Pressing either UP or DOWN keys for longer than 3 seconds while the minimum or maximum values are displayed.

Error messages

The OPU-S may display the following error condition:

Err1: Communication time out between terminal unit and transmitter. Terminal unit will reset after 10 seconds.

Err2: Temperature sensor faulty. The connection to the temperature sensor may be interrupted or the temperature sensor is damaged. As a consequence the outputs of this transmitter are set to 0.

Err3: Sensor error. Error of humidity or the CO2 sensor.

Setting of configuration parameters

Intelligent sensors can be adapted to fit perfect into your application. The preparation of the sensing signal is defined by parameters. The parameters of the different units must be taken from the corresponding device documentation.

The parameters are password protected and can be changed as follows:

1. Press UP and DOWN key simultaneously for three seconds. The display will indicate CODE.
2. Select a password using UP or DOWN keys. Dial **0009** in order to get access to the configuration parameters. Press the RIGHT key after selecting the correct password.
3. Choose IP for input configuration using UP or DOWN. Press the RIGHT key after selection.
4. The parameters are now displayed. The small digits show the parameter number, the large one its value.
5. Select the parameters with the UP/DOWN keys. Change a parameter by pressing the RIGHT key. The MIN and MAX symbols show up and indicate that the parameter may be modified now. Use UP and DOWN key to adjust the value.
6. After you are done, press RIGHT or LEFT key in order to return to the parameter selection level.
7. Press the LEFT key again so as to leave the menu. The unit will return to normal operation if no key is pressed for more than 5 minutes.
8. The parameters and its values depend on the transmitter. Please use the respective datasheet for the list of parameters