

SRC-H1T1 Indoor humidity & temperature transmitter

Features

- Indoor humidity and temperature measurement
- Replaceable sensor element
- Sensor reconditioning function against contamination
- Anti-Creep function for high humidity environments
- Minimum and maximum value memory
- 0...10 V, 0...20 mA or 2...10 V, 4...20 mA measuring signals selectable with jumpers
- Optional alternative signal ranges programmable
- Selectable averaging signal
- Optional external display (OPA-S)
- Status LED



Applications

- Indoor, Indoor humidity measurement for heating, ventilation and air conditioning applications
- Recording of minimum and maximum values for critical environments
- Supervision of critical humidity
- Measurements in high humidity environments

Humidity transmitter

A capacitive sensor element is used for measuring relative humidity. The applied measuring technology guarantees excellent reliability and long-term stability. The microprocessor samples the humidity once per second. It calculates an averaging signal over a preset number of seconds and generates the output signal. Standard output signal range and types may be selected by jumpers. Standard signal ranges are: 0...10 VDC, 2...10 VDC, 0...20 mA and 4...20 mA. Other ranges can be defined by using a programming tool (OPA-S).

Minimum and maximum values

Using a display & programming accessory, the user has the option to read out and reset minimum and maximum values. The minimum and maximum values may as well be used as output signals. The minimum and maximum values are saved into the EEPROM and are available after a power interruption.

Safety



DANGER! Safety advice

This device is for use as a humidity transmitter. It is not a safety device. Where a device failure could endanger human life and property, it is the responsibility of the client, installer and system designer to add additional safety devices to prevent such a device failure. Ignoring specifications and local regulations may cause equipment damage and endangers life and property. Tampering with the device and misapplication will void warranty.

Types and Ordering

Per default a sensor element with 3% RH accuracy is included. Contact your local sales contact to order sensing elements with different accuracies.

Transmitter

Product Name	Product No.	Description/Option
SRC-H1T1-A3	40-300142	Humidity transmitter with temperature sensor
<i>Pre-Configured Versions</i>		
SRC-H1T1-A3-W0	40-300142-0	Signal range: -40...60°C (-40...140°F) (Default)
SRC-H1T1-A3-W1	40-300142-1	Signal range: -35...35°C (-31...95°F)
SRC-H1T1-A3-W2	40-300142-2	Signal range: 0...50°C (32...122°F)
SRC-H1T1-A3-W3	40-300142-3	Signal range: Special – Specify in order

Sensor element

Product Name	Product No.	Humidity Accuracy [%rH]	Temperature Accuracy [K] @25°C (77°F)	Description/Option
AES4-HT-A2	40-500153	2%	± 0.5°	Humidity temperature sensor element
AES4-HT-A3 *	40-500152	3%	± 0.4°	
AES4-HT-A5	40-500144	5%	± 0.3°	

* Standard sensor

Accessories

Product Name	Product No.	Description/Option
OPA-S	40-500006	External display module

Technical Specifications

Power supply	Operating Voltage Transformer		24 VAC 50/60 Hz ± 10%, 24VDC ± 10% SELV to HD 384, Class II, 48VA max	
	Power Consumption		Max 2 VA	
	Terminal Connectors		For wire 0.34...2.5 mm ² (AWG 24...12)	
Sensing probe	Humidity Sensor:		Capacity sensor element	
	Range		0...100 % rH	
	Measuring Accuracy		See Figure 1	
	Hysteresis		± 1%	
	Repeatability		± 0.1%	
	Stability		< 0.5% / year	
	Temperature Sensor:		Bandgap sensor	
	Measuring Accuracy		See Figure 2	
	Repeatability		± 0.1°C, ± 0.2°F	
Signal outputs	Analog Outputs			
	Output Signal		DC 0-10V or 0...20mA	
	Resolution		10 Bit, 9.7 mV, 0.019.5 mA	
	Maximum Load		Voltage: ≥1kΩ Current: ≤250Ω	
Environment	Operation		To IEC 721-3-3	
	Climatic Conditions		class 3 K5	
	Temperature		0...70°C (32...158°F)	
	Humidity		<95% R.H. non-condensing	
	Transport & Storage		To IEC 721-3-2 and IEC 721-3-1	
	Climatic Conditions		class 3 K3 and class 1 K3	
	Temperature		0...70°C (32...158°F)	
	Humidity		<95% R.H. non-condensing	
	Mechanical Conditions		class 2M2	
Standards	Degree of Protection		IP30 to EN 60 529	
	Safety Class		III (EN 60730-1)	
General	Housing Materials	Cover	Flame retardant PC+ABS plastic (UL94 class V-0)	
		Mounting Plate	Galvanized steel	
	Dimensions (H x W x D)		21 x 88 x 88 mm (0.8 x 3.5 x 3.5 in)	
	Weight (including package)		160 g (5.6 oz)	


Product testing and certification



Declaration of
Conformity

Information on the conformity of our products can be found on our website
www.vectorcontrols.com on the corresponding product page under "Downloads".

Dimension mm(inch)

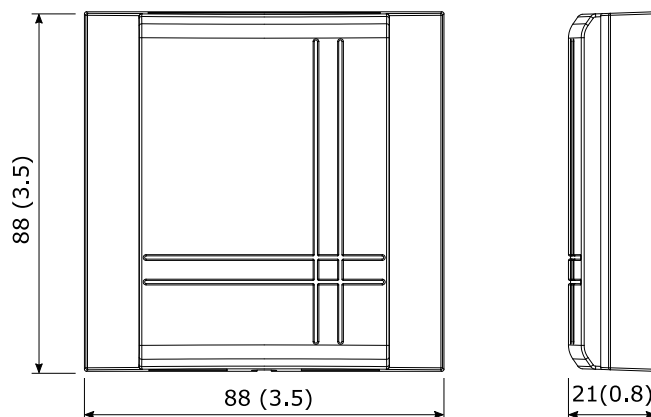

Mounting and Installation

Mounting location

- On a flat, easily accessible inner wall
- The following installation locations should be avoided:
 - Protect from direct exposure to sunlight
 - Do not install near heat sources, e.g. radiators or other heat-generating devices
 - Air storage spaces and niches, e.g. behind doors or shelves
 - Outside walls insufficiently insulated
 - In the direct sphere of influence of ventilation openings and fans



Important

Observe local regulations!

Sealing of cable entries



Important


All cable entries into the connection box must be sealed to prevent air drafts, which could otherwise affect the sensors in the device and prevent correct measurements!

Mounting instruction / replacing the sensor element



See installation sheet no. 70-000568 (www.vectorcontrols.com).

Jumper settings

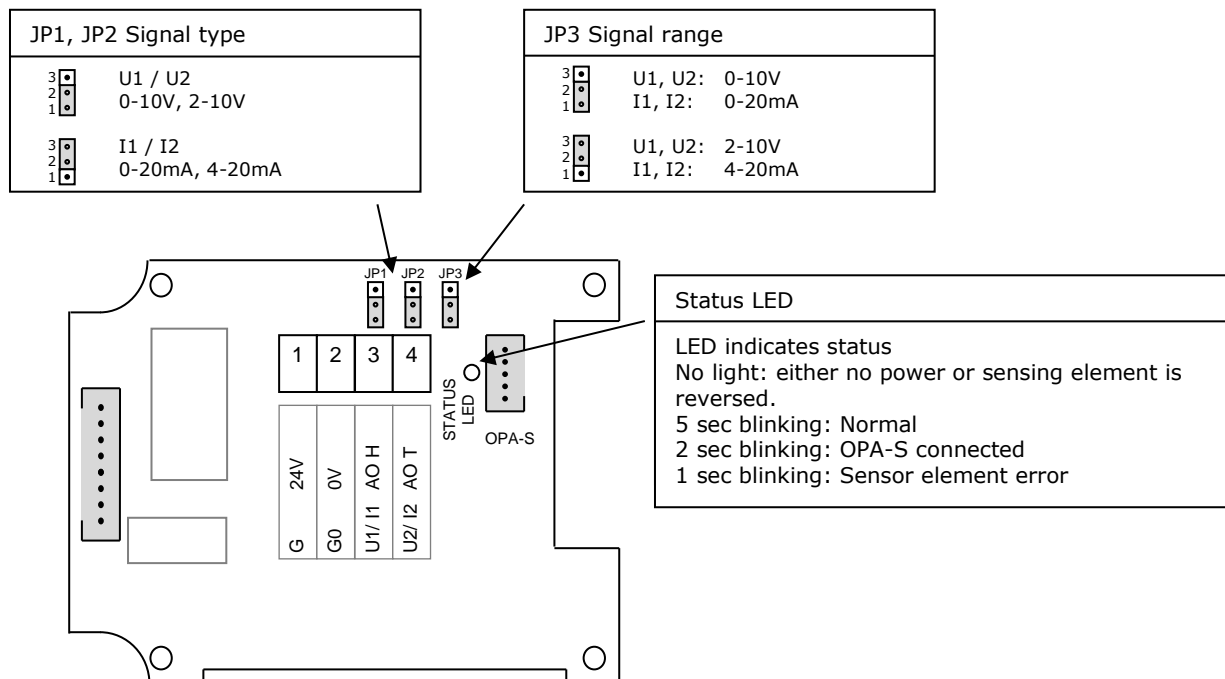

Recondition the sensing element



Important

If the sensor has been exposed to chemical contamination or prolonged exposure to very humid climates (> 80%), we recommend running the "Sensor Reconditioning Function" once prior to continuous use to remove contamination and creep effect. This will ensure that the sensor operates at its specified accuracy.



For details on how to activate the sensor reconditioning function see chapter "Sensor reconditioning function" on page 4.

Information about storage, packaging and usage environment



NOTE:

The sensing part is a polymer, which measures the humidity in the ambient air. For proper sensor operation some mandatory precautions need to be taken during storage, packaging and usage. The transmitter and its sensing element should not be packaged, stored or used in out-gassing plastic materials, which could cause sensor contamination. In particular, it is recommended not to use any glue or adhesive tapes (Sellotape, Scotch-Tape, Tesa-Film, etc.) within the package or close proximity of the sensor. Foamed materials often cause contamination problems and should not be used to package the transmitter. Best packaging material is a simple cardboard box or a deep-drawn plastic case in a cardboard box.

Sensor

Accuracy of Temperature & Humidity sensor in -H, -T and -HT type

AES4-HT-A3 standard sensor

Relative humidity absolute accuracy

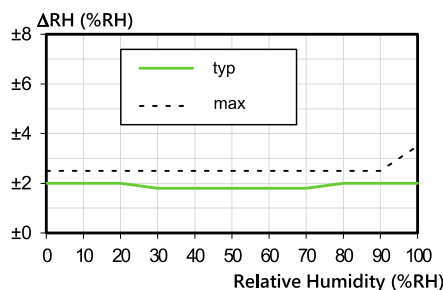


Figure 1: Typical and maximal RH accuracy at 25°C (77°F)

Temperature accuracy

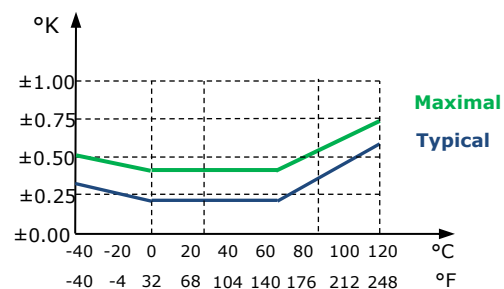


Figure 2: Typical and maximal temperature accuracy

Anti-creep function for devices with AES4 sensors

Ensuring high accuracy of humidity measurement

When the AES4 sensor is exposed to very humid environments for extended periods of time, an anti-creep function is activated in the background to ensure that the sensing element remains accurate. While the anti-creep function is active, the RH value will appear to be frozen for short periods of time.

Sensor reconditioning function

Reconditioning the humidity sensing element eliminates chemical contamination and creep effects on the sensor and ensures that it operates at its specified accuracy.

Reconditioning can be configured to run once, periodically, or only at power-up.

Parameter **IP08** allows for sensor reconditioning of AES4 sensors.

Per default the value of this parameter is 0. If a number is entered the reconditioning procedure is started:

- The sensor is reconditioned for the number of minutes entered in **IP08**. During this time the status LED blinks in 1 second rhythm.
- If no interval is defined with **IP09**, the number in **IP08** is set to 0, once the recondition has started.
- If an interval is set with **IP09**, the value remains unchanged. When the internal counter reaches 0, reconditioning stops. The interval in hours defined in **IP09** determines the waiting time for the next reconditioning. The interval is stopped during a power failure and resumed when power is restored.

Parameter **IP10** allows reconditioning at each power-up. This reconditioning interval is independent of **IP08** or **IP09** settings. At each power up, the sensor will perform the reconditioning function according to the time in minutes defined with **IP10**.



Recommendation

We recommend to set the **IP08** value to **80** minutes recondition time if the sensor is out of its accuracy range.



Note

The display will freeze during reconditioning.



Important

Reconditioning will not continue if interrupted by a power cycle!

Configuration

The transmitter can be adapted to fit perfectly into any application by adjusting the software parameters. The parameters are set with the operation terminals OPA-S. The OPA-S may also be used as remote indicator.

Input configuration

Parameter	Description	Range	Default
IP 00	TI1: Celsius or Fahrenheit, C = OFF, F = ON	ON, OFF	OFF
IP 01	TI1: Samples taken for averaging control signal	1...255	10
IP 02	TI1: Calibration	-10...10	0
IP 03	TI1: Minimum temperature	-40...215 °C/F	0 °C
IP 04	TI1: Maximum temperature	-40...215 °C/F	50°C
IP 05	H1: Show Percent	ON, OFF	ON
IP 06	H1: Samples taken for averaging control signal	1...255	10
IP 07	H1: Calibration	-10...10%	0
IP 08	Duration of the AES4-HT sensor reconditioning. This value will be cleared if periodic reconditioning is not active. It will remain if periodic reconditioning is enabled. 0: Not active	0-240 min	0 (not active)
IP 09	Interval period for AES4-HT sensor reconditioning 0: Periodic reconditioning disabled 1-240: Period reconditioning enabled (repeats every xxx hours)	0-240 hours	0 (not active)
IP 10	Power up reconditioning for AES4-HT sensor. The sensor is reconditioned each time it is power up. Periodic reconditioning settings have no effect. 0: Not active.	0-240 min	0 (not active)

Output configuration

Parameter	Description	Range	Default
OP 00	AO1: Humidity: Configuration of output signal: 0 = Feedback humidity input, 1 = Feedback humidity minimum value 2 = Feedback humidity maximum value	0 – 2	0
OP 01	AO1: Humidity: Minimum limitation of output signal	0 – Max %	0%
OP 02	AO1: Humidity: Maximum limitation of output signal	Min – 100%	100%
OP 03	AO2: Temperature: Configuration of output signal: 0 = Feedback temperature input, 1 = Feedback temperature minimum value 2 = Feedback temperature maximum value	0 – 2	0
OP 04	AO2: Temperature: Minimum limitation of output signal	0 – Max %	0%
OP 05	AO2: Temperature: Maximum limitation of output signal	Min – 100%	100%

Output signal configuration

The analog output signal type may be configured with a jumper for 0-10 VDC or 0-20 mA control signals. The jumpers are located next to the terminal connector of each analog output. See table below for jumper placement. The factory setting is to 0-10 VDC.

Signal type	JP1, JP2
0 – 10 V	(1-2)
0 – 20 mA	(2-3)

The signal range may be set with JP3 for both analog outputs. JP3 will only operate if the output range specified with OP01 and OP02 is left at the default position of 0...100%. With any other setting the position of JP3 has no influence and the range defined with the output parameters applies.

Signal range	JP3
0 – 10 V, 0 – 20 mA	(1-2)
2 – 10 V, 4 – 20 mA	(2-3)

Jumper settings



For jumper settings see chapter "Jumper settings" on page 3.

Smart Sensors and Controls Made Easy!

Quality - Innovation – Partnership

Vector Controls GmbH
Switzerland

info@vectorcontrols.com
www.vectorcontrols.com/

