

SOC-T1 Outdoor Temperature Transmitter


Features

- Outdoor temperature measurement
- Minimum and maximum value memory
- 0...10 V, 0...20 mA or 2...10 V, 4...20 mA measuring signals selectable with jumpers
- Optional alternative signal ranges programmable
- Selectable averaging signal
- Optional LCD display (OPC-S) or external display (OPU-S)
- LED operation status

Applications

- Outdoor temperature measurement in heating, ventilation and air conditioning applications.
- Recording of minimum and maximum values for critical environments
- Supervision of critical temperatures





Minimum and maximum values:

Using the programming tool, the user has the option to read out and reset minimum and maximum values. The minimum and maximum values may as well be used as output signals. The minimum and maximum values are saved into the EEPROM and are available after a power interruption.

Ordering

Item name	Item code	De	scription/option
SOC-T1-xx	40-30 0059-xx	Temperature transmitter (add AMC)	
SOC-T1-W0	40-30 00xx-0	0	Temperature range: -4060 °C (-40140 °F) (Default)
SOC-T1-W1	40-30 00xx-1	1	Temperature Range: -3535 °C (-3195 °F)
SOC-T1-W2	40-30 00xx-2	2	Temperature Range: 050 °C (32122 °F)
SOC-T1-W3	40-30 00xx-3	3	Temperature Range: Special – Specify in order

Accessories

Item name	Item code	Description/option
OPC-S	40-50 0029	Built in display and programming module
OPU-S	40-50 0006	External display module
AMC-2	40-500074	Conduit connector NPT 1/2







Technical Specification

Warning! Safety advice! This device is intended to be used for comfort applications. Where a device failure endangers human life and/or property, it is the responsibility of the owner, designer and installer to add additional safety devices to prevent or detect a system failure caused by such a device failure. The manufacturer of this device cannot be held liable for any damage caused by such a failure. Failure to follow specifications and local regulations may endanger life, cause equipment damage and void warranty.

Power supply	Operating voltage Transformer	24 V AC 50/60 Hz \pm 10%, 24 VDC \pm 10% SELV to HD 384, Class II, 48 VA max.
	Power consumption	Max. 2 VA
	Terminal connectors	For wire 0.342.5 mm ² (AWG 2412)
Sensing probe	Temperature: Accuracy: -400 °C (-4032 050 °C (32122 5070 °C (12215	0.2 K
Signal outputs	Analog outputs Output signal Resolution Maximum load	DC 0-10 V or 020 mA 10 Bit, 9.7 mV, 0.019.5 mA Voltage: \geqslant 1k Ω Current: \leqslant 250 Ω
Environment	Operation Climatic conditions Temperature Humidity	To IEC 721-3-3 class 3 K5 -4070 °C (-40158 °F) <95% R.H. non-condensing
CI Te Hi	Transport & storage Climatic conditions Temperature Humidity Mechanical conditions	To IEC 721-3-2 and IEC 721-3-1 class 3 K3 and class 1 K3 -4080 °C (-40176 °F) <95% R.H. non-condensing class 2M2
Standards	conformity EMC directive Low voltage directive	2004/108/EC 2006/95/EC
	Product standards automatic ele household and similar use	ical controls for EN 60730-1
	Electromagnetic compatibility for domestic and industrial sector	Emissions: EN 60 730-1 Immunity: EN 60 730-1
	Degree of protection	IP65 to EN 60 529
	Safety class	III (IEC 60536)
General	Housing materials Cover, Probe	ck part PC+ABS (UL94 class V-0) Stainless steel
	Dimensions (H x W x D):	150 x 91 x 47 mm (5.9 x 3.7 x 1.9 in)
	Weight (including package)	220 g (7.8 oz.)

Dimensions mm (in)



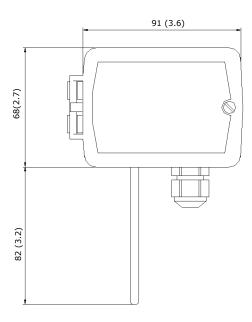



Mechanical Design and Installation

The unit consists of two parts: (a) The back part with the probe and (b) the cover.

Mounting location

The transmitter should be installed, probe facing down, directly on the wall, in a weather protected area. The weather shield accessory is recommended, in case the transmitter is exposed to weather and direct sunlight.

Mounting instruction

See installation sheet no. 70-000561 (www.vectorcontrols.com).

Configuration

The transmitter can be adapted to fit perfectly into any application by adjusting the software parameters. The parameters are set with the operation terminals OPU-S or OPC-S. The OPU-S may also be used as remote indicator.

Input configuration

Parameter	Description	Range	Default
IP 00	TI1: Celsius or Fahrenheit, C = OFF, F = ON	ON, OFF	OFF
IP 01	TI1: Samples taken for averaging control signal	1255	10
IP 02	TI1: Calibration	-1010	0
IP 03	TI1: Minimum temperature	-40215 °C/F	0 °C
IP 04	TI1: Maximum temperature	-40215 °C/F	50 °C

Output configuration

Parameter	Description	Range	Default
OP 00	AO1: Configuration of output signal:	0 – 2	0
	0 = Feedback temperature input,		
	1 = Feedback temperature minimum value		
	2 = Feedback temperature maximum value		
OP 01	AO1: Minimum limitation of output signal	0 – Max %	0%
OP 02	AO1: Maximum limitation of output signal	Min - 100%	100%

Output signal configuration

The analog output signal type may be configured with a jumper for 0-10 VDC or 0-20 mA control signals. The jumpers are located next to the terminal connector of each analog output. See table below for jumper placement. The factory setting is to 0-10 VDC.

The signal range may be set with JP3 for both analog outputs. JP3 will only operate
if the output range specified with OP01 and OP02 is left at the default position of
0100%. With any other setting the position of JP3 has no influence and the range
defined with the output parameters applies.

Signal Type	JPI
0 - 10 V	(1-2)
0 – 20 mA	(2-3)

Signal Range	JP3
0 - 10 V, 0 - 20 mA	(1-2)
2 - 10 V, 4 - 20 mA	(2-3)



Jumper Settings

