TLC3-ECO Economizer



Features

- Compares outdoor temperature with indoor or control temperature. Activates free heating or cooling.
- Low power energy consumption: < 1W per unit
- Relays switching for outputs each up to 300W
- Optional external temperature control input
- Choose between one 3-point actuator and 2 binary outputs. (1 outdoor damper, 1 mechanical enable or fan.)
- Password protected programmable user and control parameters

TLC3-ECO-D also includes

- Power cap protected real-time clock with 48hr power backup
- Time schedule events, with many options
- Blue backlight
- Infrared remote control receiver


Applications

- Economizer: Control of outdoor damper
- For 3-point or spring return actuators
- With enable for mechanical heating or cooling or fan

General

- TLC3-ECO: 1 independent temperature control loop with 1 heating and 1 cooling sequence. 1 internal temperature sensor, 1 outside temperature input, 1 auxiliary input for external temperature input, heat – cool changeover or high/low limit.
- The economizer controls an outdoor damper and optional fan. It activates the outdoor damper if there is heating or cooling demand and if outdoor conditions are favorable for free heating or cooling. An additional input may be used to close the damper based on an open contact input (for example high humidity or bad air quality).
- Flexible application configuration is made with a parameter-setting routine using the standard operation terminal.

Name

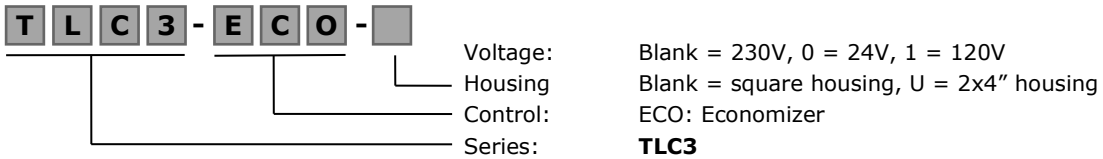

Ordering

Model	Item code	Variation	Option
TLC3-ECO-230 TLC3-ECO-230-W01	40-10 0214 40-10 0214-01	Standard Cooling only	Economizer with: 1 internal and 1 external temperature sensor 2 relay normally open outputs
TLC3-ECO-D-230 TLC3-ECO-D-230-W01	40-10 0215 40-10 0215-01	Deluxe Cooling only	

Temperature sensors: Use Vector Controls NTC sensors to achieve maximum accuracy: SDB-Tn10-20 (duct), SRA-Tn10 (room), SDB-Tn10-20 and AMI-S10 as immersion sensor.

Binary auxiliary devices (e.g. pumps, fans, on/off valves, etc): Do not directly connect devices that exceed specified limits in technical specifications – observe startup current on inductive loads.

© Vector Controls GmbH, Switzerland


Technical specifications

Caution! This device is intended to be used for comfort applications. Where a device failure endangers human life and/or property, it is the responsibility of the owner, designer and installer to add additional safety devices to prevent or detect a system failure caused by such a device failure. Vector Controls or its affiliates cannot be held liable for any damage caused by such a failure. Failure to follow specifications and local regulations may endanger life, cause equipment damage and void warranty.

Power supply	Power requirements		210 – 250 V AC 50/60 Hz
	Power consumption		Max 1W, 1.5VA
	Electrical connection		Terminal connectors
	Clock backup		Min 48h if charged for 24h
Signal inputs	Temperature inputs Range Accuracy		RT internal 0…50 °C (32…122 °F) 0.5°C (1°F)
	Input type: Range Accuracy		External (Sxx-Tn10 sensor) -40..70°C (-40…158°F) 0.5°C (1°F) if 0…50°C (32…122°F) 1.0°C (2°F) if -40…70°C (-40…158°F)
Signal outputs	Digital switching outputs Switching type AC switching power Insulation strength between relays contacts and system electronics: between open relays contacts		Y1 to Y2 Relays 0…250V AC 1.25A max. each output 4000VAC 1000VAC
Environment	Operation Climatic conditions Temperature Humidity		To IEC 721-3-3 class 3 K5 0…50 °C (32…122 °F) <95 % r.H. non-condensing
	Transport & storage Climatic conditions Temperature Humidity Mechanical conditions		To IEC 721-3-2 and IEC 721-3-1 class 3 K3 and class 1 K3 -25…70 °C (-13…158 °F) <95 % r.H. non-condensing class 2M2
Standards	CE conformity RoHS directive EMC directive Low voltage directive		 2011/65/EU 2004/108/EC 2006/95/EC
	Product standards Automatic electrical controls for household and similar use Special requirement on temperature dependent controls		 EN 60 730 –1:2011 EN 60 730 – 2 – 9:2010
	Electromagnetic compatibility for domestic sector		Emissions: EN 60 730-1:2011 Immunity: EN 60 730-1:2011
	Degree of protection		IP30 to EN 60 529
	Pollution class		II (EN 60 730-1:2011)
	Safety class		II (IEC61140:2001+ A1:2004)
	Overvoltage category		III (EN 60 730-1:2011)
	Restriction of the use of certain hazardous substances		EN 50581:2012
General	Dimensions (H x W x D)	Front: Power case:	21 x 88 x 88mm (0.8 x 3.5 x 3.5 in.) 60 x 50 x 32mm (2.4 x 2.0 x 1.3 in.)
	Material:	Cover, back part Mounting plate	ABS plastic (UL94 class V-0) Galvanized steel
	Weight (including package)		Standard: 295g (10.4oz) Deluxe (-D): 305g (10.7oz)

© Vector Controls GmbH, Switzerland


Dimensions, mm (inch)

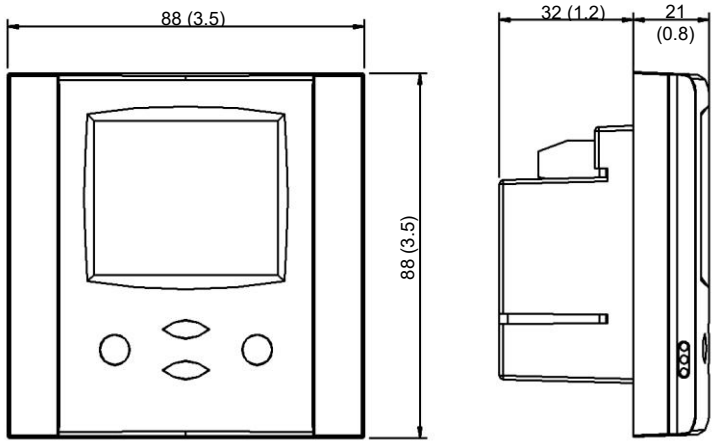

Space required in flush mounting box:
(H x W x D)
60 x 50 x 32 mm (2.4 x 2.0 x 1.26 in.)

Distance for mounting screws:
Horizontal and vertical:
45 to 63 mm (1.8 to 2.5 in.)

Connection

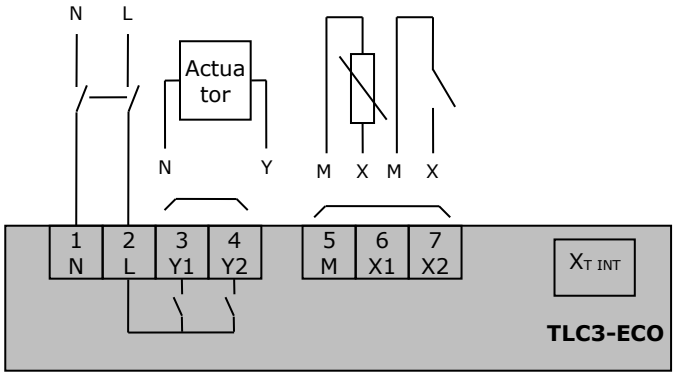

Warning:
Live Electrical Components!
During installation, testing, servicing and troubleshooting of Vector Controls products, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

Terminal description

1	**N**	Power supply:	0V AC Neutral
2	**L**	Power supply:	230VAC
3	**Y1**	Binary output 230VAC:	Outdoor damper for spring return actuator Open for 3-point actuators
4	**Y2**	Binary output 230VAC:	Fan or mechanical heating or cooling Close for 3-point actuators
5	**M**	Signal ground	Signal ground for external inputs.
6	**X1**	NTC 10kΩ @ 25°C (77°F)	Outdoor sensor
7	**X2**	NTC 10kΩ @ 25°C (77°F) Open contact to SGND	External temperature sensor Enable input

Mounting and installation

Mount the controller on an interior wall, approx. 1.5 m above the floor, in a place with average room temperature. Avoid direct sunlight, heat sources, doors, outside walls and air outlets. The location is less critical if an external temperature sensor is used.

Mount and connect the controller as shown in the installation sheet supplied with the device, and wire it according to the connection diagram above.

© Vector Controls GmbH, Switzerland

Smart Sensors and Controls Made Easy!

Quality - Innovation – Partnership

Vector Controls GmbH
Switzerland

info@vectorcontrols.com
www.vectorcontrols.com/

© Vector Controls GmbH, Switzerland