TCI-W-U Universal Controller



Features

- Universal PID and/or binary control for any analog input/output signal and range
- Multiple auxiliary functions: heat-cool auto changeover, automatic enable, setpoint compensation
- Averaging, min. and max. functions
- Cascading of control loops (-W22 type)
- Alarm monitoring of low and high limits on all inputs
- Programmable reaction in case of alarm
- Feedback function for inputs and set points
- Functions for dehumidifying, set point shift, cascade control
- Password protected programmable user and control parameters

TCI-W22-U also includes

- Power Cap protected real-time clock with 48hr power backup
- 7-day programmable schedules, with options including change of setpoints and direct position of manual outputs
- Blue backlight

Applications

- Fan coil units
- Heat exchangers
- Zoning
- VAV
- Air handlers
- Fan, Pump control
- Humidifiers
- Dehumidifiers
- Ventilation
- Radiant heating
- Radiant cooling
- Pressurization

General

- TCI-W11-U: 1 independent control loop, 1 internal temperature sensor, 1 universal input (analog/binary/temp), 2 binary outputs, 1 analog output
- TCI-W22-U: 2 independent control loops, 1 internal temperature sensor, 2 universal inputs, 2 binary outputs, 1 analog output.
- Internal temperature sensor standard. Add replaceable humidity element as required: AES3-HT-A2 (2%), AES3-HT-A3 (3%), or AES3-HT-A5 (5%)
- Flexible application configuration is made with a parameter-setting routine using the standard operation terminal.

Name

T C I - W 2 2 - U

Housing	Blank = square housing
In/Outputs:	See table below
Control loops:	1 = 1 control loop, 2 = 2 control loops
Mounting:	W = Wall mounted
Series:	**TCI**

Ordering

Model	Stock code	Loop	Temperature Input	Humidity Input	Universal Input	Binary Output	Analog Output	Option
TCI-W11-U	40-10 0074	1	1	0	1	2	1	Standard
TCI-W11-U-H	40-10 0163	1	1	1	1	2	1	RH Sensor 3% acc.
TCI-W22-U	40-10 0076	2	1	0	2	2	1	Clock schedules
TCI-W22-U-H	40-10 0078	2	1	1	2	2	1	RH Sensor 3% acc.
AES3-HT-A2	40-50 0102			1				RH Sensor 2% acc.
AES3-HT-A3	40-50 0103			1				RH Sensor 3% acc.
AES3-HT-A5	40-50 0104			1				RH Sensor 5% acc.

© Vector Controls LLC, USA
www.vectorcontrols.com

Technical specifications

Caution! This device is intended to be used for comfort applications. Where a device failure endangers human life and/or property, it is the responsibility of the owner, designer and installer to add additional safety devices to prevent or detect a system failure caused by such a device failure. Vector Controls or its affiliates cannot be held liable for any damage caused by such a failure. Failure to follow specifications and local regulations may endanger life, cause equipment damage and void warranty.

Power Supply	Power Requirements	24V AC/DC ± 10%, 50/60 Hz, Class II, 48 VA max
	Power Consumption	Max. 3 VA
	Electrical Connection	Terminal Connectors 0.34…2.5 mm² wire (AWG 24…12)
	Clock backup	Min. 48 hours
Signal inputs	Universal Input Input Signal Resolution Impedance	Setting for Voltage or Current 0–10 V or 0–20 mA 9.76 mV or 0.019 mA (10 bit) Voltage: 98kΩ Current: 240Ω
	Universal Input Range Accuracy	Input configured to remote temperature (RT) or digital input (DI) NTC (Sxx-Tn10) 10kΩ, Type 2: -40…100 °C (-0…212 °F) -40…0 °C (-40…32 °F): 0.5 K 0…50 °C (32…122 °F): 0.2 K 50…100 °C (122…212 °F): 0.5 K > 100 °C (> 212 °F): 1 K
	Humidity Sensor AES3-HT-Ax: Range Measuring Accuracy Hysteresis Repeatability Stability	Capacity sensor 0…100 % RH See Figure to the right ± 1% ± 0.1% < 0.5% / year
Signal outputs	Analog Output Output Signal Resolution Output Load	 DC 0–10 V / 0–20 mA 9.76 mV / 0.019 mA Voltage: ≥1kΩ Current: ≤250Ω
	Relays Outputs Type of disconnection AC Voltage DC Voltage	 Micro-interruption 0…48 VAC, 2(1.2) A max. (Observe local regulation) 0…30 VDC, 2A max.
	Insulation strength between relays contacts and system electronics: between neighboring contacts:	2000V AC to EN 60 730-1 1250V AC to EN 60 730-1
Environment	Operation Climatic Conditions Temperature Humidity	To IEC 721-3-3 class 3 K5 0…50 °C (32…122 °F) <95 % r.H. non-condensing
	Transport & Storage Climatic Conditions Temperature Humidity Mechanical Conditions	To IEC 721-3-2 and IEC 721-3-1 class 3 K3 and class 1 K3 -25…70 °C (-13…158 °F) <95 % r.H. non-condensing class 2M2
Standards	Degree of Protection	IP30 to EN 60 529
	Pollution Class	II (EN 60 730-1)
	Safety Class	III (IEC 60536)
	Overvoltage Category	I (EN 60 730-1)
General	Material: Cover, back part Mounting Plate	Fire proof ABS plastic (UL94 class V-0) Aluminium
	Dimensions (H x W x D)	Front part: 112 x 73 x 15 mm (4.4” x 2.9” x 0.6”) Power case: ø 58 x 32 mm (ø 2.3” x 1.3”)
	Weight (including package)	TCI-W11-U = 205g (7.2 oz.), TCI-W22-U = 220g (7.8 oz)

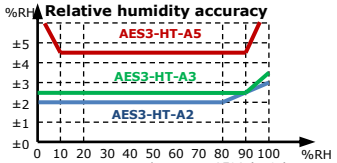


Figure 1: Max RH-tolerance at 25°C (77°F) per sensor type


Product testing and certification

CE Declaration of conformity

Information about the conformity of our products can be found on our website www.vectorcontrols.com on the corresponding product page under "Downloads".

© Vector Controls LLC, USA
www.vectorcontrols.com

Dimensions, mm (inch)

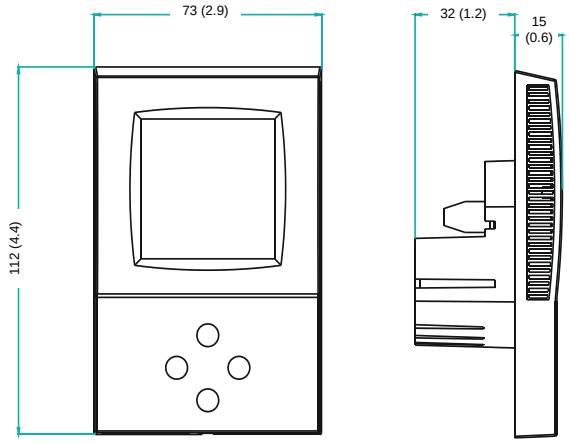


Installation

- Install the controller on an easy accessible interior wall, approx. 1.5 m above the floor in an area of average temperature.
- Avoid direct sunlight or other heat sources, e.g. the area above radiators and heat emitting equipment.
- Avoid locations behind doors, outside walls and below or above air discharge grills and diffusers.
- Location of mounting is less critical if external temperature sensors are used.
- Ensure adequate air circulation to dissipate heat generated during operation.
- Observe local regulations.


  Do not mount in a wet or condensation prone environments.

Connection

TCI-W11-U

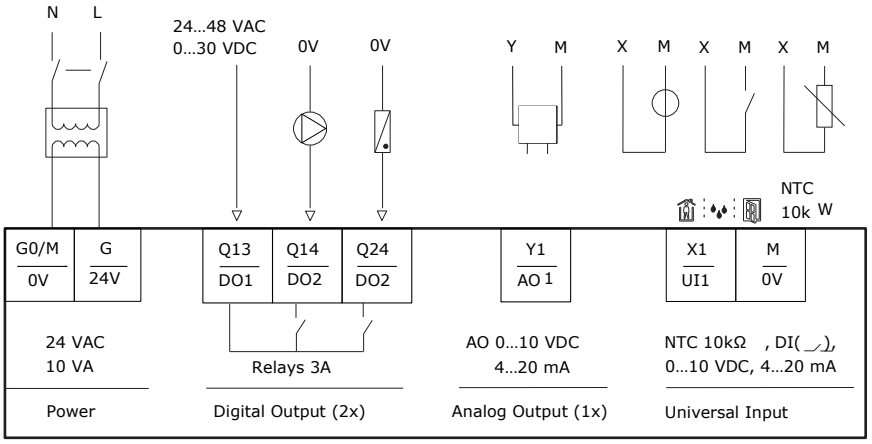

TCI-W22-U

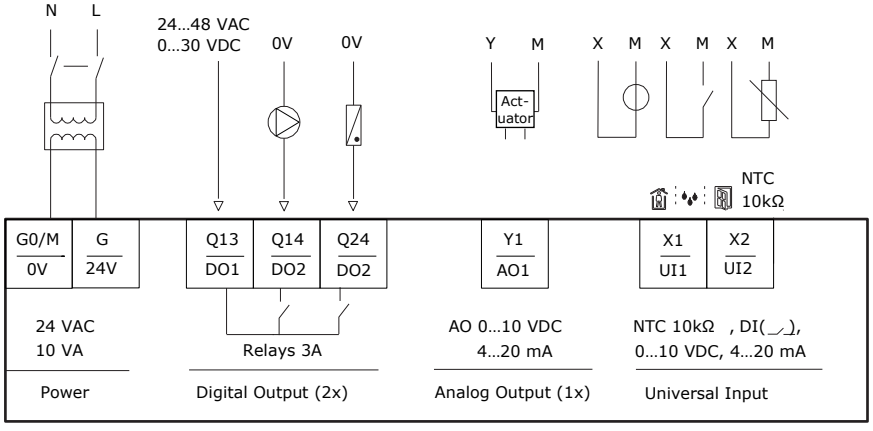

Warning:
Live Electrical Components!
During installation, testing, servicing and troubleshooting of Vector Controls products, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

Terminal Description

G0	Power supply:	0V, -24VDC; common for power supply, analog in- and outputs
G	Power supply:	24VAC, +24VDC
Q	Binary outputs:	Potential free relays contacts (see technical specification)
		Yb1, b2 Binary output common
$X_{U1, u2}$	Universal input:	NTC 10kΩ @ 25°C (77°F), 0…10 V or 0…20 mA (selectable by jumper)
Y1	Analog output:	0…10 V or 0…20 mA*

Use copper, twisted pair, conductors only. The operating voltage must comply with the requirements for safety extra-low voltage (SELV) as per EN 60 730. Use safety insulating transformers class II with double insulation as per EN 60 742; they must be designed for 100% ON-time. When using several transformers in one system, the connection terminal 1 must be galvanic connected. TCI is designed for operation of AC 24 V safety extra-low voltage and is short-circuit-proof. Supplying

© Vector Controls LLC, USA
www.vectorcontrols.com

voltages above AC 24 V to low voltage connections may damage the controller or other devices. Connection to voltages exceeding 42 V endangers personnel safety.

Selection of actuators and sensors


Temperature sensors: Use Vector Controls NTC sensors to achieve maximum accuracy:SDB-Tn10-20 (duct), SRA-Tn10 (room), SDB-Tn10-20 + AMI-S10 as immersion sensor.

Actuators: Choose modulating actuators with an input signal type of 0-10 V DC or 4-20 mA (Min. and max. signal limitations may be set with parameters.3-pointactuators with constant running time are recommended.

Binary auxiliary devices (e.g. pumps, fans, on/off valves, humidifiers, etc.): Do not directly connect devices that exceed specified limits in technical specifications – observe startup current on inductive loads.

© Vector Controls LLC, USA
www.vectorcontrols.com

Display and operation

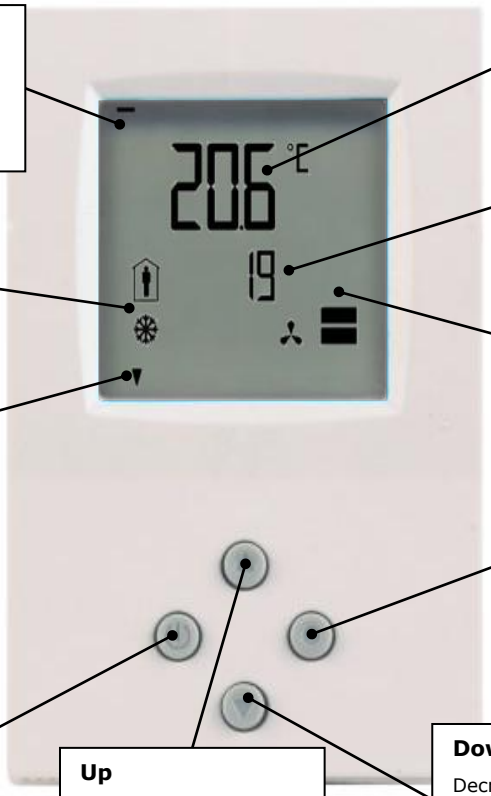

Loop indication
Standard display (no button pressed for 30 sec.): Not visible.
Loop display: Bar at 1 = Loop 1, Bar at 2 = Loop 2

Mode
Display of operation mode

Indicators
Standard display: Active digital output (at 1, 2)
Loop display: Active digital stages (at 8, 9, 10)

Left (POWER)
Press < 2 sec.: Toggle STANDBY-COMFORT mode or switch from OFF to ON
Press > 2 sec.: Turn unit OFF. Text OFF displayed with current time (deluxe) temperature (standard)
(Parameter setting: ENTER to select menu option, accept parameter change)

Large Digits
Display of input or parameter value.

Small Digits
Display of setpoint, clock or parameter number.

Vertical Bar
(Scrolls up/down, 10% resolution)

Right (OPTION)
Press < 2 sec.: Select Control Loop
Press > 2 sec.: Enter set-up CLOCK, SCHEDULES, H/C, °C/°F
(Parameter setting: ENTER to select menu option, accept parameter change)

Up
Increment SET POINT
(Parameter setting: SCROLL menu options and parameters)

Down
Decrement SET POINT
(Parameter setting: SCROLL menu options and parameters)

Operation mode symbols		Control symbols	
	Comfort (occupied): All control functions operating per set points		Heating (Reverse) Active
	Economy (unoccupied): Set points shifted according to *1L07, 2L07*		Cooling (Direct) Active
OFF	Energy Hold Off: Outputs are off, inputs monitored for alarms		Schedule Set
			Manual Override
			Fan Active

Standard display (Parameters UP08, UP09, UP10)

- Active when no key has been pressed for 30 seconds.
- Contents may be chosen with parameters.

Loop display

- Active when changing set points.
- Large digits show input value if 1L 27 or 2L 27 = OFF. Small digits show set point.
  If 1L 27 or 2L 27 = ON, only the setpoint is shown in the large digits.
- Vertical bars show analog output value. Arrows in position 1, 2 and/or 3 show active binary (digital) output stages

Display in OFF mode

➔ When the device is switched off, all enabled input values and the clock are displayed each for 4 seconds on the large LCD digits in a continuous cycle while OFF is displayed in the small digits. To prevent this, make sure that in idle mode no input values are shown on either small or large digits by setting UP09 and UP11 to something else than 1.

© Vector Controls LLC, USA
www.vectorcontrols.com

Override of secondary set point in cascade control

- If cascade control is active, with variable air volume (VAV) for example, the user can override the primary loop and manually select the set point of the secondary loop-the loop is now changed to constant air volume (CAV). Typically for tuning the VAV system. This feature may be disabled with UP02.
- While the secondary loop is displayed change the set point with UP/DOWN. Override Cascade symbol appears.
- Press OPTION to move back to the temperature loop and cancel cascade override.

Power Failure

- All parameters and set points are memorized and do not need to be re-entered.
- Upon return of power: Set *Parameter UP05* to keep the unit off, switch on, or operation mode before power failure.
- Clock and time schedule settings retained for 48 hours (after powered for at least 10 hours).

Error messages

Err1: An assigned input is not enabled or missing. All control loops, functions and outputs tied to this input will be disabled. Verify input connections, jumper settings and parameter settings for the input involved.
Err3: A function refers to a disabled input. Disable the function or enable the input.
Err4: Internal failure. Product must be replaced.

Manual heat – cool change

To manually change heating or cooling mode press the OPTION key for more than 2 seconds. Access to manual heat – cool change may be disabled with parameter UP03.

For TCI-W11-U: Press OPTION > 2 sec. SEL and H-C is displayed. For TCI-W22-U: Press OPTION > 2 sec. SEL and current time is displayed. Press UP key twice. SEL and H-C is displayed. Press OPTION again to toggle H or C.	SEL H-C ☀ ❄

Display input values

For TCI-W11-U: Press OPTION > 2 sec. SEL and H-C is displayed. Press UP key once: UI1 and its value are displayed For TCI-W22-U: Press OPTION > 2 sec. SEL and current time is shown. Press UP key three times. UI1 and value are displayed. Press UP key again to step through the next active input Note: disabled inputs will not be shown.	75% UI 1

Changing temperature unit °C/°F

For TCI-W11: Press OPTION > 2 sec. SEL and H-C is displayed. Press UP key until C–F is displayed Press OPTION to toggle °C or °F unit For TCI-W22: Press OPTION > 2 sec. SEL and current time is shown. Press UP key until C–F is displayed Press OPTION to toggle °C or °F unit Press LEFT to exit	SEL C-F °C

© Vector Controls LLC, USA
www.vectorcontrols.com

Clock operation

TCI-W22-Ucontains a quartz clock with battery back-up (not available in TCI-W11-U). Up to 8 mode changes based on time and day of the week may be programmed. Also position an output or select a set point directly with a time schedule. A blinking clock indicates that the time has not been sector that the unit has been without power for longer than 48 hours. The time needs to be set to allow time schedules to operate.

Clock setup

Press OPTION > 2 sec. SEL and current time displayed Press OPTION< 2 sec. to change time, Minutes blink: UP/DOWN to change, OPTION to save minutes, Hours blink: UP/DOWN to change, OPTION to save hour, Press OPTION to save time, DAY1 blinks: UP/DOWN to change, OPTION to save day	SEL 00:00 DAY1 (Mon)

Enable/disable time schedules

Press OPTION > 2 sec. SEL and current time displayed Press UP: SEL and PRO displayed, clock symbol blinks Press OPTION: Time schedule status displayed OFF or ON: Press OPTION OFF/ ON blinks, UP/DOWN to change, OPTION to save	SEL PRO 🕘	Pro OFF/ON

Creating time schedules

Step 1: Select a switching time (Up to 8, Pr01–Pr08)

Press UP while PRO-ON displayed: Large digits display Pr01, small digits display 00:00 Press OPTION: 00:00 blinks Press UP/DOWN to select Pr01switching time from 00:00–23:45 Press OPTION to save switching time (bar appears indicating step 1 complete): DAY 1 blinks	Pr01 08:00

Step 2: Apply selected switching time (Pr01) to DAY1 (Mon) – DAY 7 (Sun)

While Pr01 is displayed and DAY1 is blinking: Press UP: Activate Pr01 switching time for DAY1 (triangle appears on 1), Press DOWN: Deactivate Pr01 switching time for DAY1(triangle disappears) Press OPTION to save Pr01 DAY1 (2nd bar indicates step 2 complete): Repeat for DAY2 – DAY7	Pr01 DAY1 ▼ 1 2 3 4 5 6 7

Step 3: Select action for switching time (Pr01+Days)

After Pro1, DAY1–DAY7 is completed (Pro1 switching time activate or deactivate on desired days), press OPTION again to come to desired action for Pro1. The following options appear in order: No = switching time not active OP = operation mode (select ON, OFF, COMFORT, ECONOMY) L1 = set point of loop 1 (select set point) L2 = set point of loop 2 (select set point) d1 = ON/OFF status of do1 (output must be in manual mode) d2 = ON/OFF status of do2 (output must be in manual mode) A1 = set point (0-100%) of ao1 (output must be in manual mode) After repeatedly pressing OPTION through DAY7: First available action No appears, blinking: Press UP/DOWN to scroll through the 8 possible actions (3nd bar indicates step 3 complete)	Pr01 no

Step 4: Complete switching event (e.g. Pro1 = 08:00, DAY 1, Comfort mode)

Available actions blink as you scroll through them, Press OPTION to select one: Characteristics of action (e.g. 0–100% for A1) appear (4th bar indicates step 4 complete) Press UP/DOWN to select, OPTION to complete	Pr01 08:00

© Vector Controls LLC, USA
www.vectorcontrols.com

Smart Sensors and Controls Made Easy!

Quality - Innovation – Partnership

Vector Controls LLC
USA

infous@vectorcontrols.com
www.vectorcontrols.com

© Vector Controls LLC, USA
www.vectorcontrols.com