MZ3-C-FS-V11
Controller/positioner for comfort ventilation with integrated CO2 sensor

Function



- Positioner and controller for comfort ventilation with touch panel
- Internal CO2 sensor for air quality measurement
- Manual operation with up to 4 Levels, OFF, minimum air, 1st Level, 2nd Level, maximum air
- AUTO level mode: The controller switches the ventilation according to adjustable levels of the CO2 sensor value.
- AUTO continuous mode: The controller adjusts the ventilation level gradually between adjustable minimum and maximum according to CO2 sensor value
- One 0…10 VDC controls output to control the ventilation system
- Automatic reset of the maximum air level (standard: level 0 after 120 min.)
- Password protected controls settings
- Copy of settings with accessory (AEC-PM2)
- Design fits to the Feller SNAPFIX® program with the design lines EDIZIOdue® and EDIZIO.liv®.
  (Note: SNAPFIX® mounting plate and EDIZIO design frames are not included and must be ordered separately)

Applications

This device is designed to control ventilation systems for comfort applications. For example, for well insulated residential areas which are required to be ventilated or for controlling dampers, valve drives, blinds or windows, etc.

General description

The MZ3-C-FS-V11 is a microprocessor-controlled precision positioner / proportional controller with touch panel. Through user and engineering parameters the positioner may be configured to work for most of the standard ventilation applications. The device is pre-configured according to this documentation. Settings such as switching levels of the control curve and ventilation strengths for each Level may be adjusted. The configuration may be performed using the programming device called OPA-S. This device may be used as well to visualize measuring values. Configuration can as well be updated using a remote memory device called AEC-PM2.

CO2 sensor

The CO2 concentration is measured by photoacoustic sensor technology PASens® with automatic background calibration algorithm (ASC). The measurement technology used guarantees high reliability and long-term stability. The sensor has a pressure dependence (atmospheric pressure), therefore the altitude above sea level can be optionally adjusted to achieve even better accuracy. The microprocessor measures the CO2 concentration every 5 seconds and calculates the signal value from a number of measured values.

Error indication

In case of a sensor error, the failed state is indicated with the OPA-S and the “CO2” LED.
In “auto” operation the “CO2” LED blinks in 1Hz cycle to indicate the error. Additionally, “Err3” is shown on OPA-S when plugged in.

Automatic CO2 background calibration (ASC)

Background Calibration (ASC) is turned on by default and constantly monitors the measured CO2 concentrations. The calibration function expects the CO2 concentration to periodically drop to fresh air levels of 400 ppm. Over a period of several days, the controller attempts to gradually reach this value by recalibrating a maximum of 30ppm per day.
To achieve the specified accuracy, it is necessary for the sensor to run continuously without power interruption for at least 3 weeks.

For special applications such as greenhouses, animal farms, etc., ASC calibration should be disabled and the sensor calibrated manually. The automatic calibration ASC can be deactivated via the external operating terminal OPA-S. The sensor can be calibrated by the customer and does not have to be sent in for calibration.

For more information on manual calibration, see section "Calibration" in the engineering manual.

© Vector Controls GmbH, Switzerland
www.vectorcontrols.com

Types and ordering

Product name	Product No.	Description	Features
MZ3-C-FS-V11-B-T4-W	40-100300	- CO2 sensor - Blue LED - White background - Minimum, Normal, Maximum, Party	Compact positioner / controller with CO2 sensor and one 0-10 VDC output. Operation as 4-Level switch with touch panel and AUTO function.
Note: Mounting plate and frame are not included. See below for options.			
Accessories			
AMM-DS-W	40-510104	Feller EDIZIOdue® frame white	Includes SNAPFIX® mounting plate
AMM-LS-W	40-510105	Feller EDIZIO.liv® frame white	Includes SNAPFIX® mounting plate
OPA-S	40-500006	Programming and display device	LCD display for surface mounting or handheld operation.
AEC-PM2	40-500130	Memory-Device. Used for copying settings	Stores settings of MZ3

Interface to the ventilation system

The positioner works with all systems that are designed for a 0…10 VDC or 2…10 VDC input signal.

Technical Data

Caution! This device is intended to be used for comfort applications. Where a device failure endangers human life and/or property, it is the responsibility of the owner, designer and installer to add additional safety devices to prevent or detect a system failure caused by such a device failure. Vector Controls or its affiliates cannot be held liable for any damage caused by such a failure. Failure to follow specifications and local regulations may endanger life, cause equipment damage and void warranty.

Power supply	Operating voltage	24 V AC/DC ± 10%, 50/60 Hz, Class 2 48 VA max.
	Power consumption	Max. 1 VA
	Electrical connection	Terminal connectors, wire 0,34-2,5 mm2 (AWG 22…13)
Internal sensors	CO2 sensor	Photoacoustic sensor technology PASens® with automatic calibration in the background (ASC)
	Response time (63%)	1 minute
	Measuring range	0 - 2000 ppm vol.
	Repeatability	± 10 ppm typical
	Accuracy	± 50 ppm + 5% of measured value
Signal output	Analog output Output signal Maximum load	 DC 0…10 V 2 mA or 5 kΩ
Environment	Operation Climatic conditions Temperature Humidity	To IEC 721-3-3 class 3K5 0…50 ° C (32…122 ° F) < 95% RH non-condensing
	Transport & storage Climatic conditions Temperature Humidity Mechanical conditions	To IEC 721-3-2 and IEC 721-3-1 class 3K3 and class 1K3 0…50 °C (32…122 °F) < 95% RH non-condensing class 2MT2
Standards	Degree of protection	Wall mounted: IP40 acc. EN 60529 Not installed: IP00 acc. EN 60529
	Safety class	III (IEC 60536)
General	Housing material:	Flame retardant PC+ABS plastic (UL94 class V-0)
	Dimensions (H x W x D) including packaging	60 x 60 x 40 mm (2.4” x 2.4” x 1.6”)
	Weight (incl. packaging)	90 g (3.2 oz)

Product testing and certification

CE Declaration of Conformity

Information on the conformity of our products can be found on our website www.vectorcontrols.com on the corresponding product page under "Downloads".

© Vector Controls GmbH, Switzerland
www.vectorcontrols.com

Connection diagram

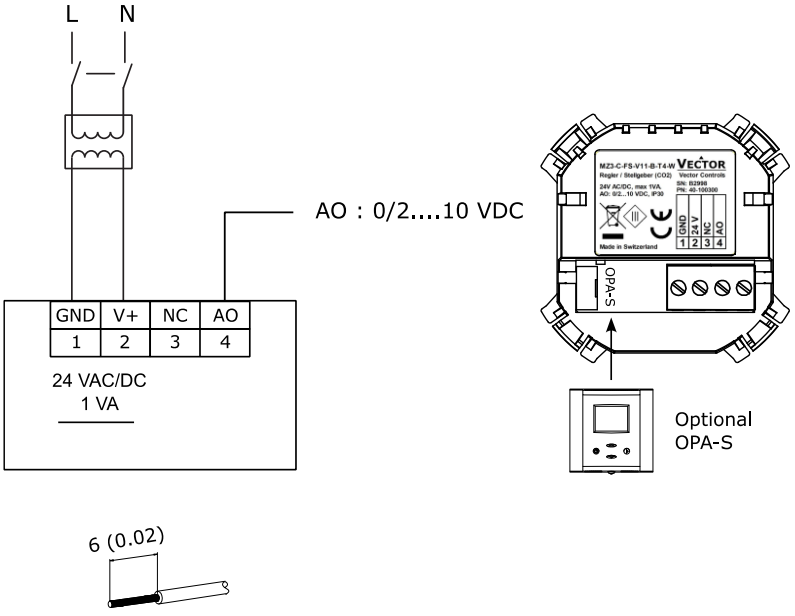

Description:

1	**GND**	Power supply:	0 V, -24 VDC, internally connected to signal common
2	**V+**	Power supply:	24 VAC, +24 VDC
3	**NC**	No connection	
4	**AO**	Analog output ventilation:	0/2…10 VDC

Mounting instruction

Important
All cable entries into the connection box must be sealed to prevent air drafts, which could otherwise affect the sensors in the device and prevent correct measurements!

Dimensions mm (in)

The MZ3-C-FS-V11 is so designed that it can be incorporated into a commercially available flush box (Feller EDIZIOdue® frame and mounting plate are included).

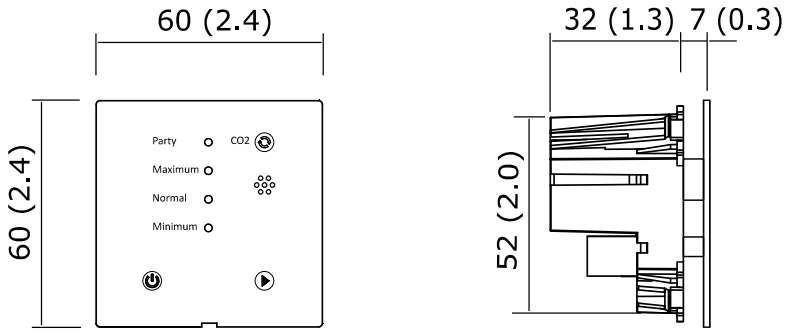

Mounting and installation

Mount the controller on an easily accessible interior wall in a standard flush box.
Mount and connect the controller as shown in the MZ3-C-FS-V11 installation manual no. 70-001095 supplied with the device, and wire it according to the connection diagram above.

© Vector Controls GmbH, Switzerland
www.vectorcontrols.com

Display and operation

ON/OFF operation

The device is activated by pressing the ON/OFF button. Depending on the position of JP1, the minimum air volume remains active even during OFF mode. In OFF mode, the operating mode symbol lights up with reduced intensity.

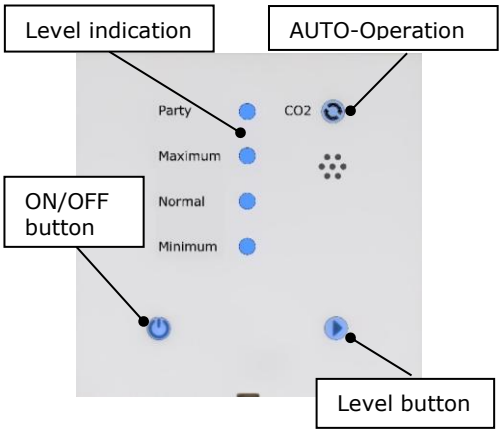

Manual operation

The following operation modes will be activated through repeated pressing of the level button:

- Level 0 = Minimum volume [Minimum]
- Level 1 = Normal volume [Normal]
- Level 2 = High volume [Maximum]
- Level 3 = Maximal volume [Party]
- Auto operation (automatic level selection)

The active level is activated after 3 seconds. This prevents unnecessary switching when setting the device. The level-indication and buttons light up in green or blue depending on the type of device.

The device is equipped with proximity detection. When approaching a distance of approx. 10 cm, the luminosity of the LED increases. After 30 seconds without interaction, the LEDs dim down again and thus save energy.

Operating Modes

Manual operation

In manual mode, the ventilation level is defined by means of the level button, see section „Display and operation“ on page 4.

Automatic operation

Automatic operation must be activated with the level button or through the automatic reset function defined with IP08, see section “Display and operation” on page 4 and “Input configuration (CO2)”.

The IP08 parameter defines the amount of time after which the unit will return to automatic mode if it has been manually overridden or switched off. If the unit has been switched off, it will reactivate itself once the reset time has elapsed. Setting the reset time to 0 deactivates automatic reset.

Level mode (IP00=ON)

During AUTO operation, the levels are switched by a control signal. The switching levels are defined under IP04 – IP06. The hysteresis defined with IP07 prevents rapid switching of levels in auto mode.

Function: A level activates once the input signal exceeds the activation limit (IP04-IP06). It deactivates once the input signal drops below the activation limit minus the hysteresis. For example, with a hysteresis of 10% and an activation limit of 40%, the level activates with a 40% input signal and switches down to the next lower level with a 30% input signal.

Automatic switching for certain levels may be disabled by setting an activation limit of 0. The sensor signal will then not be able to activate this particular level. This may proof useful for the highest level (boost mode) by setting IP06 = 0.

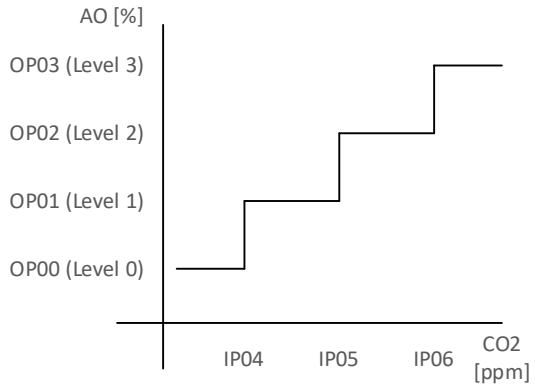

Figure 1: Function level mode

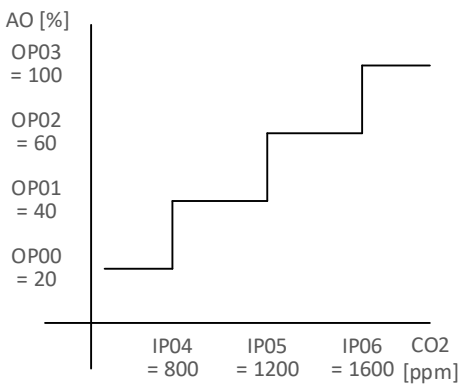

Figure 2: Example level mode

© Vector Controls GmbH, Switzerland
www.vectorcontrols.com

Continuous mode (IP00=OFF)

During AUTO operation, the ventilation is controlled gradually by the sensor signal. Instead of level steps, the output voltage is adjusted continuously. The sensor minimum and sensor maximum of the linear range can be set with IP04 and IP06. The output voltage then behaves linearly between OP00 and OP03.

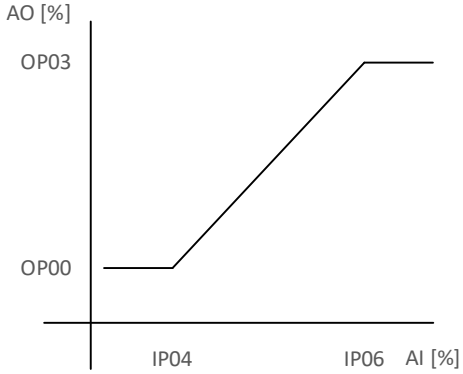

Figure 3: Function continuous mode

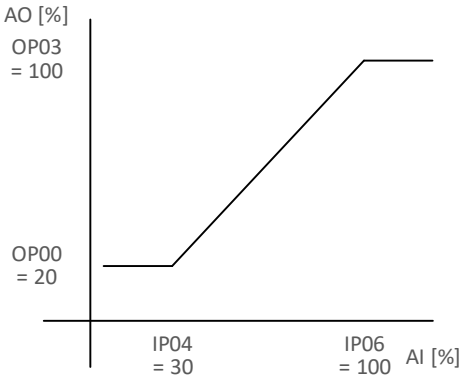

Figure 4: Example continuous mode

NOTE: If the MZ3 is used in continuous mode, the following settings are recommended:

- IP04 = 20% (400 ppm)
- IP06 = 100% (2000 ppm)
- OP00 = 0% (0 V)
- OP03 = 100% (10 V)

© Vector Controls GmbH, Switzerland
www.vectorcontrols.com

Smart Sensors and Controls
Made Easy!

Quality - Innovation – Partnership

Vector Controls GmbH
Switzerland

info@vectorcontrols.com
www.vectorcontrols.com/

© Vector Controls GmbH, Switzerland
www.vectorcontrols.com