

SRC-H1T1 Indoor humidity & temperature transmitter

Features

- Replaceable sensor element
- Indoor humidity and temperature measurement
- Minimum and maximum value memory
- 0...10V, 0...20mA or 2...10V, 4...20mA measuring signals selectable with jumpers
- Optional alternative signal ranges programmable
- Selectable averaging signal
- Optional external display (OPA-S)
- Status LED



Applications

- Indoor humidity & temperature measurement for heating, ventilation and air conditioning applications
- Recording of minimum and maximum values for critical environments
- Supervision of critical humidity and temperatures

Humidity & temperature transmitter

A unique capacitive sensor element is used for measuring relative humidity while temperature is measured by a band-gap sensor. The applied measuring technology guarantees excellent reliability and long-term stability. The microprocessor samples the humidity and temperature once per second. It calculates an averaging signal over a preset number of seconds and generates the output signal based on lower and upper signal range values. Standard range is 0...100%RH, -40...60°C (-40...140°F) and 10 seconds average. The signal range of the temperature measurement and the averaging samples may be customized. Standard output signal range and types may be selected by jumpers. Standard signal ranges are: 0...10 VDC, 0...10 VDC, 4...20 mA and 0...20 mA. Other ranges can be defined by using a programming tool (OPA-S).

Minimum and maximum values

Using the programming tool, the user has the option to read out and reset minimum and maximum values. The minimum and maximum values may as well be used as output signals. The minimum and maximum values are saved into the EEPROM and are available after a power interruption.

Ordering

Per default a sensor element with 3%RH accuracy is included. Contact your local sales contact to order sensing elements with different accuracies.

Signal converter

Item Name	Item code	Description/Option
SRC-H1T1-A3	40-300142	Signal converter for humidity & temperature sensor
SRC-H1T1-A3-W0	40-300142-0	0 Signal range: -40...60°C (-40...140°F) (Default)
SRC-H1T1-A3-W1	40-300142-1	1 Signal range: -35...35°C (-31...95°F)
SRC-H1T1-A3-W2	40-300142-2	2 Signal range: 0...50°C (32...122°F)
SRC-H1T1-A3-W3	40-300142-3	3 Signal range: Special – Specify in order

Sensor element

Item Name	Item code	Humidity Accuracy [%rH]	Temperature Accuracy [K] @25°C (77°F)	Description/Option
AES3-HT-A2	40-500102	± 2%	± 0.3°	Humidity - temperature sensor element
AES3-HT-A3	40-500103	± 3%	± 0.4°	
AES3-HT-A5	40-500104	± 5%	± 0.5°	

Accessories

Item Name	Item code	Description/Option
OPA-S	40-500006	External display module

Technical Specifications

Important notice and safety advice

This device is for use as a humidity and temperature transmitter. It is not a safety device. Where a device failure could endanger human life and property, it is the responsibility of the client, installer and system designer to add additional safety devices to prevent such a device failure. Ignoring specifications and local regulations may cause equipment damage and endangers life and property. Tampering with the device and misapplication will void warranty.

Power supply	Operating Voltage Transformer	24 VAC 50/60 Hz \pm 10%, 24 VDC \pm 10% SELV to HD 384, Class II, 48VA max
	Power Consumption	Max 2 VA
	Terminal Connectors	For wire 0.34...2.5 mm ² (AWG 24...12)
Sensing probe	Humidity Sensor:	Capacity sensor element
	Range	0...100 %RH
	Measuring Accuracy	See Figure 1
	Hysteresis	\pm 1%
	Repeatability	\pm 0.1%
	Stability	< 0.5% / year
	Temperature Sensor:	Bandgap sensor
	Measuring Accuracy	See Figure 2
	Repeatability	\pm 0.1°C, \pm 0.2°F
Signal outputs	Analog Outputs	
	Output Signal	DC 0-10V or 0...20mA
	Resolution	10 Bit, 9.7 mV, 0.019.5 mA
	Maximum Load	Voltage: \geq 1k Ω Current: \leq 250 Ω
Environment	Operation	To IEC 721-3-3
	Climatic Conditions	class 3 K5
	Temperature	0...70°C (32...158°F)
	Humidity	<95% R.H. non-condensing
	Transport & Storage	To IEC 721-3-2 and IEC 721-3-1
	Climatic Conditions	class 3 K3 and class 1 K3
	Temperature	0...70°C (32...158°F)
	Humidity	<95% R.H. non-condensing
	Mechanical Conditions	class 2M2
Standards	conformity	
	EMC Directive	2014/30/EU
	Low Voltage Directive	2014/35/EU
	Product standards Automatic electrical controls for household and similar use	EN 60 730 -1
	Electromagnetic compatibility for domestic and industrial sector	Emissions: EN 60 730-1 Immunity: EN 60 730-1
	Degree of Protection	IP30 to EN 60 529
	Safety Class	III (IEC 60536)
General	Housing Materials	Fire proof PC+ABS plastic (UL94 class V-0)
	Cover Mounting Plate	Galvanized Steel
	RoHS compliant according to	2011/65/EU
	Dimensions (H x W x D)	21 x 88 x 88 mm (0.8 x 3.5 x 3.5 in)
	Weight (including package)	160 g (5.6 oz)

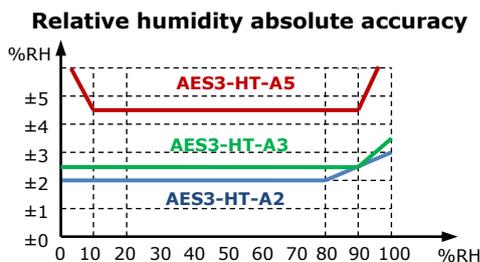


Figure 1: Max RH-tolerance at 25 °C (77 °F) per sensor type

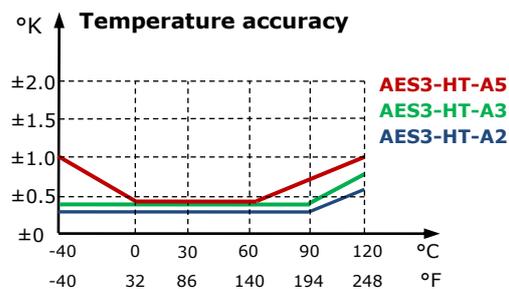
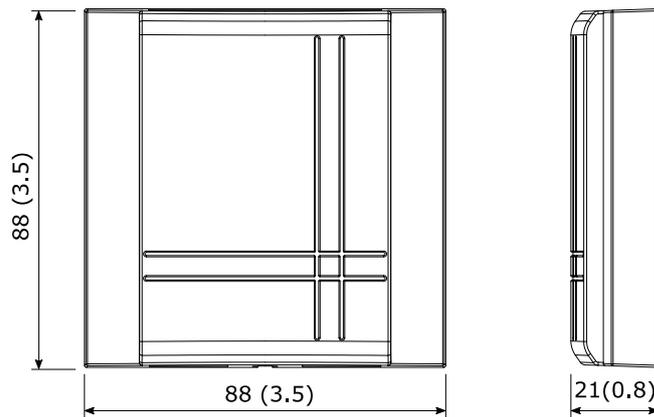


Figure 2: Max T-tolerance by sensor type

Note on accuracy: allow one hour after power up for compensation swing in

Dimension mm (inch)**Mounting location**

- On a flat, easily accessible inner wall
- The following installation locations should be avoided:
 - Protect from direct exposure to sunlight
 - Do not install near heat sources, e.g. radiators or other heat-generating devices
 - Air storage spaces and niches, e.g. behind doors or shelves
 - Outside walls insufficiently insulated
 - In the direct sphere of influence of ventilation openings and fans

Warning about storage, packaging and usage environment

The sensing part is a polymer, which measures the humidity in the ambient air. For proper sensor operation some mandatory precautions need to be taken during storage, packaging and usage.

The transmitter and its sensing element should not be packaged, stored or used in out-gassing plastic materials, which could cause sensor contamination. In particular, it is recommended not to use any glue or adhesive tapes (Sellotape, Scotch-Tape, Tesa-Film, etc.) within the package or close proximity of the sensor. Foamed materials often cause contamination problems and should not be used to package the transmitter. Best packaging material is a simple cardboard box or a deep-drawn plastic case in a cardboard box.

Mounting instruction / replacing the sensor element

See installation sheet no. 70-000568 (www.vectorcontrols.com).

Configuration

The transmitter can be adapted to fit perfectly into any application by adjusting the software parameters. The parameters are set with the operation terminals OPA-S. The OPA-S may also be used as remote indicator.

Input configuration

Parameter	Description	Range	Default
IP 00	TI1: Celsius or Fahrenheit, C = OFF, F = ON	ON, OFF	OFF
IP 01	TI1: Samples taken for averaging control signal	1...255	10
IP 02	TI1: Calibration	-10...10	0
IP 03	TI1: Minimum temperature	-40...215 °C/F	0 °C
IP 04	TI1: Maximum temperature	-40...215 °C/F	50°C
IP 05	H1: Show Percent	ON, OFF	ON
IP 06	H1: Samples taken for averaging control signal	1...255	10
IP 07	H1: Calibration	-10...10%	0

Output configuration

Parameter	Description	Range	Default
OP 00	AO1: Humidity: Configuration of output signal: 0 = Feedback humidity input, 1 = Feedback humidity minimum value 2 = Feedback humidity maximum value	0 - 2	0
OP 01	AO1: Humidity: Minimum limitation of output signal	0 - Max %	0%
OP 02	AO1: Humidity: Maximum limitation of output signal	Min - 100%	100%
OP 03	AO2: Temperature: Configuration of output signal: 0 = Feedback temperature input, 1 = Feedback temperature minimum value 2 = Feedback temperature maximum value	0 - 2	0
OP 04	AO2: Temperature: Minimum limitation of output signal	0 - Max %	0%
OP 05	AO2: Temperature: Maximum limitation of output signal	Min - 100%	100%

Output signal configuration

The analog output signal type may be configured with a jumper for 0-10 VDC or 0-20 mA control signals. The jumpers are located next to the terminal connector of each analog output. See table below for jumper placement. The factory setting is to 0-10 VDC.

Signal type	JP1, JP2
0 - 10 V	(1-2)
0 - 20 mA	(2-3)


The signal range may be set with JP3 for both analog outputs. JP3 will only operate if the output range specified with OP01 and OP02 or OP04 and OP05 is left at the default position of 0...100%. With any other setting the position of JP3 has no influence and the range defined with the output parameters applies.

Signal range	JP3
0 - 10 V, 0 - 20 mA	(1-2)
2 - 10 V, 4 - 20 mA	(2-3)

Jumper settings

JP1, JP2 Signal type	
	U1 / U2
	0-10V, 2-10V
	I1 / I2
	0-20mA, 4-20mA

JP3 Signal range	
	U1, U2: 0-10V
	I1, I2: 0-20mA
	U1, U2: 2-10V
	I1, I2: 4-20mA

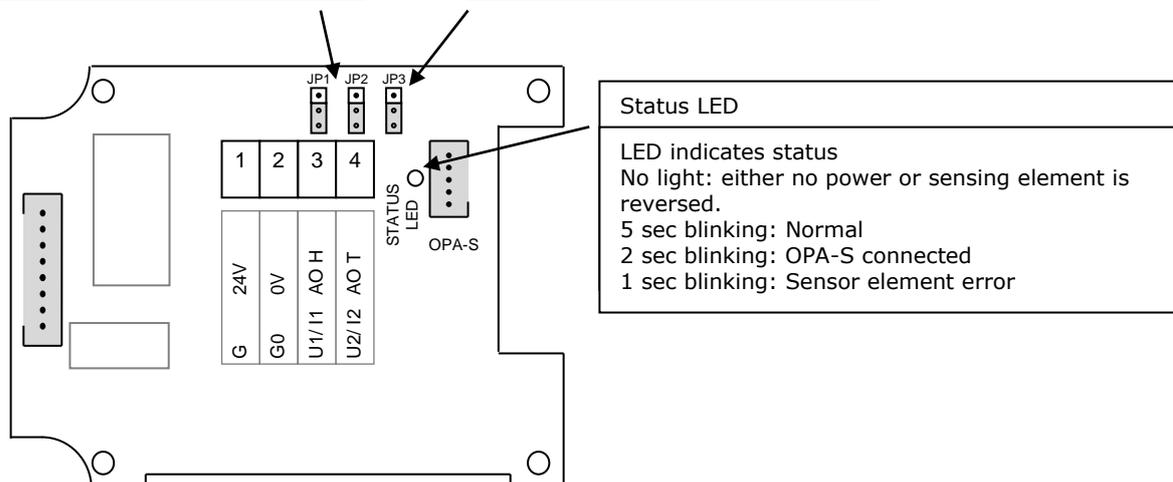

Status LED
LED indicates status
No light: either no power or sensing element is reversed.
5 sec blinking: Normal
2 sec blinking: OPA-S connected
1 sec blinking: Sensor element error

Empty page.

Smart Sensors and Controls Made Easy!

Quality - Innovation – Partnership

Vector Controls GmbH
Switzerland

info@vectorcontrols.com
www.vectorcontrols.com/

