



OPF2-2T-VC, OPF2-2TH-VC

Wall mount operation terminal for X2 controllers and sensors

The OPF2-2T-VC, OPF2-2TH-VC is a wall-mountable remote display and operation terminal for the X2 controllers and sensors and includes a temperature and humidity sensor as well as two passive inputs. The large backlit display allows easy configuration of the parameters and operation of the controller.

Functions

- Remote access to controller state, setpoints, inputs and outputs
- Access to time schedule and clock settings
- Access to configuration parameters
- RS485 peer to peer communication to a X2 controller over a proprietary protocol
- The terminal adapts itself to the X2 controller used. One terminal thus fits all the configuration variations of the X2 product range.
- 1 Internal temperature sensor
- 1 Internal humidity sensor with AES4-HT-A3
- 2 passive inputs

Applications

- Configuration and operation of X2 controllers and sensors
- Remote supervision (RS485)

Safety



DANGER! Safety advice

This device is for use as operating controls. It is not a safety device! Where a device failure endangers human life and/or property, it is the responsibility of the client, installer and system designer to add additional safety devices to prevent a system failure caused by such a device failure. Ignoring specifications and local regulations may cause equipment damage and endangers life and property. Tampering with the device and misapplication will void warranty.

Types and Ordering

| Product Name | Product No. | Description |
|--------------|-------------|--|
| OPF2-2TH-VC | 40-50-0158 | Wall mount operation terminal for X2 controllers with peer-to-peer RS485 communication: 1 internal temperature sensor, 1 internal humidity sensor and 2 passive inputs |
| OPF2-2T-VC | 40-50-0159 | Wall mount operation terminal for X2 controllers with peer-to-peer RS485 communication: 1 internal temperature sensor and 2 passive inputs |

Technical specifications

| | | | |
|--------------------------------|-----------------------|---|---|
| Power supply | Power requirements | 5...24 V AC/DC ±10%, 50/60 Hz, 5...34 VDC SELV to HD 384, Class II, 48VA max | |
| | Power consumption | Max. 1 VA, max 0.5W | |
| | Electrical connection | Screw terminal connectors for wire 0.13...2.0 mm ² (AWG 26...14) | |
| Built in sensors (Type) | Temperature sensor | | |
| | Range | 0...50 °C (32...122 °F) | |
| | Measuring accuracy | 0.5 C (0.9 F) | |
| | -TH Humidity sensor | Range | Capacity sensor element 0...100% RH |
| | | Measuring accuracy | See Figure 1 in section Sensors |
| | | Hysteresis | ± 1% |
| | | Repeatability | ± 0.1% |
| Stability | < 0.2% / year | | |
| Signal Input | Passive input DI | IN1, IN2 | |
| | Range | Open contact to GND | |
| Communication | Hardware interface | RS485 in accordance with EIA/TIA 485 | |
| | Cabling | Shielded twisted pair (STP) cable | |
| | Impedance | 100 to 130 ohm | |
| | Nominal capacitance | 100 pF/m (30 pF/ft) or lower | |
| Environment | Operation | To IEC 721-3-3 | |
| | Climatic conditions | class 3K5 | |
| | Temperature | 0...50 °C (32...122 °F) | |
| | Humidity | <85 % RH non-condensing | |
| | Transport & storage | To IEC 721-3-2 and IEC 721-3-1 | |
| | Climatic conditions | class 3K3 and class 1K3 | |
| | Temperature | 0...50 °C (32...122 °F) | |
| | Humidity | <95 % RH non-condensing | |
| Mechanical conditions | class 2M2 | | |
| Standards | Degree of Protection | IP30 to EN 60 529 | |
| | Pollution Class | II (EN 60 730-1) | |
| | Safety Class | III (EN 60 730-1) | |
| | Overvoltage Category | II (EN 60 730-1) | |
| | General | Material | Flame retardant PC+ABS plastic (UL94 class V-0) |
| Dimensions (H x W x D) | | 93 x 93 x 25 mm (3.7 x 3.7 x 0.95 in) | |
| Weight (including package) | | 198g (7.0 oz) | |

Product testing and certification



Declaration of conformity

Information on the conformity of our products can be found on our website www.vectorcontrols.com on the corresponding product page under "Downloads".

Mounting and Installation

Mounting location

- Mount the operation terminal on an easily accessible interior wall, approx. 1.5 m above the floor in an area of average temperature.
- The following mounting locations should be avoided:
 - Protect from direct exposure to sunlight
 - Do not mount near heat sources or other heat-generating devices
 - Do not mount in a wet or condensation prone environment
 - Areas with poor air circulation and niches or behind doors
 - In the direct influence area of ventilation and fans



Important

Observe local regulations!

Sealing of cable entries



Important

All cable entries into the operation terminal must be sealed to prevent air drafts, which could otherwise affect the sensors in the device and prevent correct measurements!

Installation instructions




See the OPF2-VC installation sheet, document no. 70-00-1019 (www.vectorcontrols.com).

Wiring and Connection



WARNING! Live Electrical Components

During installation, testing, servicing and troubleshooting of Vector Controls products, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury

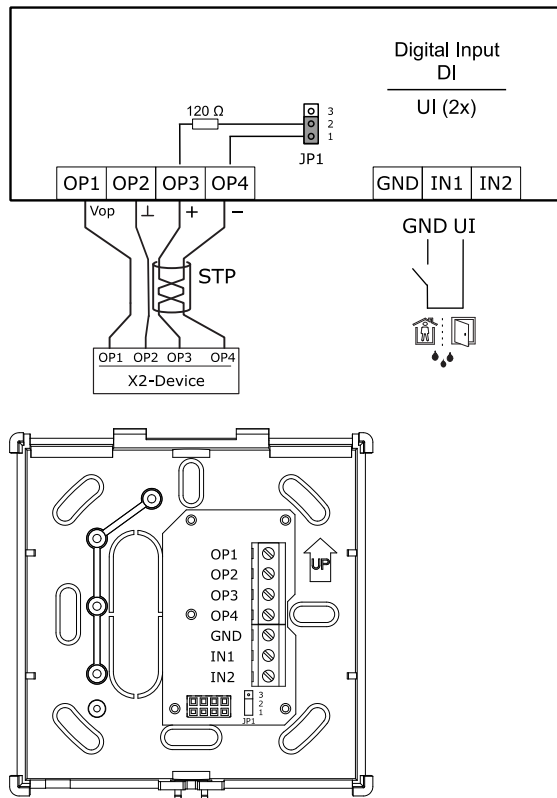

| | | |
|------------|------------------------|------------------------------|
| OP1 | Communication X2: | V+ power supply (RS485) |
| OP2 | Communication X2: | 0V power supply (RS485) |
| OP3 | Communication X2: | RS485+ |
| OP4 | Communication X2: | RS485- |
| GND | External input ground: | 0V, Common for inputs |
| IN1 | External input signal: | Digital input (open contact) |
| IN2 | | |

Wiring of communication (RS485)

Wire type

An EIA-485 network shall use shielded, twisted-pair cable for data signaling with characteristic impedance between 100 and 130 ohms. Distributed capacitance between conductors shall be less than 100 pF per meter (30 pF per foot). Distributed capacitance between conductors and shield shall be less than 200 pF per meter (60 pF per foot). Foil or braided shields are acceptable.


Maximum length

The maximum recommended length per segment is 1200 meters (4000 feet) with AWG 18 (0.82 mm² conductor area) cable.

Network terminating resistor

The built-in 120 Ohm network termination resistor is enabled by default with jumper JP1 in positions 1 and 2.

Dimensions, mm (inch)

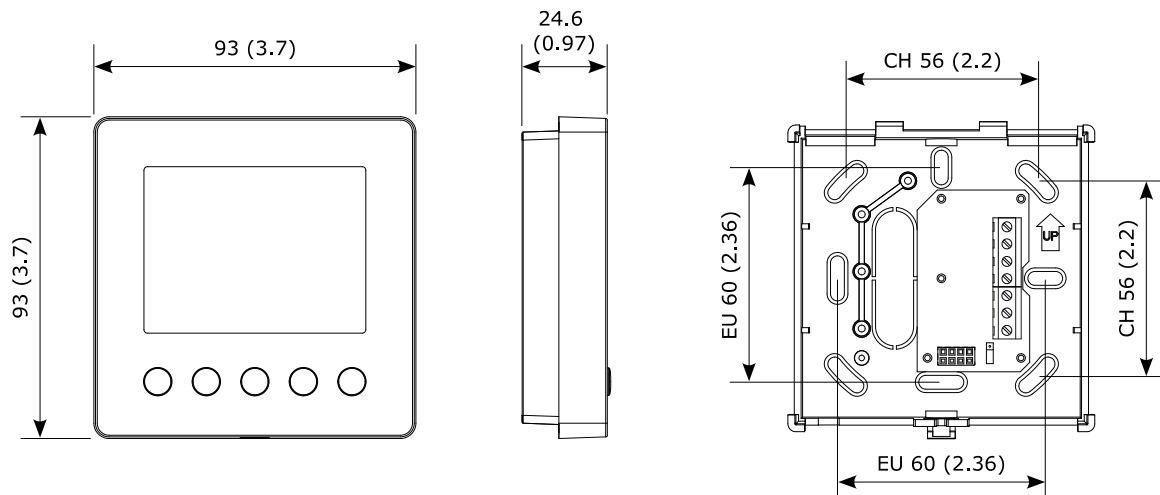

Documentation overview

| Document Type | Document No. | Description |
|-----------------------|--------------|------------------------------------|
| OPF2-VC Data Sheet | 70-00-1020 | Product data sheet (this document) |
| OPF2-VC Install Sheet | 70-00-1019 | Mounting and installation manual |

Sensors

Humidity from RH sensor in -TH type

For measuring humidity, this device uses the sensor plug-in AES4-HT-A3.


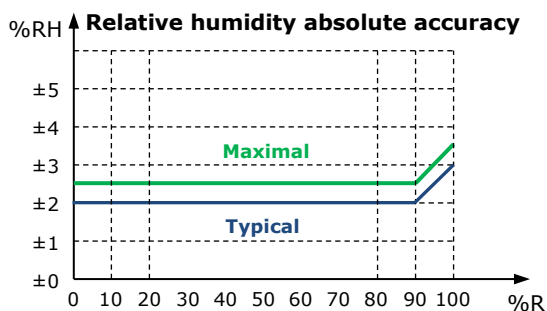




Figure 1: Typical and maximal RH accuracy at 25°C (77°F)

Display and Operation



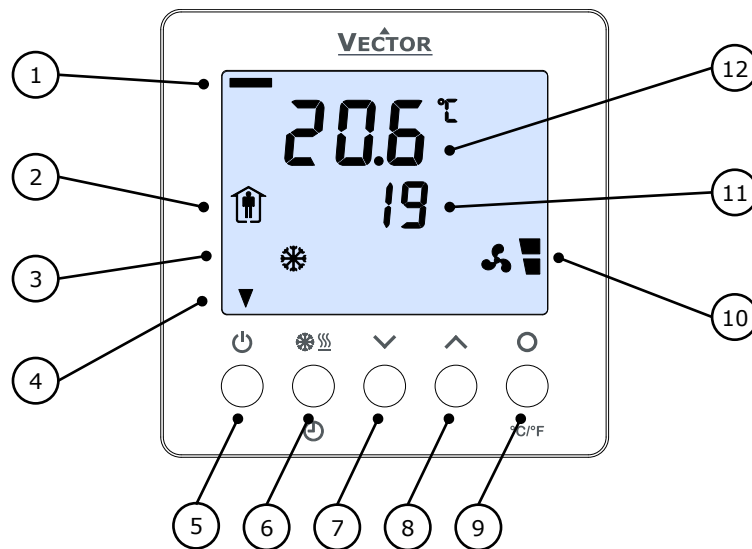




| Pos. | Function / Description |
|------|---|
| 1 | Loop indication - Standard display (no button pressed for 30 sec.): Not visible - Loop display: Bar at far left = Loop 1, Bar toward right = Loop 2 |
| 2 | Operating Mode - Display of operation mode |
| 3 | Controlling Mode - Display of control mode |
| 4 | Indicators - Standard display: Active digital outputs (arrow at far left=1, toward right=2) |
| 5 | Operating Mode (POWER)(Back) - Press < 2 sec.: Toggle OCCUPIED / UNOCCUPIED mode or switch from OFF to ON - Press > 2 sec.: Turn unit OFF. Text OFF displayed - (Parameter setting: BACK to previous menu) - (Menu navigation: Back to previous/home menu) |
| 6 | OPTION (HEATING / COOLING) - Press < 2 sec.: Toggle HEATING / COOLING - Press > 2 sec.: Enter set-up CLOCK ... |
| 7 | DOWN (-) - Decrease SET POINT - (Parameter setting: SCROLL menu options and parameters) |
| 8 | UP (+) - Increase SET POINT - (Parameter setting: SCROLL menu options and parameters) |
| 9 | RIGHT °C/°F (Enter) - Press < 2 sec.: Select Fan speed, Control Loop - Press > 2 sec.: Change °C / °F - (Parameter setting: select UI calibration in UI menu) - (Parameter setting: ENTER to select menu option, accept parameter change) |
| 10 | Vertical Bar - Display of input/output value with 10% resolution - (Parameter setting: Displays programming step) |
| 11 | Small Digits - Display of setpoint, clock or parameter number |
| 12 | Large Digits - Display of measured room temperature, input or parameter value |


Operating mode

| Display | Description |
|---|---|
|  | Occupied (Comfort) - All control functions operating per set points |
|  | Unoccupied (Economy) - Set points shifted according to 1L07, 2L07 |
| OFF | Protection (Energy Hold Off) - Outputs are off, inputs monitored for alarms |

Controlling mode

| Display | Description |
|---|--|
|  | Cooling - Cooling (Direct) Active |
|  | Heating - Heating (Reverse) Active |
|  | Manual - Manual Override |
|  | Clock / Schedules - Schedule Set |
|  | Fan - Fan Active |

Operation status

| Display | Description |
|---|--------------------------------|
|  | Alarm - Alarm active |

Idle display

- The idle display is activated when no key has been pressed for 30 seconds.
- The contents of the idle display are selectable through parameters UP08 to UP14.
- Setting UP08 to OFF will disable idle display. Last active control loop or manual output will remain displayed.

Display of control loop

- Active when changing set points. Large digits show input value. Small digits show set point. Horizontal bars top left show which loop is being displayed.

Operation instructions



For operation details for the OPF2-2TH-VC see "X2-Operation Manual Button Display", document no. 70-00-0950 (www.vectorcontrols.com).

Empty page.

Smart Sensors and Controls Made Easy!

Quality - Innovation – Partnership

Vector Controls GmbH
Switzerland

info@vectorcontrols.com
www.vectorcontrols.com

