



## Universal Programmable Controller TCX2

The TCX2 is a programmable universal controller with communication capabilities. Each control loop may use 2 PI sequences and 6 binary stages. The TCX2 comes with a built in RS485 communication interface that allows peer-to-peer communication with an operation terminal such as OPA2-(2TH)-VC. Complete parameter sets may be copied by use of an accessory called AEC-PM1 or exchanged with a PC using an RS485-USB converter and the Easyset program. The TCX2 uses the universal X2-operating system.

### Applications

- Refrigeration / air conditioning units
- Air handling units
- Chillers
- Humidifying / dehumidifying
- Pressure / pump systems
- and many more...

### Functions

- 4 universally configurable control loops:
  - Functions for dehumidifying, set point shift and cascade control
  - Multiple auxiliary functions: heat-cool auto changeover, automatic enable, set point compensation
  - Free heating and cooling with economizer function based on enthalpy or temperature
  - Differential, averaging, min and max functions, enthalpy and dew point calculations
  - Transmitter function for inputs and set points
- 8 selectable universal inputs (VDC, mA, NTC)
- 3 universal analog outputs (VDC, mA) and 6 relays with each a normally open contact
- 8 freely assigned alarm conditions, selectable state of outputs on alarm condition
- Power cap protected real-time clock with 48hr power backup
- 7-day programmable schedules, with options including change of set points and direct position of manual outputs
- Password protected programmable user and control parameters

### Ordering

Model	Item	Loop	UI	DO	AO	Functions
TCX2-40863	40-110032	4	8	6 Relays	3	Universal controller standalone
TCX2-40863-OP	40-110036	4	8	6 Relays	3	Controller with display standalone
AEC-PM1	40-500016					Plug-In memory module
AEX-MOD	40-500013					Modbus RTU or ASCII communication
AEX-BAC	40-500044					BACnet® MS/TP communication
AMM-1	40-510022					Accessory for cabinet door mounting


A large range of remote operation terminals may be found on our website. All -VC operation terminals work with this controller.

## Technical specifications

### Important notice and safety advice

This device is for use as an operating controller. It is not a safety device. Where a device failure could endanger human life and property, it is the responsibility of the client, installer and system designer to add additional safety devices to prevent such a device failure. Ignoring specifications and local regulations may cause equipment damage and endangers life and property. Tampering with the device and misapplication will void warranty.

<b>Power supply</b>	Power requirements	24 VAC $\pm$ 10%, 50/60 Hz, 15..34 VDC SELV to HD 384, class II, 48VA max		
	Power consumption	Max. 10 VA		
	Electrical connection	Removable terminal connectors, wire 0.34...2.5 mm <sup>2</sup> (AWG 24...12)		
	Clock backup	Min. 48 hours		
<b>Signal inputs</b>	Universal input	Input jumper set for voltage or current		
	Input signal	0...10 V or 0...20 mA		
	Resolution	9.76 mV or 0.019 mA (10 bit)		
	Impedance	Voltage: 98k $\Omega$ Current: 250 $\Omega$		
<b>Signal outputs</b>	Passive input	Input jumper set to temperature (RT) or digital input (DI)		
	Type:	NTC (Sxx-Tn10) 10k $\Omega$ @25°C		
<b>Connection to remote terminal</b>	Range	-40...100 °C (-40...212 °F)		
	Analog outputs:	Output signal	DC 0...10 V or 0...20 mA	
		Resolution	9.76 mV or 0.019 mA (10 bit)	
		Maximum load	Voltage: $\geq$ 1k $\Omega$ Current: $\leq$ 250 $\Omega$	
	Relay outputs:	AC Voltage	0...250 VAC, full-load current 3A, locked-rotor 18A	
		DC Voltage	0...30 VDC, full-load current 3A, locked-rotor 18A	
	Insulation strength between relays contacts and system electronics:	between neighbouring contacts:	4000V AC to EN 60 730-1 1250V AC to EN 60 730-1	
		Hardware interface	RS485 in accordance with EIA/TIA 485	
	<b>Environment</b>	Cabling	Twisted pair cable	
		Operation	To IEC 721-3-3	
Climatic conditions		class 3K5		
Temperature		0...50 °C (32...122 °F)		
Humidity		<85 % RH non-condensing		
Transport & storage		To IEC 721-3-2 and IEC 721-3-1		
Climatic conditions		class 3K3 and class 1K3		
Temperature		-25...70 °C (-13...158 °F)		
Humidity		<95 % RH non-condensing		
Mechanical conditions		class 2M2		
<b>Standards</b>		conformity	2004/108/EC	
		EMC directive	2006/95/EC	
		Low voltage directive		
	Product standards			
	Automatic electrical controls for household and similar use	EN 60 730 -1		
	Special requirement on temperature dependent controls	EN 60 730 - 2 - 9		
	Electromagnetic compatibility for industrial and domestic sector	Emissions: EN 60 730-1	Immunity: EN 60 730-1	
	Degree of protection	IP00 to EN 60 529		
	Pollution class	II (EN 60 730-1)		
	Safety class: Local regulations must be observed!	III (IEC 60536) if SELV is connected to DO II (IEC 60536) if line voltage is connected to DO.		
	Overvoltage category	III (EN 60 730-1)		
		Product standards:		
		Temperature- indicating and -regulating equipment	UL 873	CSA C22.2 No. 24
		Mark: c(ETL)us	Certified by Intertek: 4005917	
	<b>General</b>	Material	Fire proof ABS plastic (UL94 class V-0)	
Dimensions (H x W x D)		56 x 147 x 115 mm (2.3 x 5.8 x 4.5 in)		
Weight (including package)		TCX2-40863: 430g (15.2 oz)	TCX2-40863-OP: 490g (17.3 oz)	

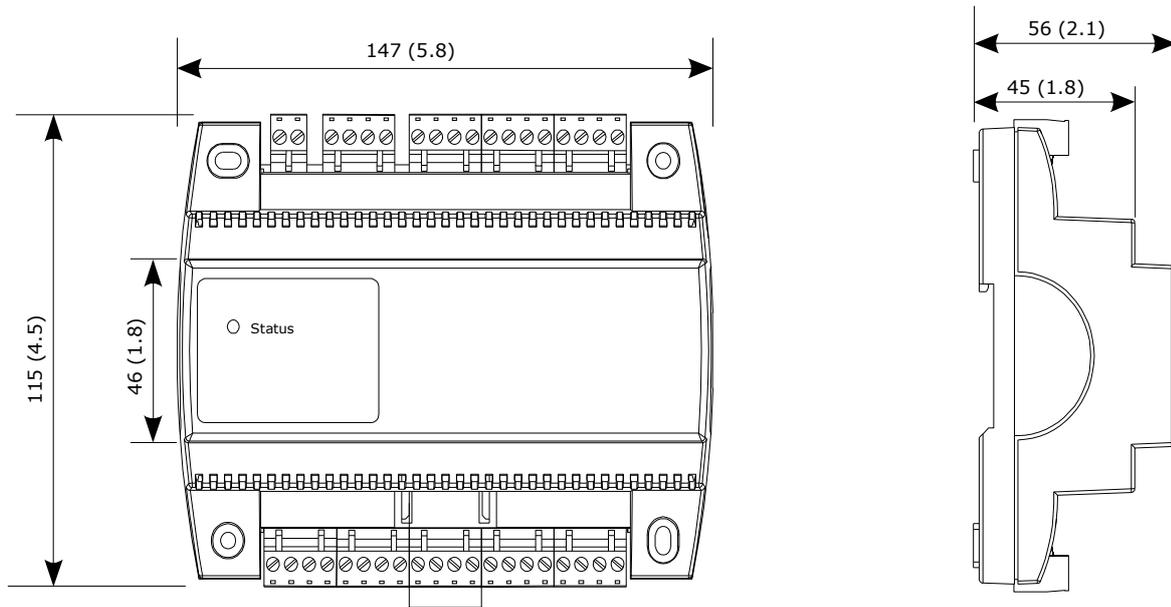**Dimensions, mm (inch)****Selection of actuators and sensors****Temperature sensors**

Use Vector Controls NTC sensors to achieve maximum accuracy: SDB-Tn10-20 (duct), SRA-Tn10 (room), SDB-Tn10-20 + AMI-S10 as immersion sensor.

**Actuators**


Choose modulating actuators with an input signal type of 0-10 V DC or 4-20 mA (Min. and max. signal limitations may be set with parameters).

3-point actuators with constant running time are recommended.

**Binary auxiliary devices** (e.g. pumps, fans, on/off valves, humidifiers, etc.)

Do not directly connect devices that exceed specified limits in technical specifications – observe startup current on inductive loads.

**Connection diagram**

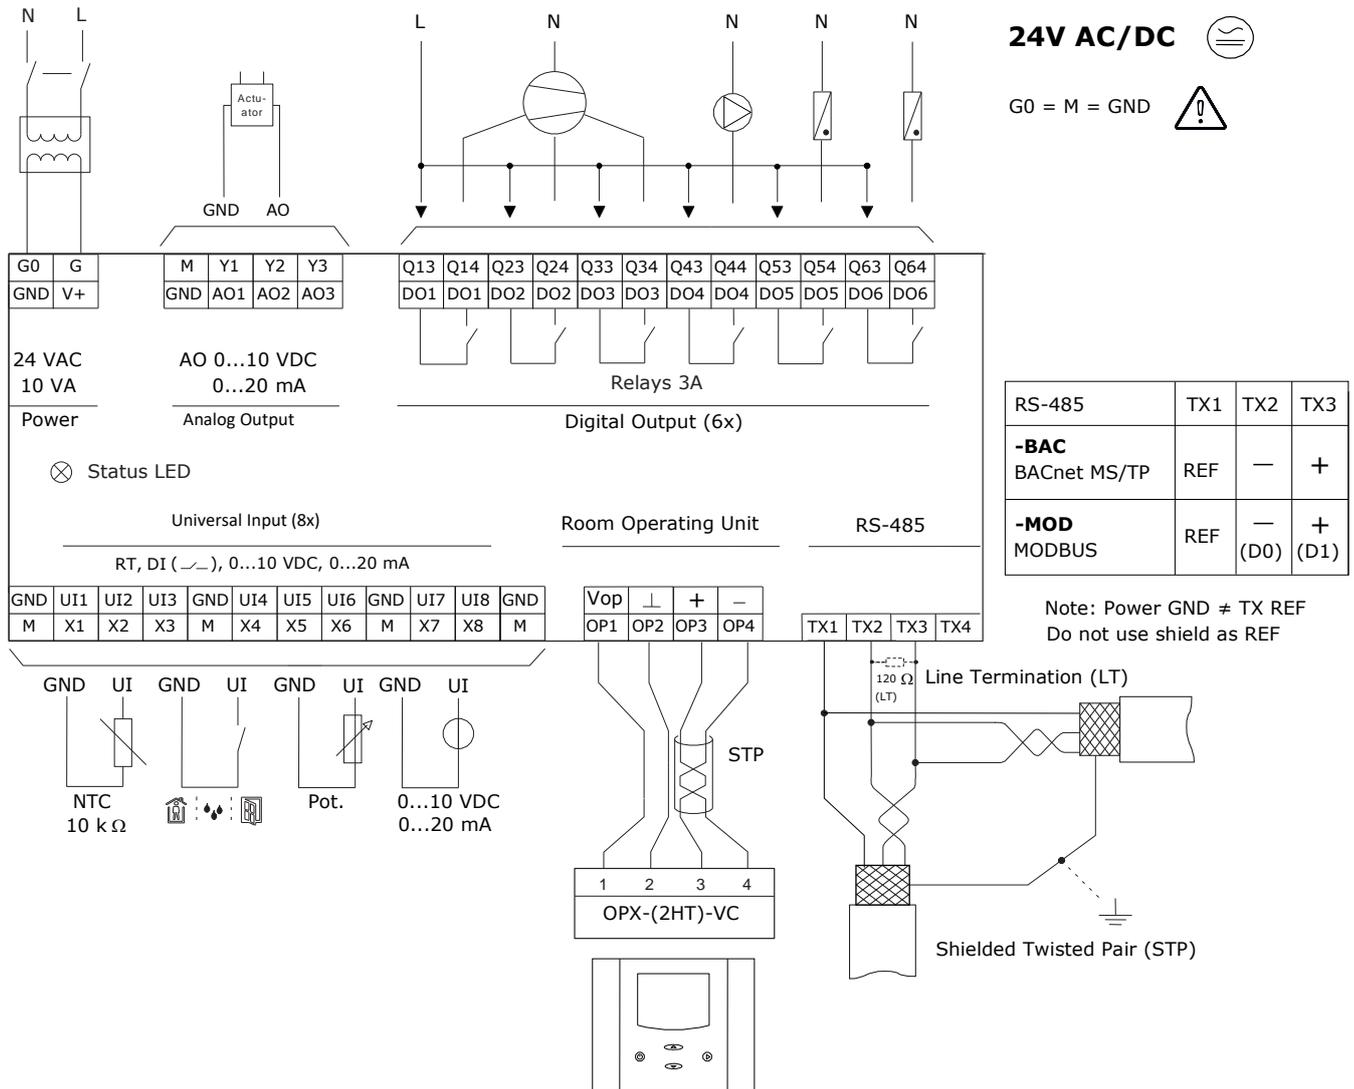

**Configuration Jumpers**

The inputs and outputs are configured with jumpers. Jumpers are located underneath the controller.

**AO: Selection of analog output type**

Left position:  
 voltage output (0... 10 V)  
*factory default*

Right position:  
 current output (0... 20 mA)




**UI: Selection of universal input type**

Left position:  
 voltage output (0... 10 V)  
*factory default*

Middle position: current input (0... 20 mA)

Right position: RT or dry contact

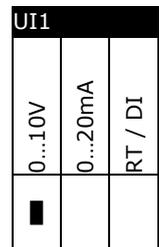

**LED-indicators**

A status LED is located on the upper left side of the controller housing. During normal operation the LED blinks briefly once every 5 seconds. If there is an alarm or fault condition it will blink every second.

**Installation**

See installation sheet no:

- TCX2-40863 70-000599 ( [www.vectorcontrols.com](http://www.vectorcontrols.com) )

## X2 Functional Scope

The controller has the following X2 functions and elements:

Group	Modules	QTY	Description
UP			User and display parameters
UI	01U to 08U	8	Universal inputs, selectable with jumper: RT/DI, mA, VDC
	09U to 12U	4	Virtual inputs for operation terminals, bus modules or special functions
AL	1AL to 8AL	8	Alarm conditions
LP	1L to 4L	4	Control loops
Ao	1A to 3A	3	Analog outputs, selectable with jumper: mA, VDC
FAN	1F to 2F	2	Fan or lead lag modules, 1 to 3 fan speeds, up to 3 switching lead-lag stages each
do	1d to 6d	6	Binary outputs with a normally open (NO) relays contact
FU	1FU	1	<b>Remote Enable:</b> Activation of the controller based on signal and alarm conditions
	2FU	1	<b>Change Operation Mode:</b> Switching occupied and unoccupied with control signals
	3FU	1	<b>Heat/Cool Change:</b> Switching heating and cooling based on a control signal
	4FU	1	<b>Setpoint Compensation:</b> Summer/winter compensation of setpoint
	5FU	1	<b>Economizer</b> (free heating or cooling due to the condition of outside and room air)
Co			Communication (if a communication module is available)
COPY			Copying complete parameter sets between run, default and external memory with up to 4 memory locations (AEC-PM1)
RTC		1	Real time clock module with 48-hour power back up (keeps clock running during power failure)
PRO	Pr01 to Pr12	12	Time schedule programs for 7 days or annual switching events

### Operation manual and configuration

This controller uses the latest generation X2 operating system. Detailed operating instructions for all devices equipped with this operating system can be downloaded here:

<http://www.vectorcontrols.com/products/x2>

Also available are programming instructions for technicians and an application database.

**The device can be fully configured using EasySet.**

**EasySet may be downloaded free of charge from [www.vectorcontrols.com](http://www.vectorcontrols.com).**

**Efficient use of energy -  
for a better future**

**Quality - Innovation - Partnership  
Vector Controls GmbH**

Poststrasse 20, CH-8620 Wetzikon, Schweiz  
Tel: +41 41 740 60 50 Fax: +41 41 740 60 51  
info@vectorcontrols.com  
www.vectorcontrols.com

